



Instant Pot IP-DUO80 V2 Float Valve Replacement

How to replace the float valve on the Instant Pot IP-DUO80 V2.

Written By: Kayla Meacham



INTRODUCTION

How to replace the float valve on the Instant Pot IP-DUO. This procedure and part is the same for the following models: IP-DUO50, IP-DUO60, and the IP-DUO80.



PARTS:

- [Float Valve](#) (1)

Step 1 — Float Valve



- Remove the lid by twisting it counter-clockwise.

Step 2



- Place the lid upside down on a stable surface.

Step 3



- Remove the white rubber cover from the red float valve by pulling it off gently.
- ⓘ The red float valve will fall once the white cover is removed.

To reassemble your device, follow these instructions in reverse order.