



JBL Pulse Button Board Replacement

A guide on how to breakdown the button panel in order to replace the button board.

Written By: Maxwell Busenbarrick



INTRODUCTION

Often times when buttons have become unresponsive, a faulty button board may be the cause. In this guide we will show you how to access and replace the button board.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Button Board



- Use a plastic opening tool to pry around the edges of the circular rubber panel.


Step 2



- Once the edges are loose, pull off the rubber button panel completely.

 New adhesive will have to be applied when reassembling.

Step 3

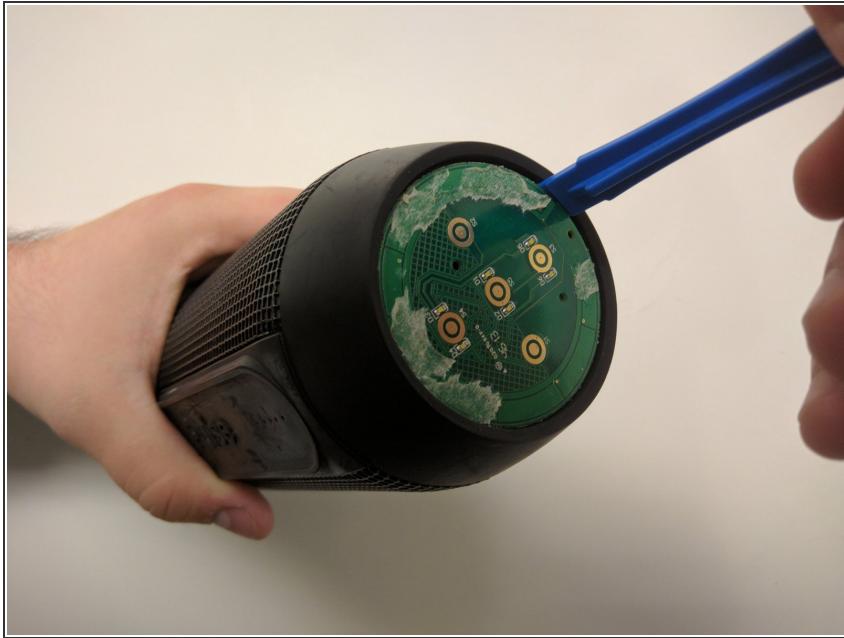

- Use your plastic opening tool to pry the button board loose by lifting the edges.


Step 4



- Lift the button board, exposing the attached cable.

 New adhesive will have to be applied when reassembling.

Step 5

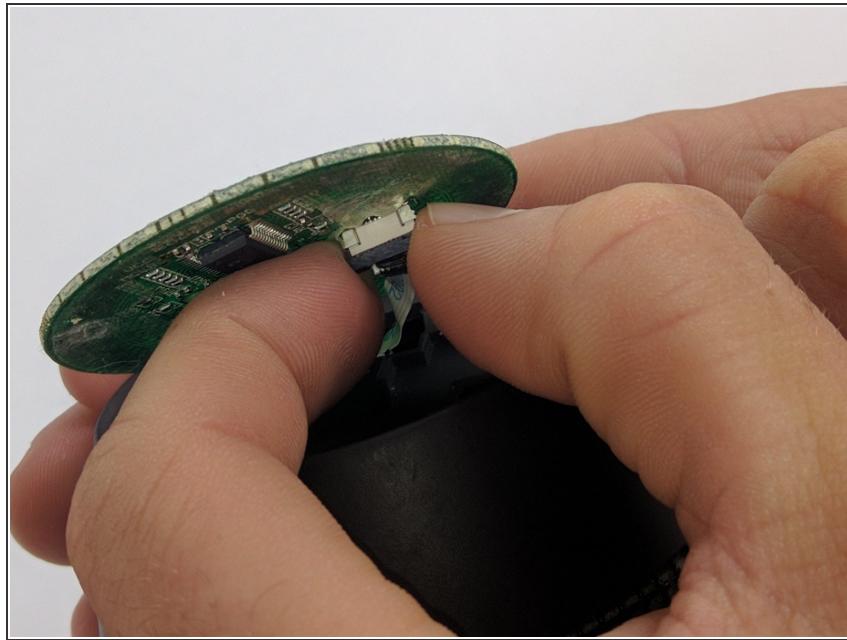

- Pull black piece on top of socket away from board to loosen, then detach the cable.

To reassemble your device, follow these instructions in reverse order.