



JBL Xtreme Bass Radiator Replacement

This guide will show you how to remove a bass radiator from a JBL Xtreme Speaker.

Written By: Benny Huynh



INTRODUCTION

This guide will show you how to remove a bass radiator from a JBL Xtreme Speaker. Removing these radiators is required if they become damaged and will also be necessary to access certain components inside the speaker.

TOOLS:

- Metal Spudger (1)
- Phillips #1 Screwdriver (1)
- Magnetic Project Mat (1)

Step 1 — Cover



- Locate the seams next to the 'feet' on the bottom side of the device.

Step 2



- Use the metal spudger to gently pry and lift the edge of the seam. The cover is held in place with plastic snaps that will make a popping noise when disengaged.

Step 3



- Gently pull back the edges of the case rotating along the hinge opposite the opening seam illustrated in the second photo. Plastic snaps hold the cover in place.

Step 4 — Bass Radiator



- Unscrew the six 9.75mm Phillips head screws holding the bass radiator in place.

(i) Three of the five outer screws are indicated in the first image and the sixth inner screw is indicated in the second image.

Step 5



- Once the screws have been removed, the bass radiator will easily lift free.
- (i)* Both radiators are identical. Repeat the above steps on the opposite radiator if necessary.

To reassemble your device, follow these instructions in reverse order.