


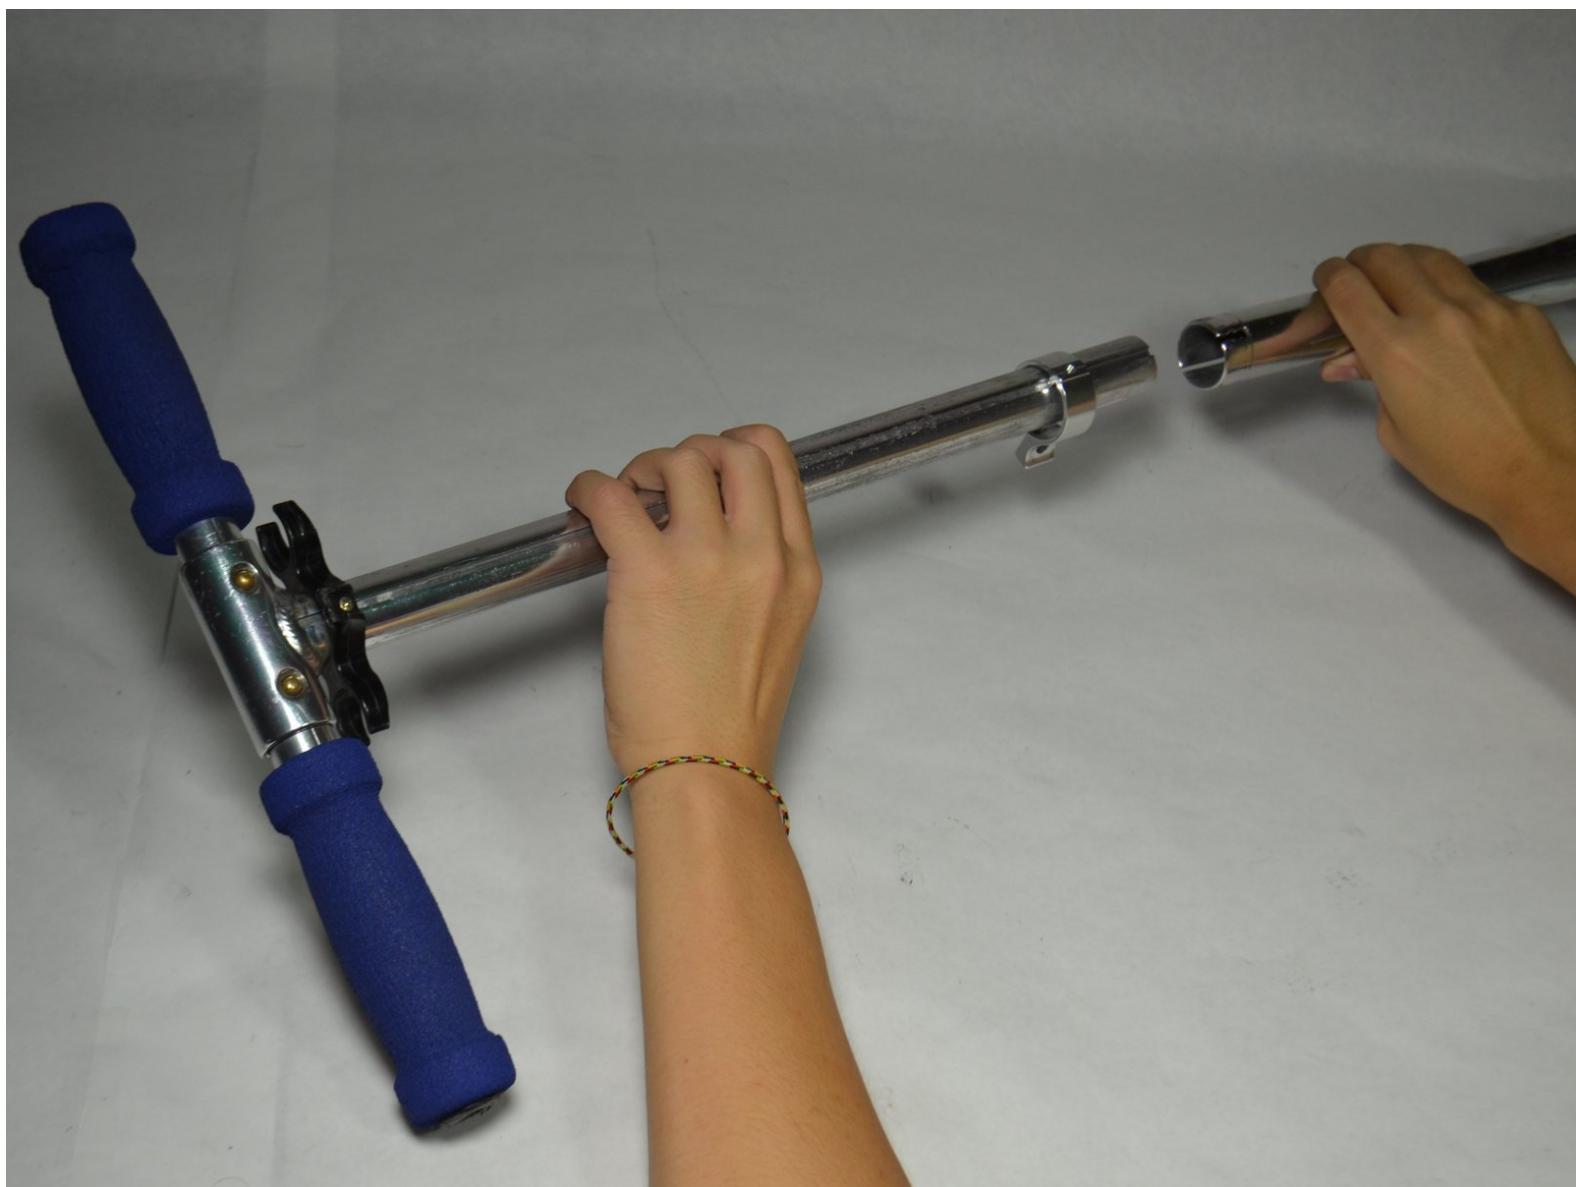

JD Razor 2000 T-Bar Replacement

The T-Bar connects the vertical of the scooter with the horizontal handlebars. The quick-release latch keeps the T-Bar from moving.

Written By: Shane




INTRODUCTION

The T-Bar allows you to steer and control your scooter. This guide will show the replacement of a T-Bar.

TOOLS:

- [T25 Torx Screwdriver](#) (1)
- [Macro Bit Set](#) (1)

Step 1 — Unlocking the Lever

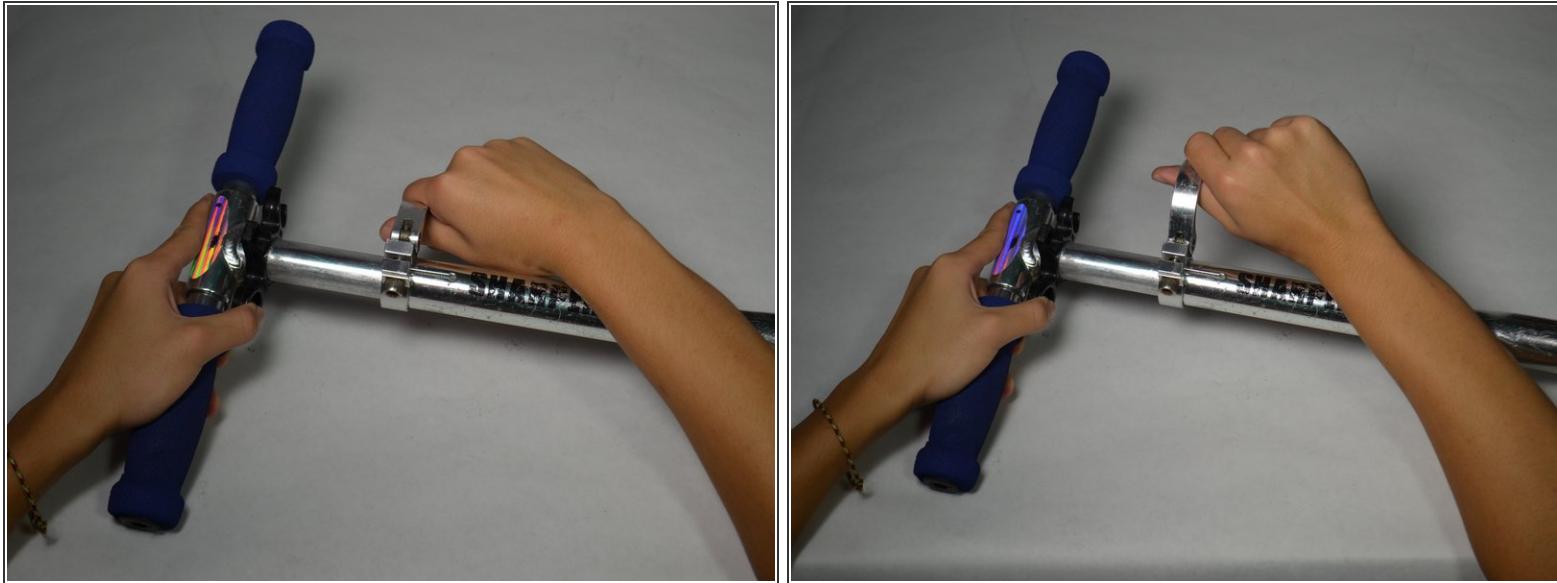

- Unlock the quick-release lever by turning the lever from a tightened position.

Step 2 — Loosening the Screw




- Use a 7/32" Allen Wrench or T25 Screwdriver to loosen the screw shown.
- Be sure to fasten the opposite side of the screw before unscrewing.
- ★ Remove the screw and note the order of the parts for reassembly.

Step 3 — Removing the Latch



- Turn the quick-release lever over to reveal an 8mm screw.
- Use the Phillips #2 screw driver to remove the screw.
- After removing the screw, the circular latch will be detachable.

Step 4 — Remove the T-Bar

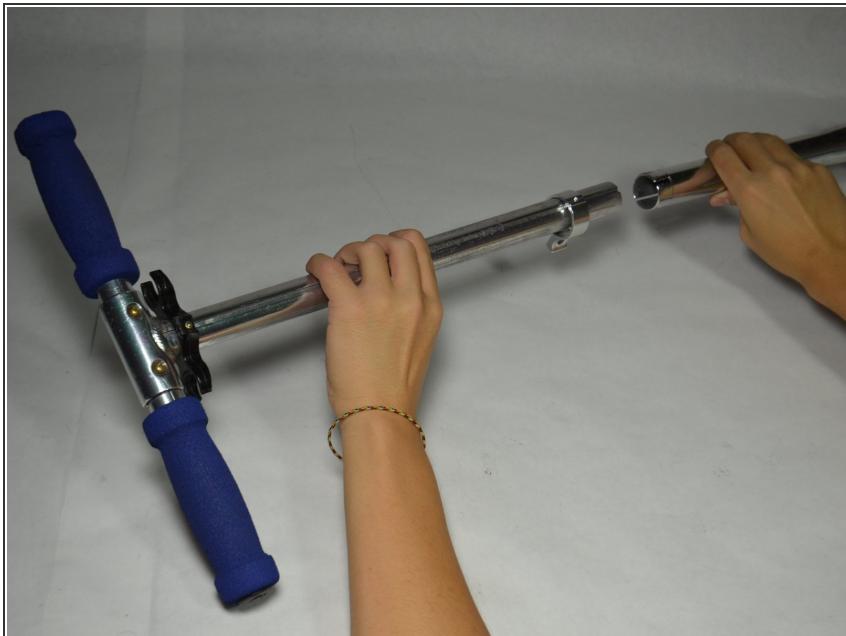

- After disassembling the Quick-Release Lever, the T-Bar is removable

To reassemble your device, follow these instructions in reverse order.