




JVC GR-D93U Lens Replacement

This guide will show you how to take apart and replace the lens of the camcorder.

Written By: James

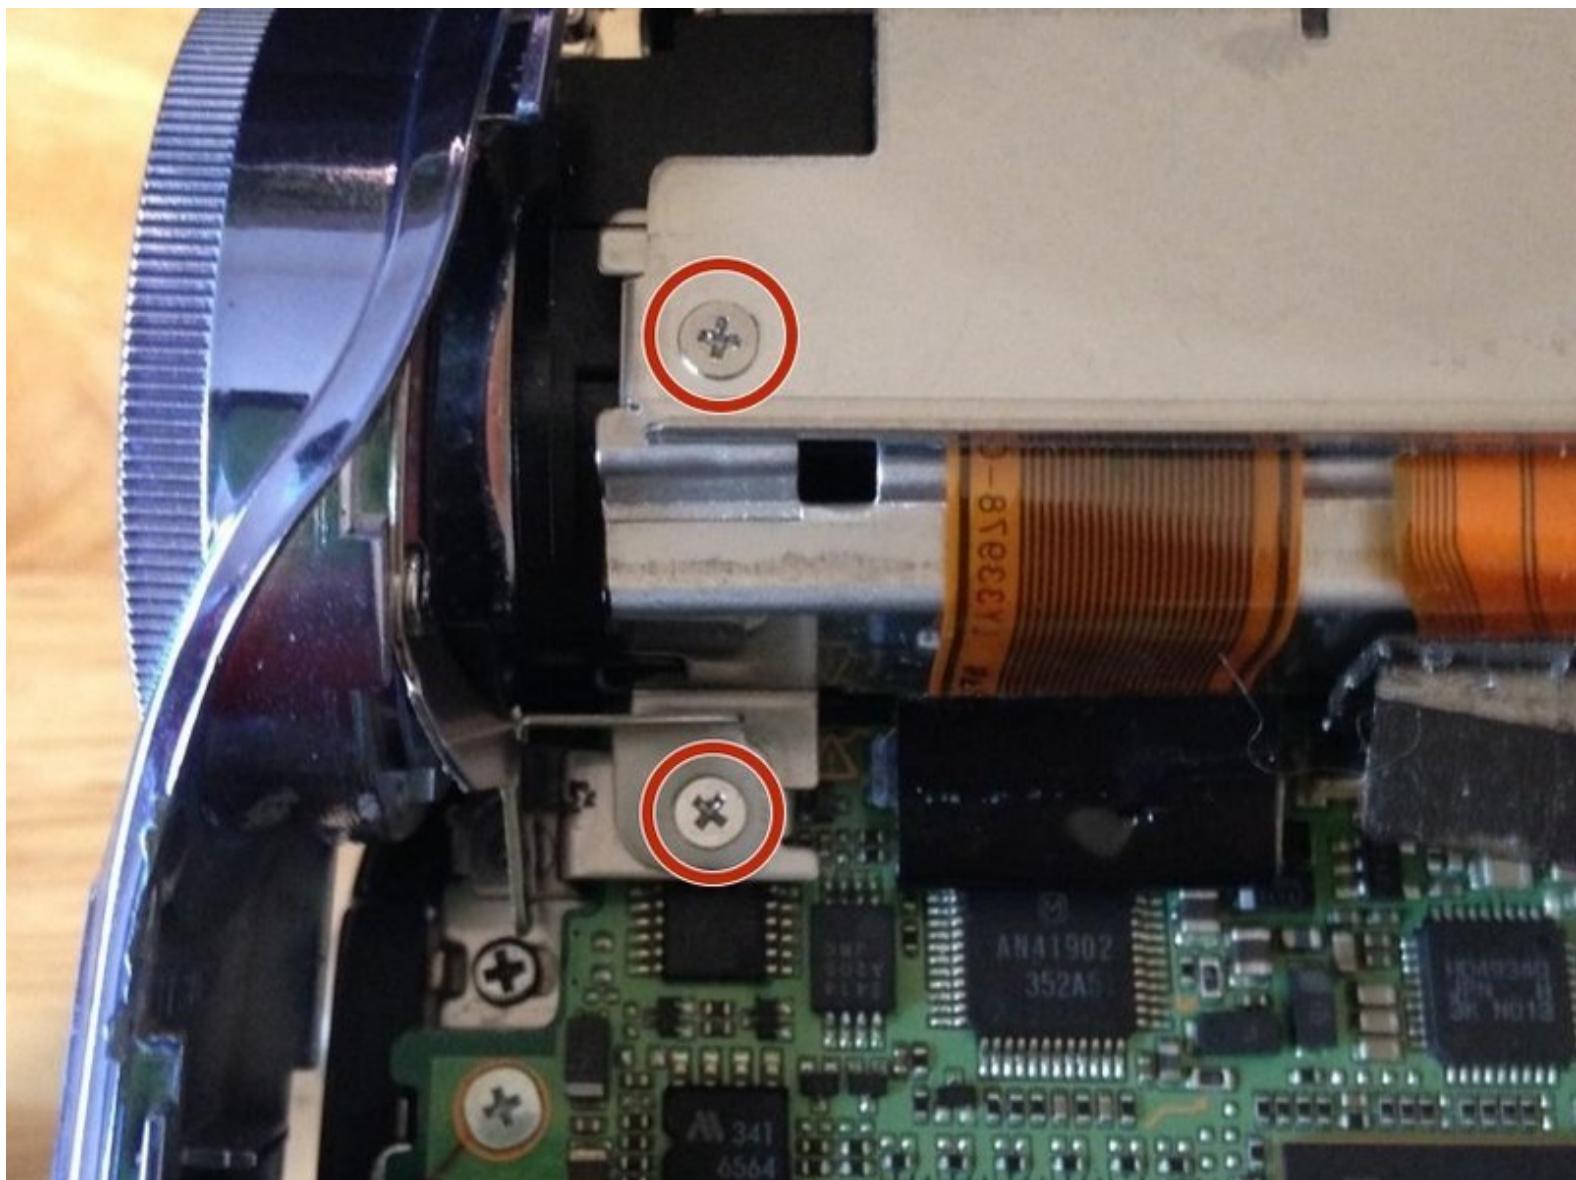

 **TOOLS:**


- [Phillips #0 Screwdriver \(1\)](#)
- [Metal Spudger \(1\)](#)

Step 1 — Eye Piece



- Unscrew two 3mm Phillips #0 screw from the bottom of the camera to remove blue plastic casing.

Step 2

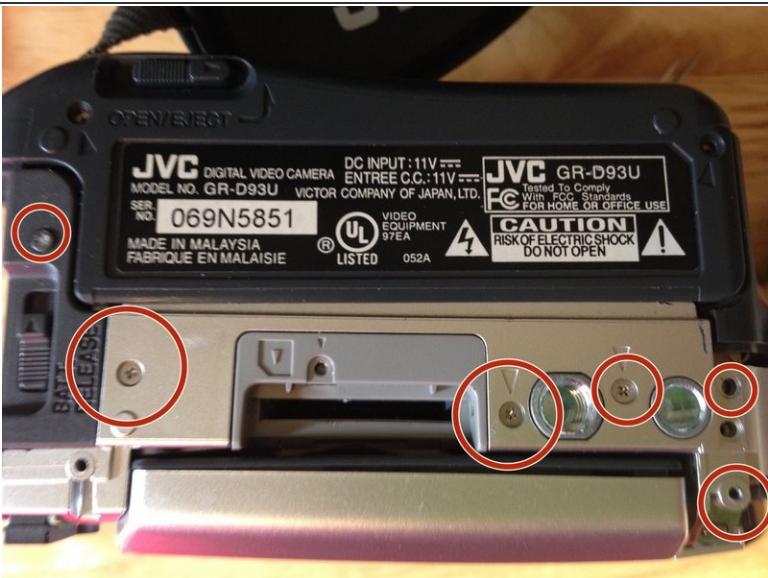


- Unscrew two 3mm Phillips #0 screws. Then remove 6 3mm Philips #0 screws from the bottom of the camera.

Step 3



- Unscrew 3mm Phillips #0 screws from the batter port under the eye piece.

Step 4

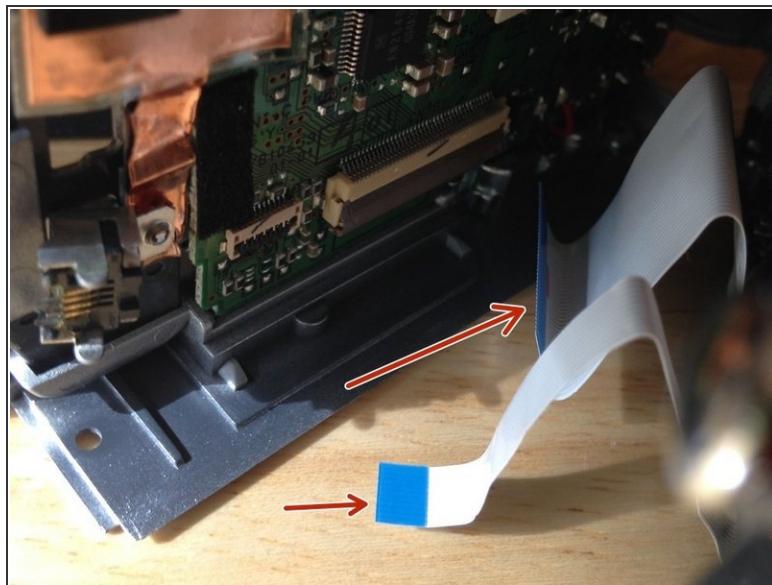


- Now the camera can be split into two pieces. Be careful when removing the two sides and remove the cables connecting the two halves. There are also cables that need to be disconnected from the battery pack section.

Step 5




- Unscrew two 3mm Phillips #0 screws from around the eye piece. Then flip the camera over and unscrew 3mm Phillips #0 screw. Then unscrew 3mm Phillips #0 screw from under the eye piece.

Step 6

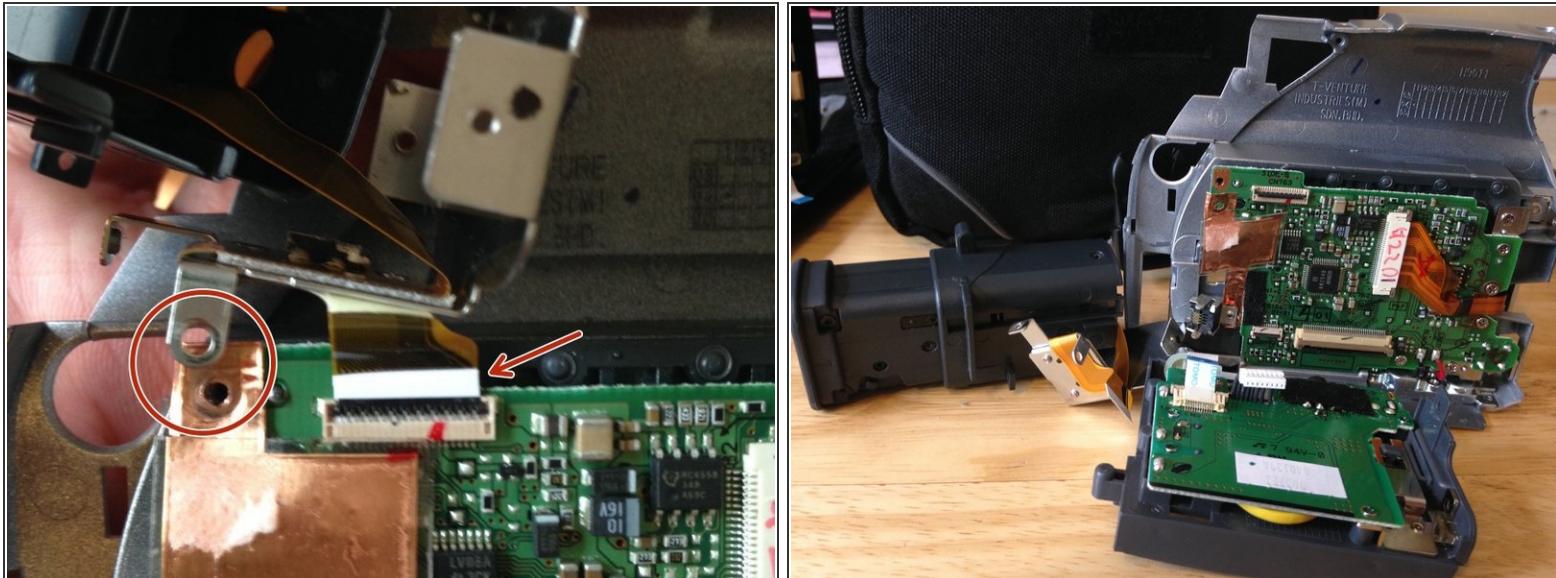


- Unscrew 3mm Phillips #0 screw and disconnect cable. This will disconnect the eye piece from the camera.

Step 7 — Lens

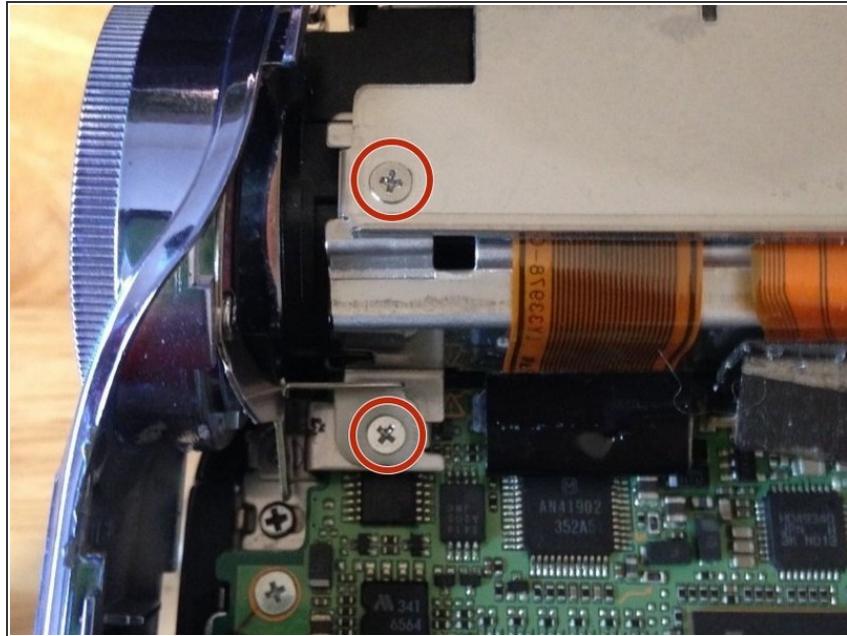


- Remove the two 3mm screws using the PH0 screwdriver.

Step 8

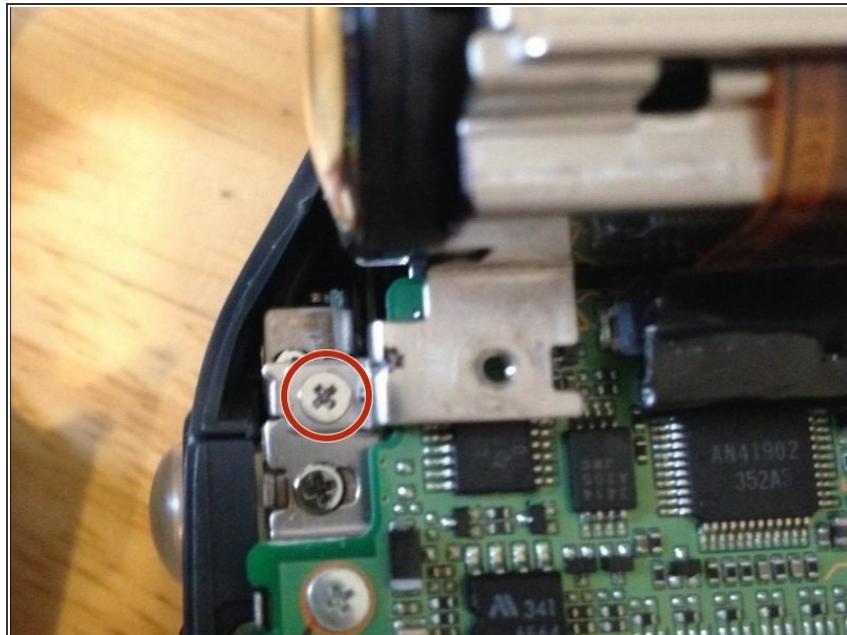


- Remove the blue dust cover using the metal spudger. Unscrew the 3mm screw using the PH0 screwdriver.

Step 9

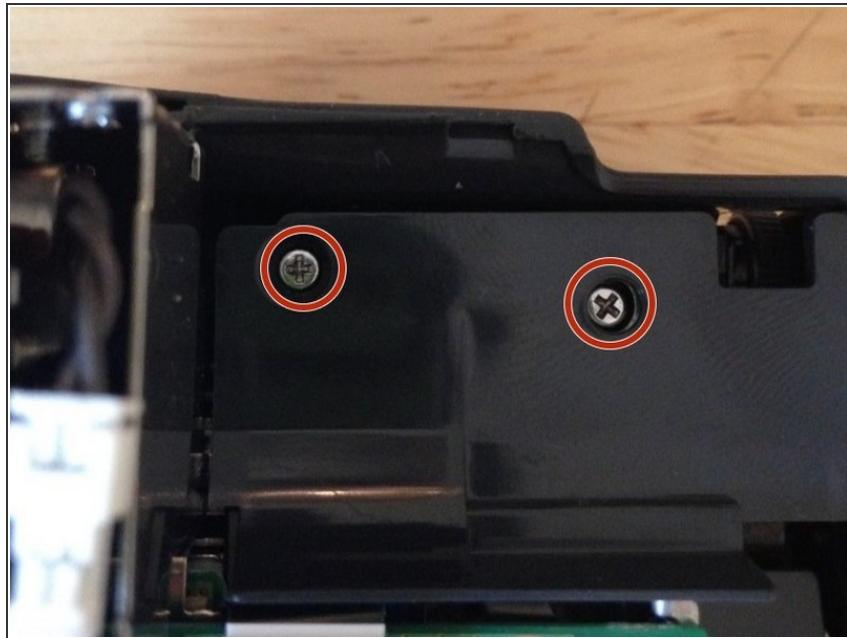


- Remove the two 5mm screws using the PH0 screw driver. Use the metal spudger to remove plastic casing.

Step 10

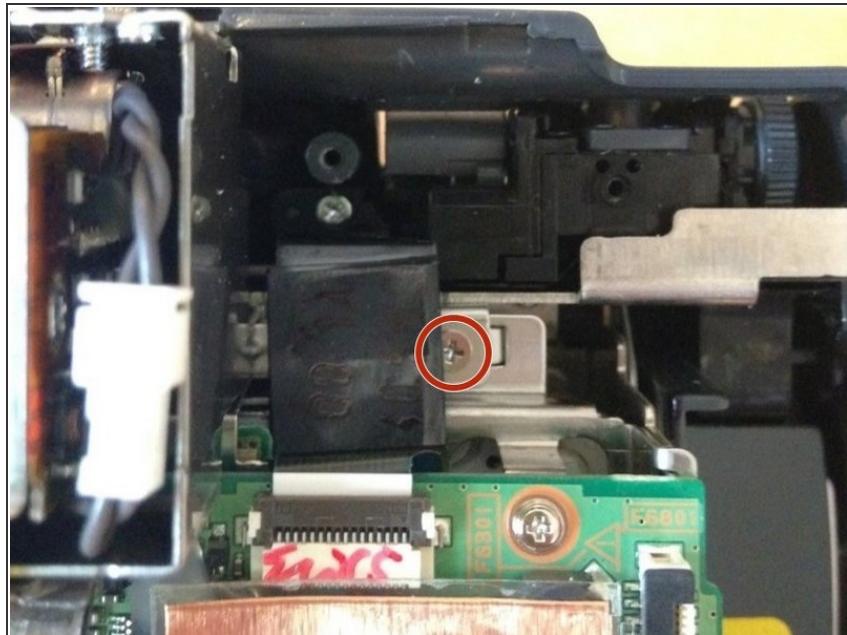


- Remove the 3mm screw using the metal spudger.

Step 11

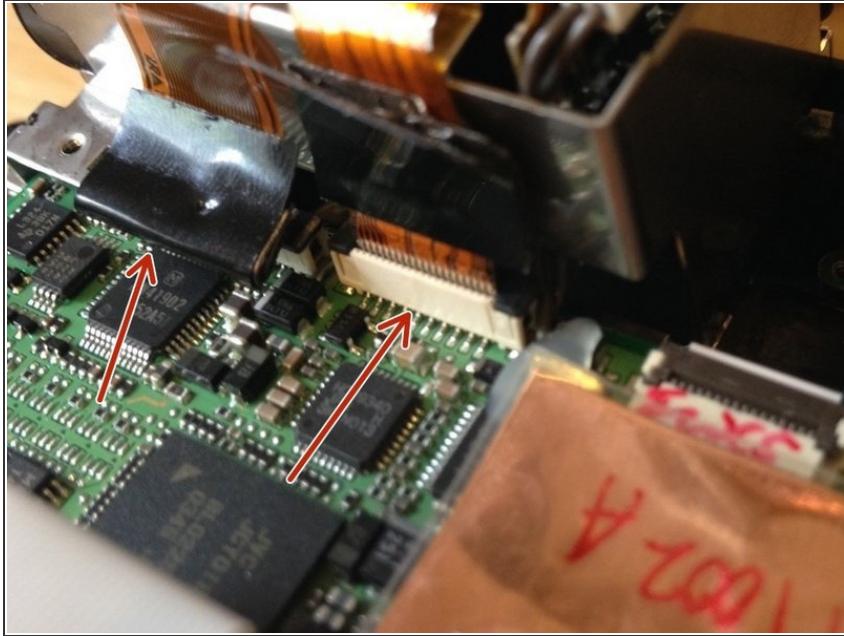

- Remove the two logic strips by lifting the plastic clips using the metal spudger.

Step 12

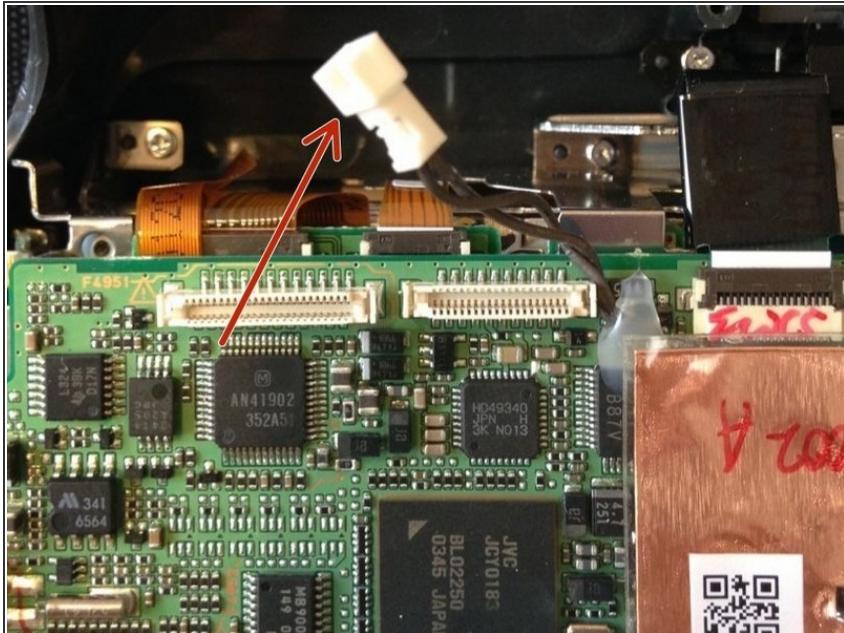

- Disconnect the power from the lens.

To reassemble your device, follow these instructions in reverse order.