



JVC XL-333 Power Button Replacement

Replace the power button of your JVC XL-333 CD player.

Written By: Romenick Casabar



INTRODUCTION

Use this guide to replace the power button in the JVC XL-333 compact disc player.

TOOLS:

- [Heavy-Duty Spudger \(1\)](#)
- [Tweezers \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)

Step 1 — The Power Button



- Using your Phillips Head Screwdriver, remove the four screws with the red markup.
- Then, remove the three orange screws using your screwdriver.

Step 2



- Remove the two side screws on both sides of your CD Player.

Step 3




- Remove the top of the CD Player by holding each side of the roof then sliding it away from you in an upward position.

Step 4




- We will now remove the Disc Reader from as this is above of the power button.
- Push out these tabs on both sides of the CD Player

Step 5

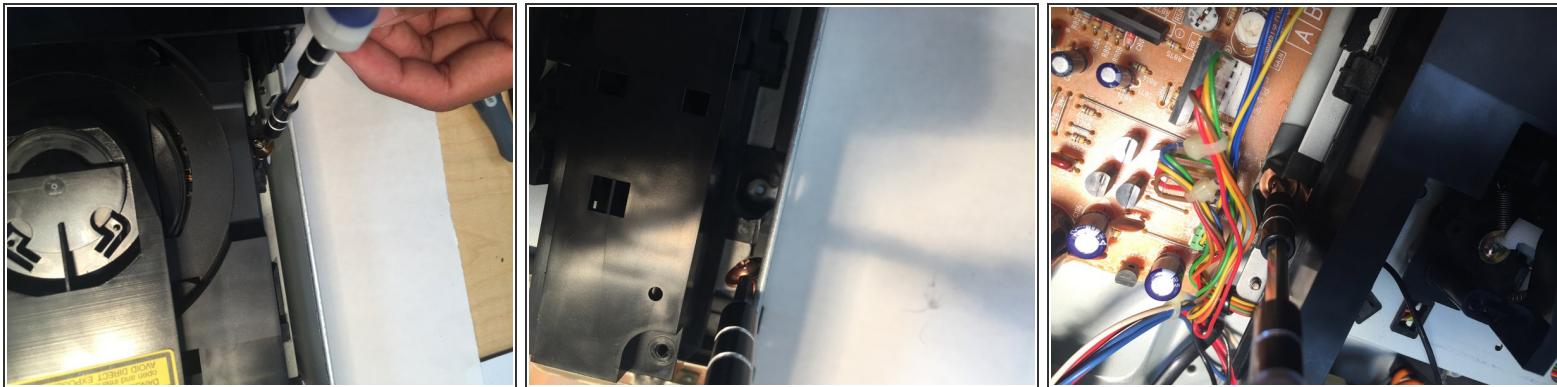


- To remove the actual reader, there are four copper screws on the corners
- Remove them with your Phillips Head Screwdriver and gently pull it up.

Step 6

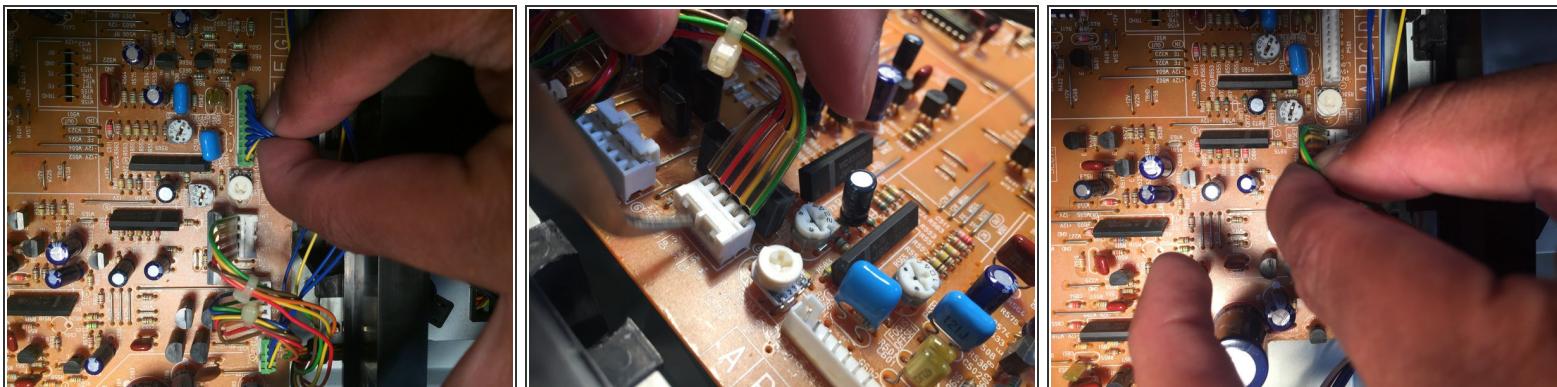


- Connector Cables: There are two of each kind to remove on the motherboard. To remove the green ones, gently pull up.
- To remove the white ones, use your spudger or tweezers to pull up on the opposite side the cables are connected. It may require some force

Step 7

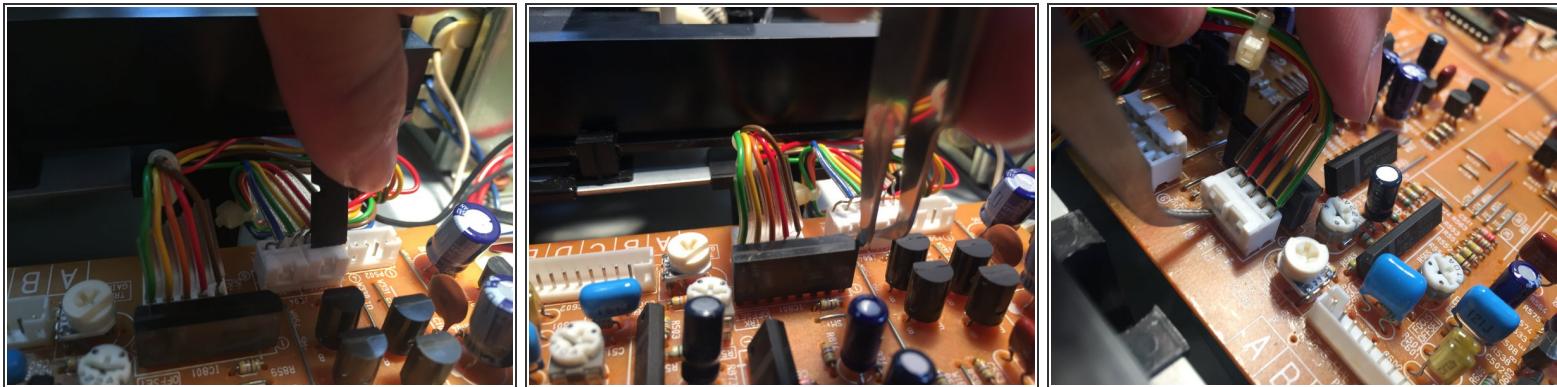


- For more guidance on how to remove the connector cables!
- In an upward motion, move your spudger or tweezer to release the cables.

Step 8

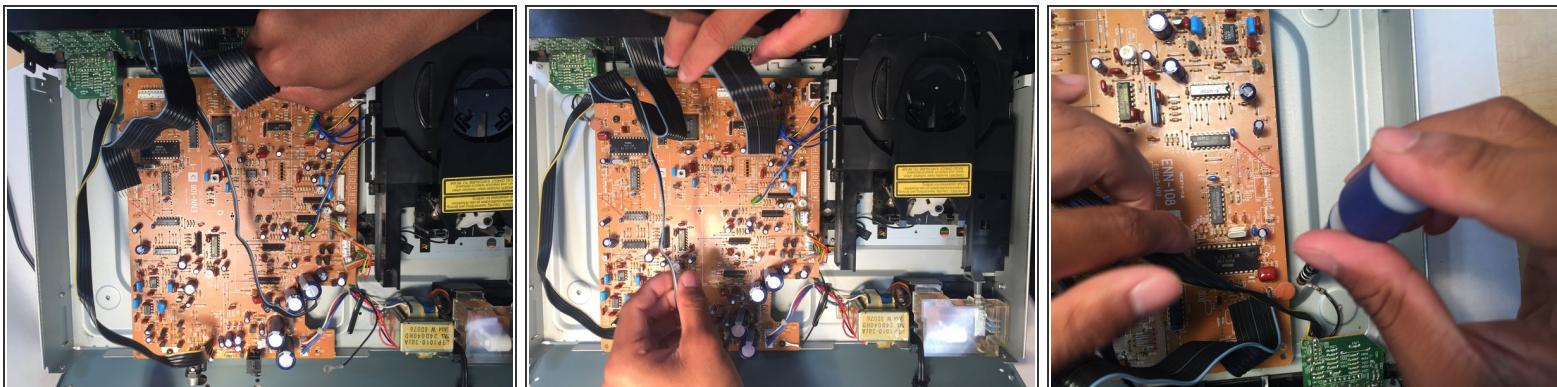

- Remove the rest of the connector cables with either your spudger or tweezers.
- Remove the screw that connects a wire to the motherboard as well.

Step 9

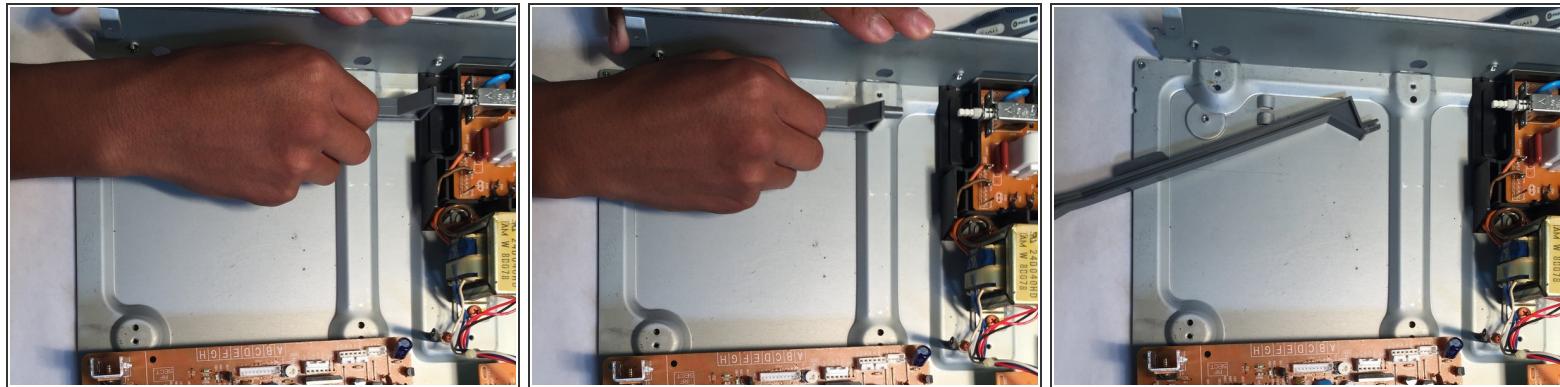

- Find the power button trigger on the left side of the CD Player. It should be gray.
- Push it a couple times to make sure it works. If not hold it 3/4 of the way and pull with some force.
- Replace with a new one.

To reassemble your device, follow these instructions in reverse order.