




Jam Voice Speaker Replacement

Replacement of the Jam Voice speaker.

Written By: Alexander Buck

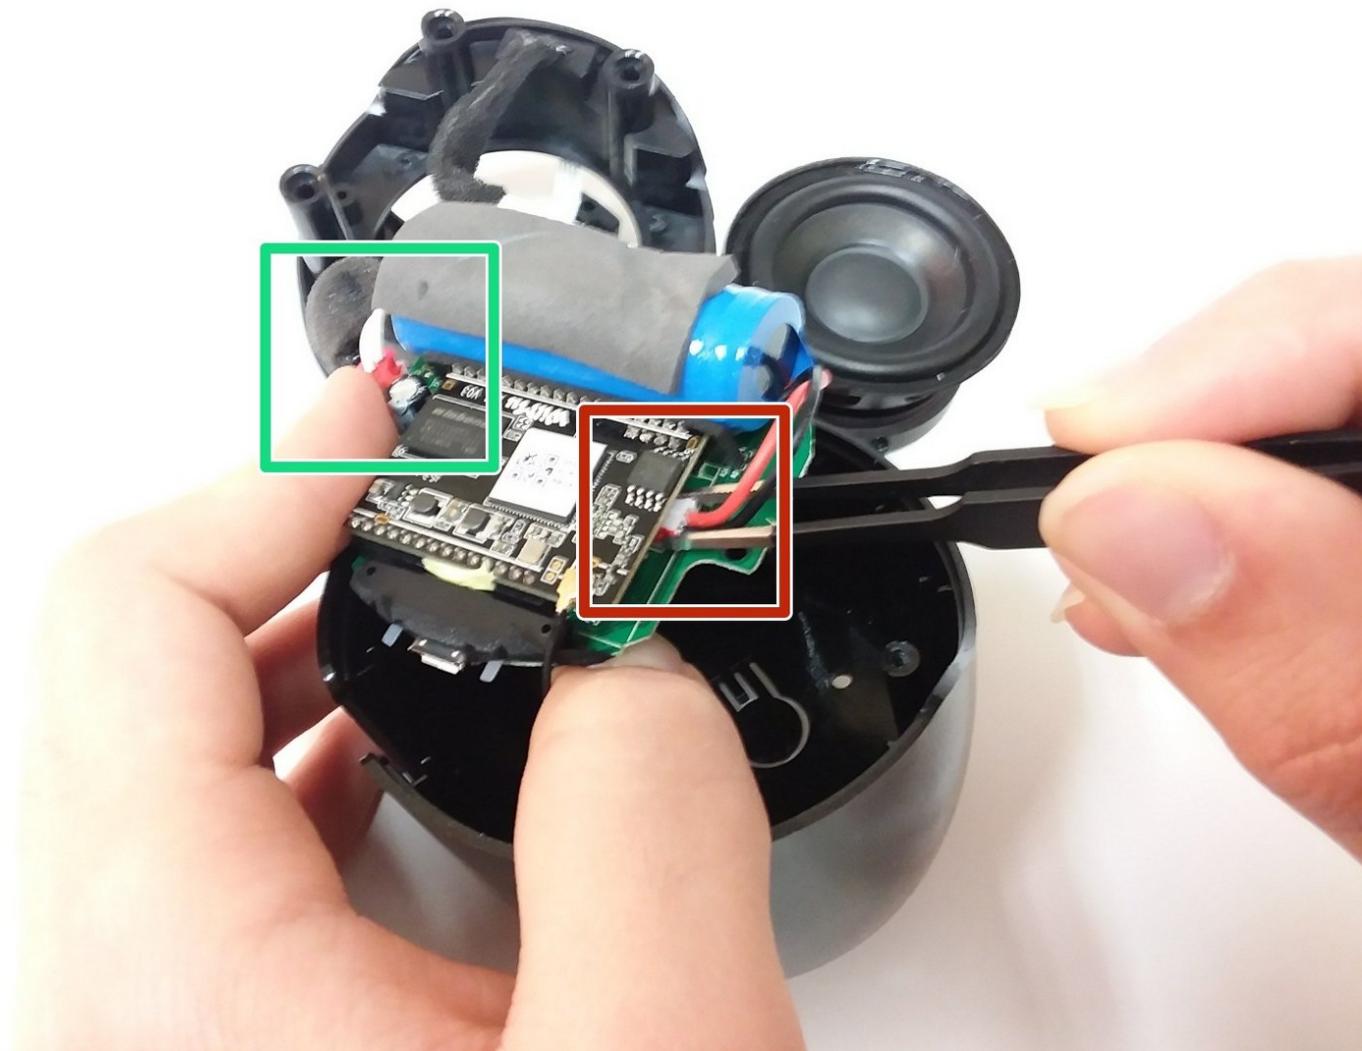


INTRODUCTION

A replacement guide for the speaker located inside of the Jam Voice. The speaker will be accessed by dismantling the device, disconnecting the speaker and connecting a new speaker.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [64 Bit Driver Kit](#) (1)
- [Tweezers](#) (1)
- [Halberd Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)


Step 1 — Hard Mesh Cover

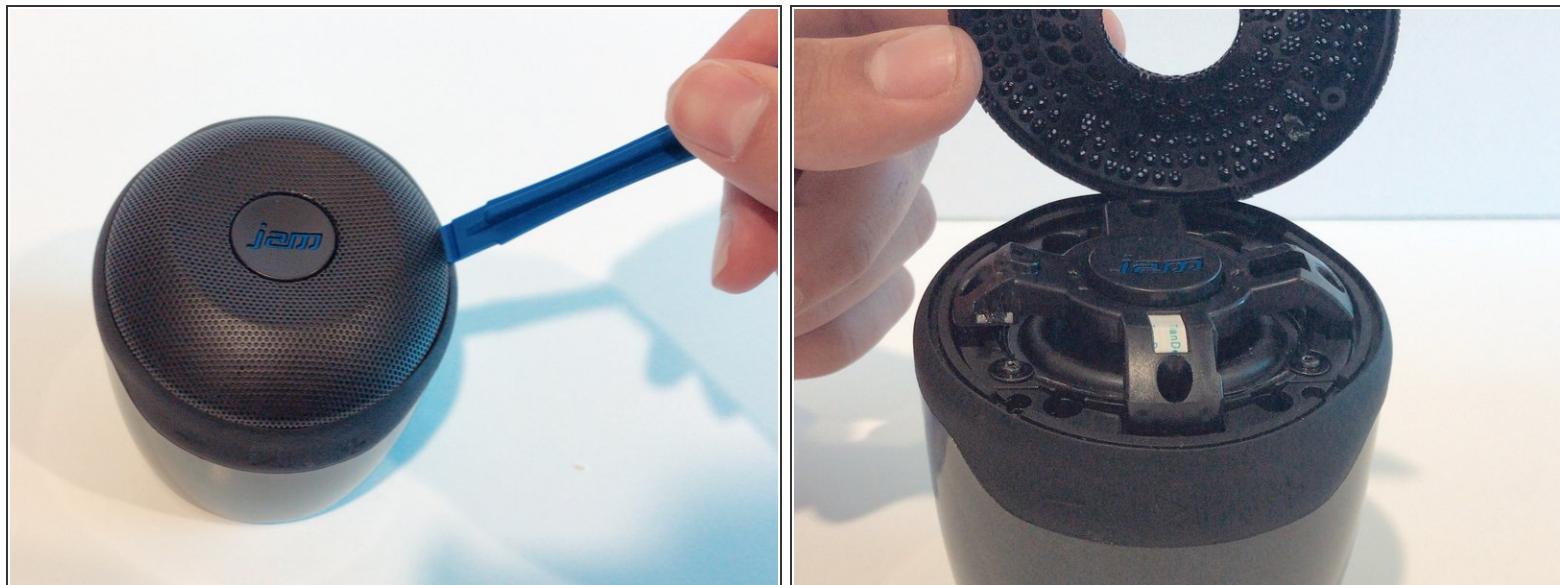

- Insert the plastic opening tool underneath the mesh top.
- Pry the cover open.

 To reattach the cover, simply align the round posts on the bottom of the cover back into the holes of the Jam Voice.

Step 2 — Motherboard

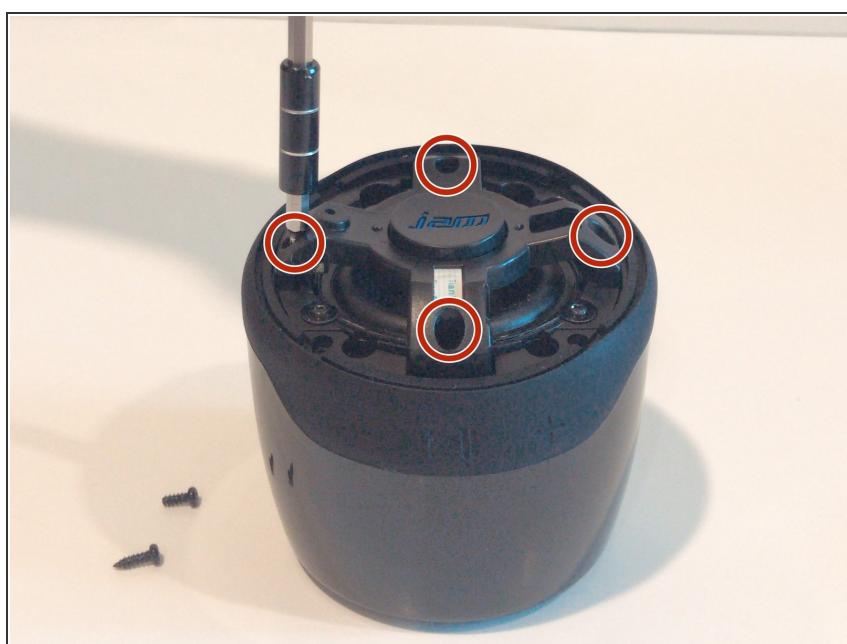

- Remove four 7mm Phillips head screws from the plastic cover.

Step 3




- Remove four 5mm Phillips head screws holding down the speaker in place.
- Remove two 6mm Phillips head screws holding down the plastic casing.

Step 4




- Once all six screws are removed, use a halberd spudger or similar tool to lift up the speaker.
- Pull the speaker up and out.

Step 5

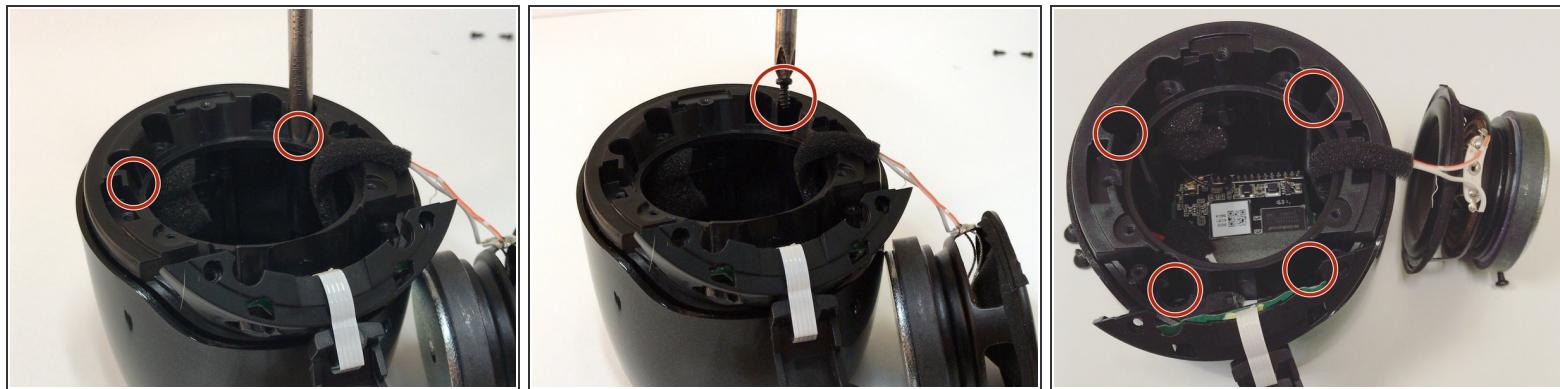

- Remove four 7mm Phillips head screws to expose motherboard.

Step 6

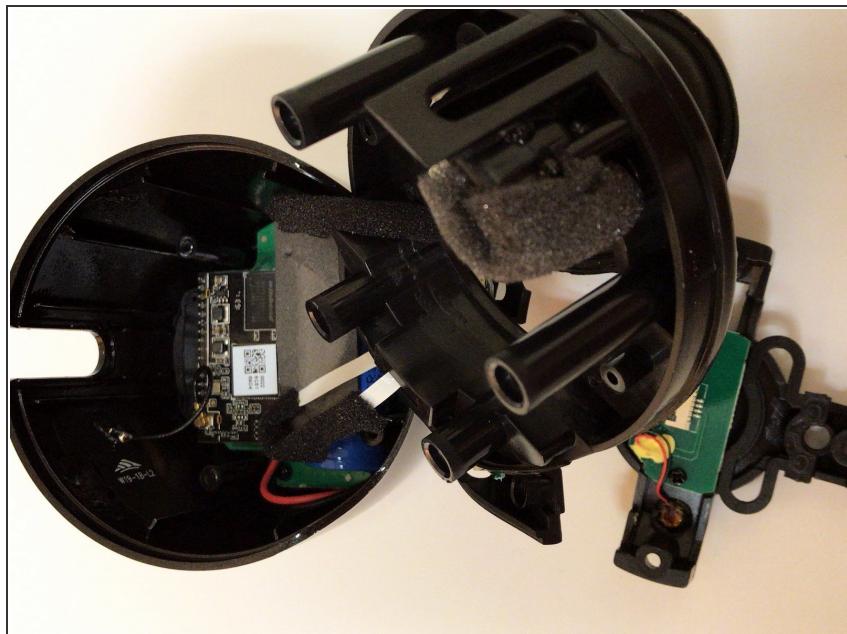

- After removing all of the screws from the plastic cover, remove it by pulling up and out.


⚠ Be careful not to yank any of the wires.

Step 7



- Remove the three 5mm Phillips head screws that hold the motherboard in place.
- Once screws are removed, use two fingers to push motherboard out. Pressing the power and bluetooth buttons on the base of the speaker help.

Step 8 — Speaker

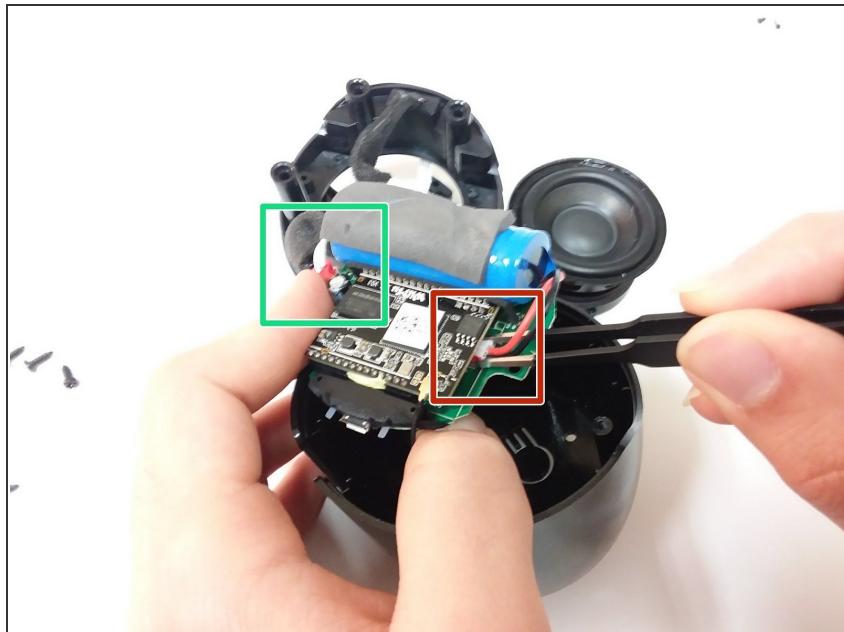

- Use tweezers to remove the speaker's wire from the motherboard at the connection point (Green), just as performed for the battery (Red).
- *i* The speaker's connection point is opposite the battery's connection point.

To reassemble your device, follow these instructions in reverse order.