



Jazz UltraTab C1059-HL Headphone Jack Replacement

This guide demonstrates how to replace a Jazz UltraTab C1059-HL headphone jack.

Written By: Tim Poe



INTRODUCTION

This guide will demonstrate how to effectively remove and replace the headphone jack. This replacement will take 15-20 minutes. However, if the guide is followed to the letter, the task will be accomplished with minimal damage to the device.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)

PARTS:


- [Jazz UltraTab C1059-HL Motherboard](#) (1)

Step 1 — Headphone Jack




- Use a Philips screwdriver to remove the four screws: two at the top and two at the bottom of the device.

Step 2

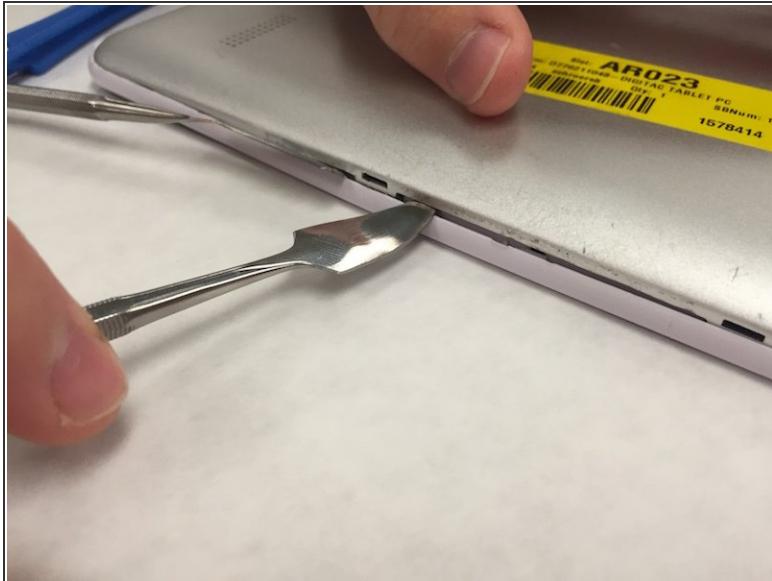



- Place the device screen down on the table and use a pry tool to remove the back panel.

Step 3

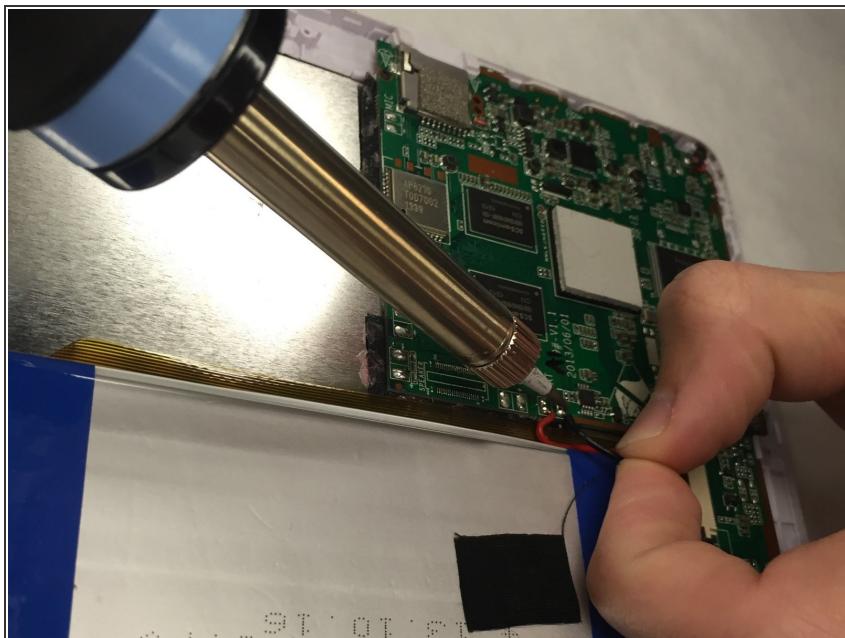


- For your safety, remove the battery.
- Using a solder iron, remove the wires connecting the battery to the motherboard.

Step 4

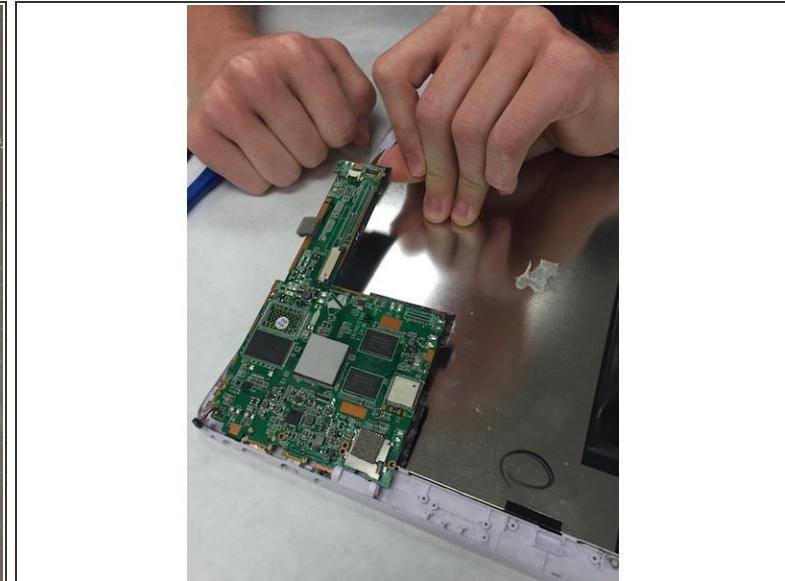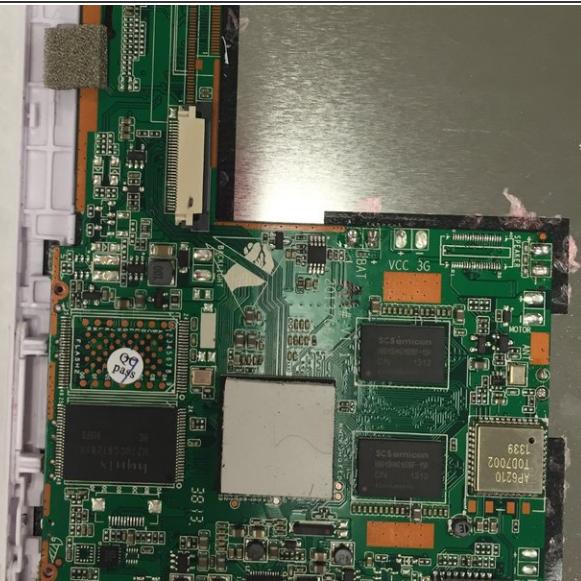

- Remove the screw attaching the motherboard to the back panel. Gently remove the motherboard.

Step 5

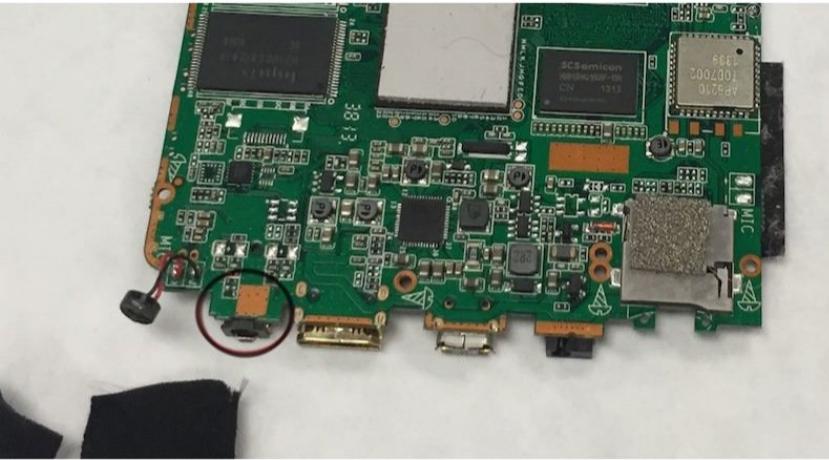

- The headphone jack is attached to the motherboard, so the whole thing must be replaced.
- With the new mother board, use these steps in reverse to reassemble the device.

To reassemble your device, follow these instructions in reverse order.