



# Jazz UltraTab C1059-HL Speaker Replacement

Written By: Tim Poe



## INTRODUCTION

This guide will guide the user to effectively remove and replace the speaker. This replacement will take around 15-20 minutes. However, if the guide is followed to the letter, the task will be accomplished with minimal damage to the device.



### TOOLS:


- [Metal Spudger Set](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Soldering Iron](#) (1)



### PARTS:

- [Replacement speaker](#) (1)

## Step 1 — Speaker

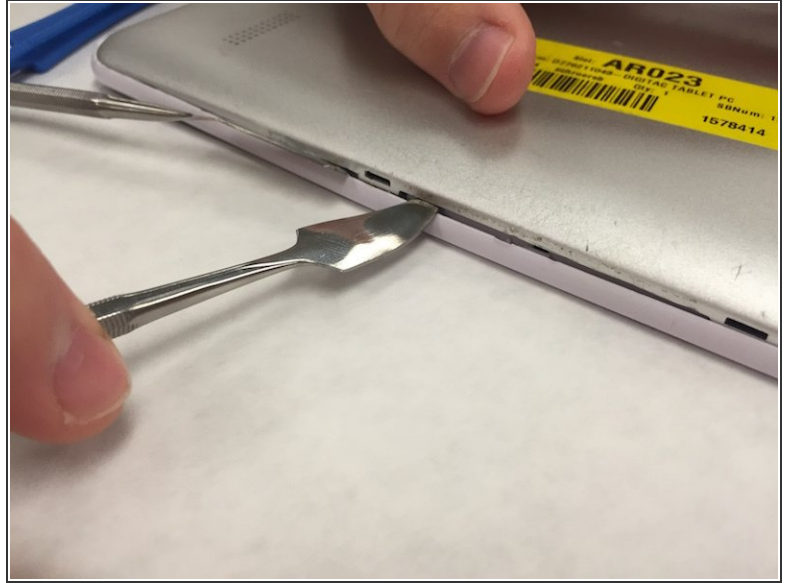


- Start by removing the back panel.
  - Remove the 4 screws holding the device together: two on the left side, and two on the right side.
  - Using a metal spudger, carefully pry open the case.
- i** With the screws gone, the case is held together with clips along the outside edge of the aluminum backplate.
- !** Undoing these clips can take a bit of force. Be cautious not to damage the plastic edge of the device.

## Step 2



- Place the device on the table with the screen-side down.


## Step 3

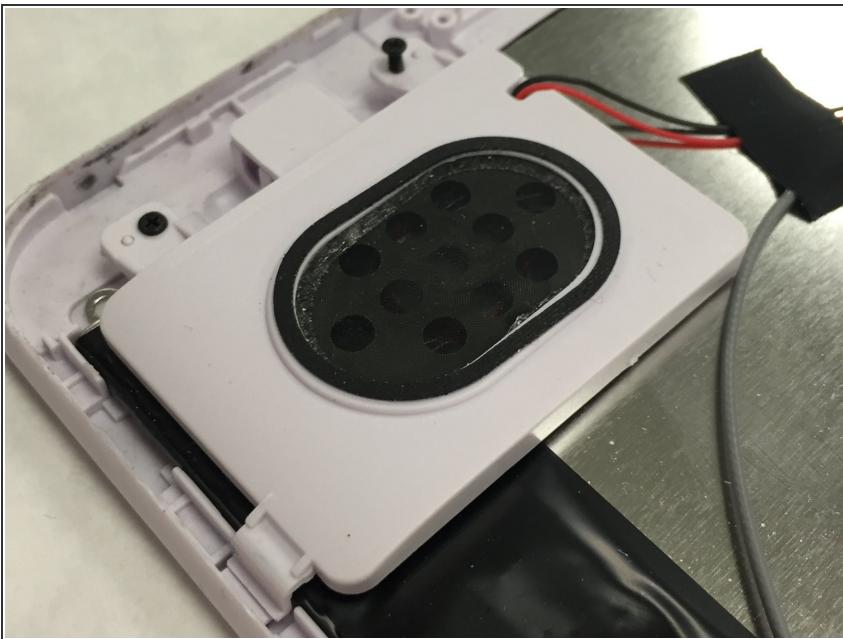

- This is the Speaker.
- Remove the two black screws.




## Step 4

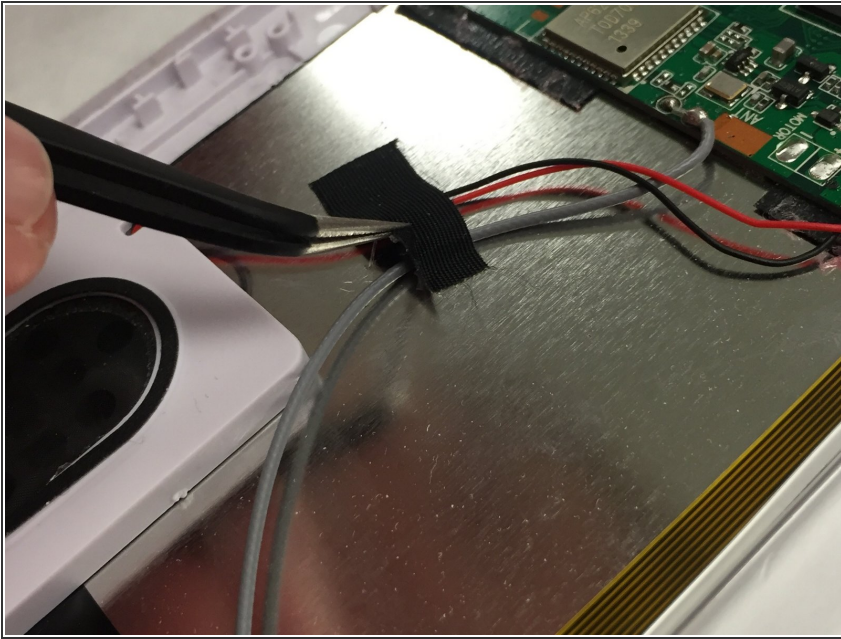


- Remove black tape from the wires.
- ⓘ *Keep this tape, you will need it for reassembly.*

## Step 5

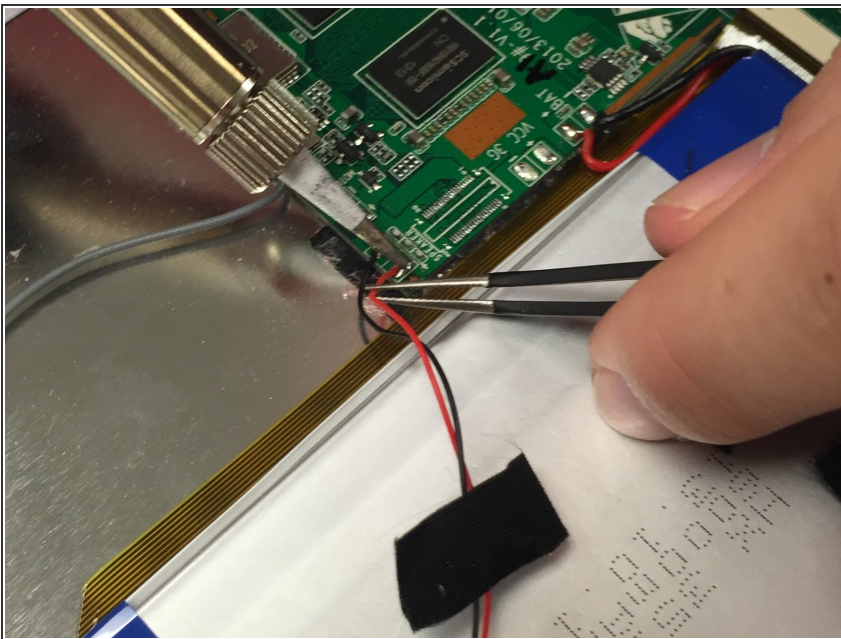

- Using a soldering iron, heat up the spot where the speaker wires connect to the mainboard.
- Remove Speaker wires when the solder liquifies.
- ★ *Remember to make note of where each wire is connected. When reinstalling the speaker, it is important that the wires are reattached to the same spot.*

## Step 6

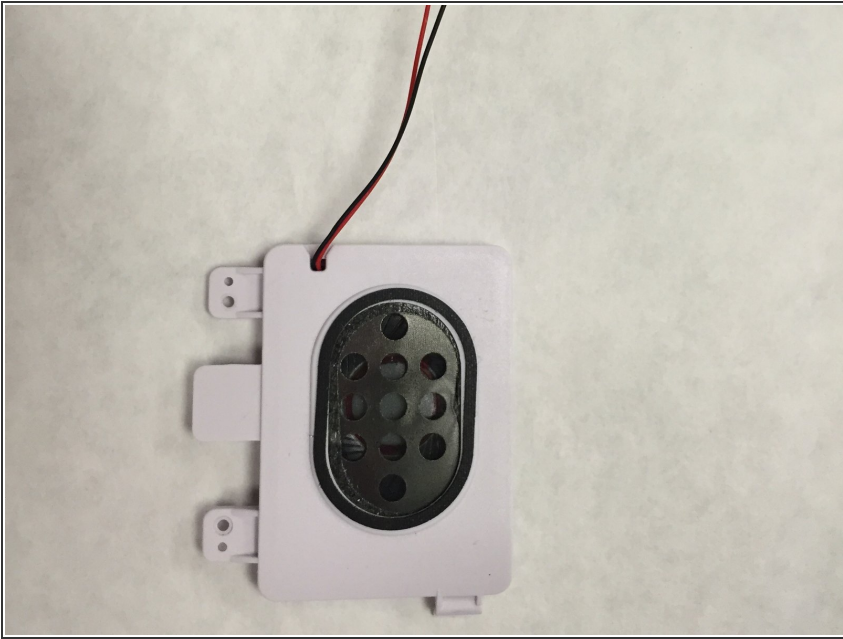

- Remove the speaker.
- Replace the speaker by following these steps in reverse.

To reassemble your device, follow these instructions in reverse order.