



# Jensen JTA-230 Speaker Replacement

The speakers on the record player are a key component on the device. This guide will give you the proper understanding and tools to completely replace the speaker.

Written By: John Roche

## INTRODUCTION

A speaker in an acoustic device that plays music out loud held connected inside a device. It is usually built in-place so disassembly will be involved.

### TOOLS:



- [Phillips Screwdriver](#) (1)

## Step 1 — Speaker



- First, open the dust cover and grab it by the hinges and pull up until it slides out.
- Then, using a screwdriver unscrew the 3 screws on each side and remove the top layer of the record player. The top should pop out.

## Step 2

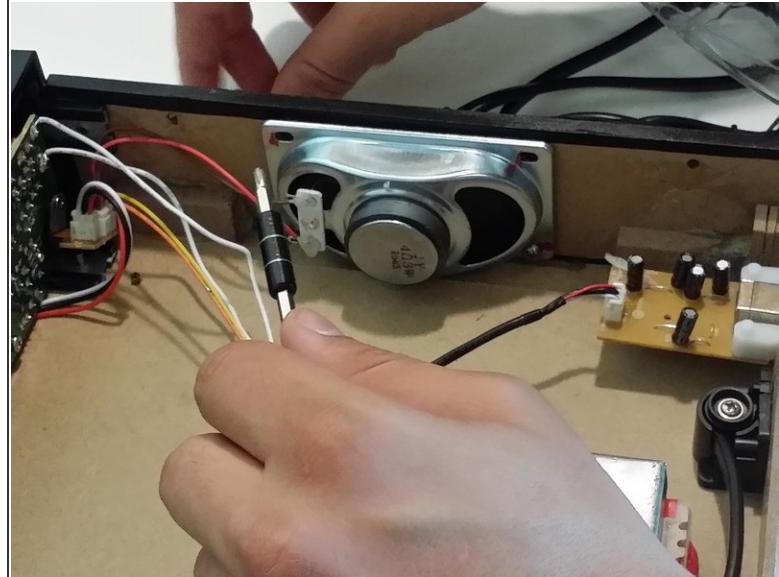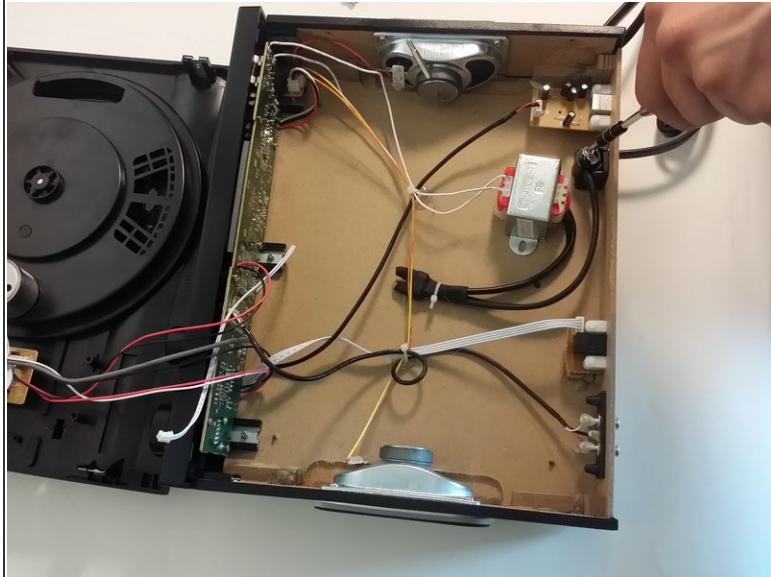

- You should see the speakers (one on both sides). From here, you want to unscrew the three screws holding them in place, using the same head as the previous step.

## Step 3



- Carefully remove the speakers from the device, being careful not to harm any components of the speaker.

## Step 4



- Once the speaker is out of the device, you should use a soldering iron to take off the wires on the current broken speaker, and put them to the new speaker using a soldering iron.

To reassemble your device, follow these instructions in reverse order.