



John Frieda JFHA5R Cord Cover Replacement

This guide will show you how to replace the cord cover on the John Frieda Salon Shape.

Written By: Mitchell Gerlach



INTRODUCTION

The cord cover can become stuck while using the Salon Shape brush. This replacement guide will cover how to replace the cord cover.

Step 1 — Cord Cover



⚠ Ensure the Salon Shape is unplugged before performing the following steps.

- Turn the vent cover to the left to remove it.

Step 2



- Remove the mesh netting by pulling it off.

Step 3



- Turn slightly left to remove the cord cover.

To reassemble your device, follow these instructions in reverse order.