



Juki Chainstitch Machine Thread and Needle Replacement

This guide will guide you step by step in replacing the needle and threading the Juki machine for use.

Written By: Connor Cherry



This document was generated on 2019-09-23 09:38:30 AM (MST).

INTRODUCTION

Before you begin, you will need a flathead screwdriver, thread, and a 175X7 size 18 sewing needle.

TOOLS:

- Flathead Screwdriver (1)

PARTS:

- 175X7 Size 18 Sewing Needle (1)

Step 1 — Thread and Needle



- Pass the thread through the needle eye.

Step 2



- Loop the threading through the two tension posts, making sure you stay in the grooves of the wheels.

Step 3



- Continue the threading, weaving through the pull-off lever.

Step 4



- Adjust the thread pull-off lever as well as adjust the position of the nipper bar block to the left or the right.

Step 5



- Tighten the thread on the top loop near the nipper releasing knurled thumb nut.

Step 6



- Weave threading through the working arm and have it ready to insert through the eye of the needle.

Step 7




- Again, keep the thread along the groove of the wheel before slipping it through the eye of the needle.

Step 8



- Using the flathead screwdriver, slide the needle up into the slot, with the indented side facing in and tighten until the needle cannot shift.

Step 9

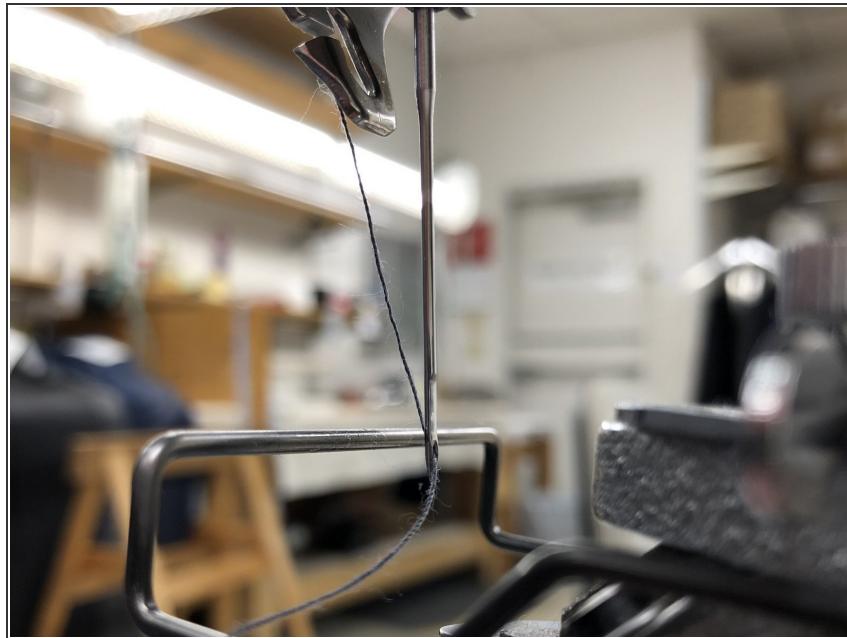

- Insert the thread through the eye of the needle, and you are ready for sewing.

To reassemble your device, follow these instructions in reverse order.