




Justin Bieber Concert Microphone Button Replacement

If your Justin Bieber Concert Microphone has had damage done to a button or has lost a button, this guide will show you how to replace the button with a new one.

Written By: Mike Seyman

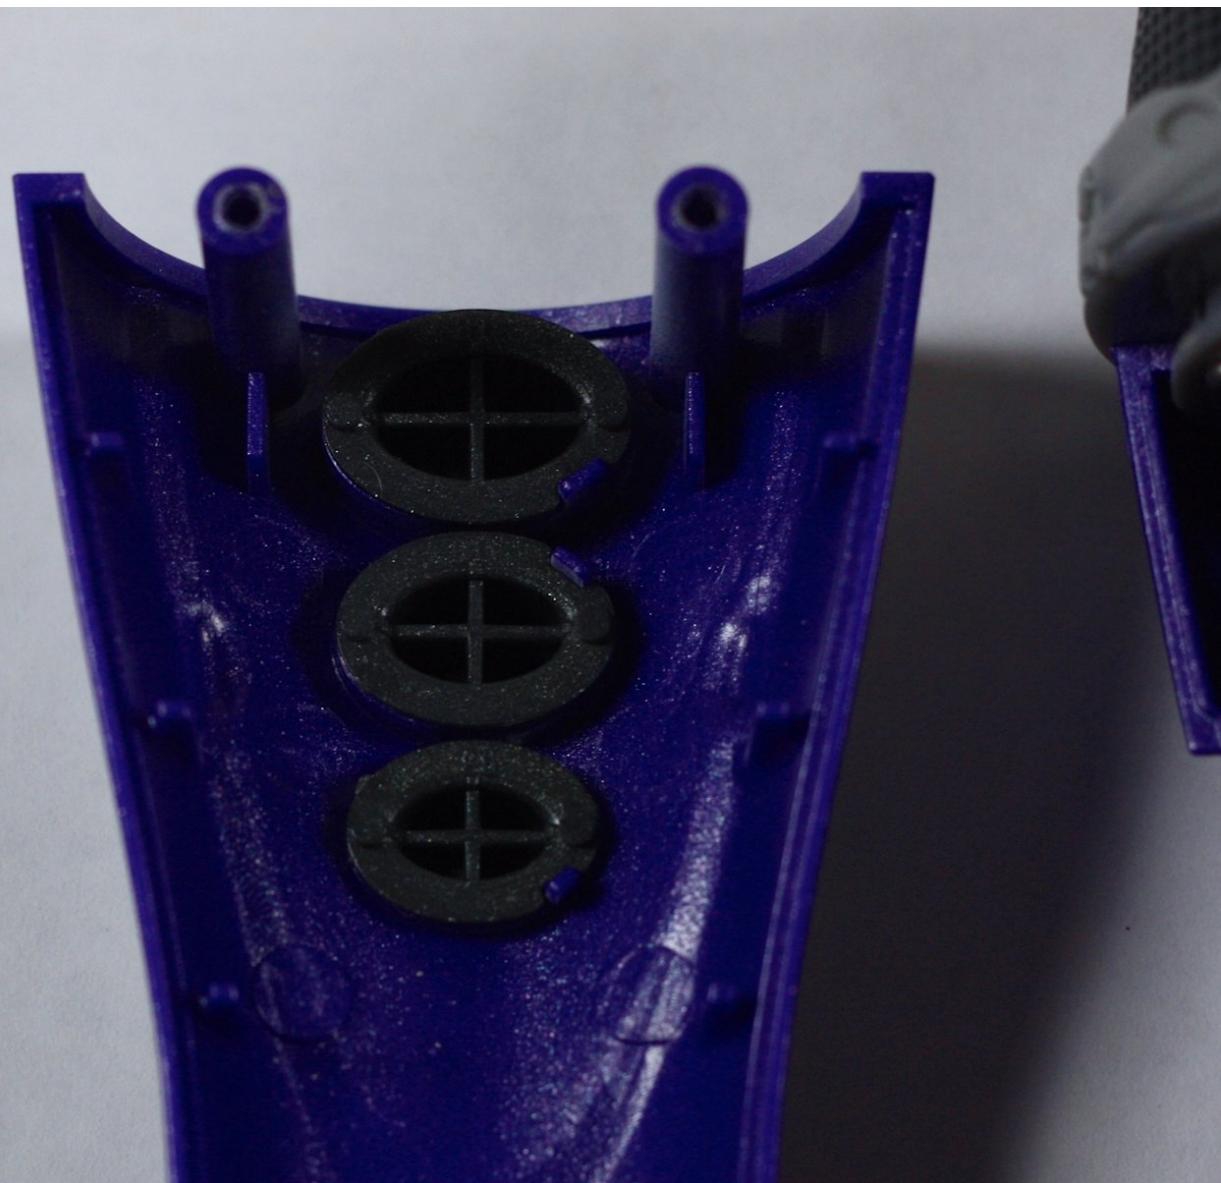

This document was generated on 2019-09-23 08:48:26 AM (MST).

INTRODUCTION

The buttons on the Justin Bieber Concert Microphone allow the user to choose between the two programmed songs and add concert noise. The user will know if the button is broken if the button does not perform as intended. Such as not being able to stop the song or not being able to add the concert noise.

TOOLS:

- [Phillips #2 Screwdriver \(1\)](#)
- [Flathead Screwdriver \(1\)](#)

Step 1 — Removing back panel



- Remove the back panel of the device by unscrewing the single #8 11.6 mm Flathead screw on the back of the device.

Step 2 — Removing batteries



- Remove the 3 AAA batteries from the device.

Step 3 — Removing back half of device




- Unscrew the other 4, #8 11.6 mm Phillips Head screws to remove the entire back half of the device.
- Pull apart the device once screws are loose, splitting the device in half.

Step 4 — Positioning device



- Keeping all wires connected to their attachments, place the front half of the device face down.

Step 5 — Removing buttons

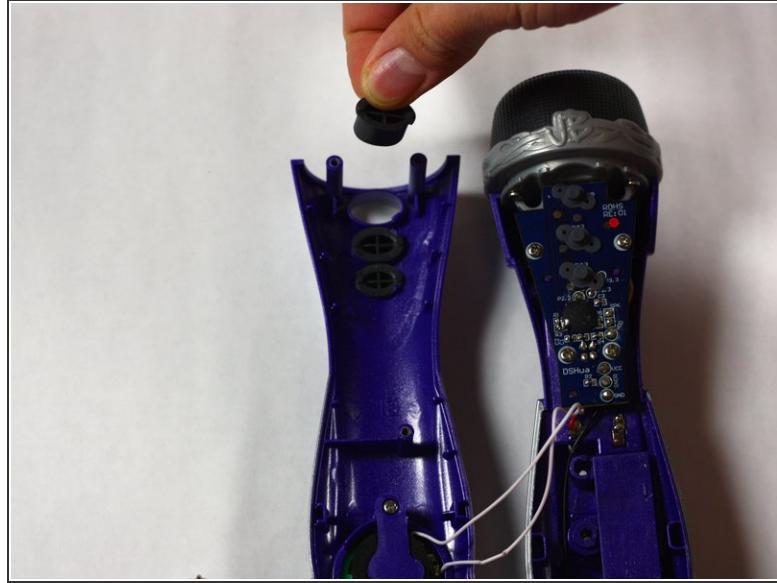

- Remove the buttons by pushing them out from the front of the device. Clean or replace them as needed and place them back into the appropriate slots.

To reassemble your device, follow these instructions in reverse order.