




Justin Bieber Concert Microphone Speaker Replacement

If your Justin Bieber Concert Microphone is not producing sound the speaker may have gone out.
This guide will show you how to replace the speaker.

Written By: Mike Seyman

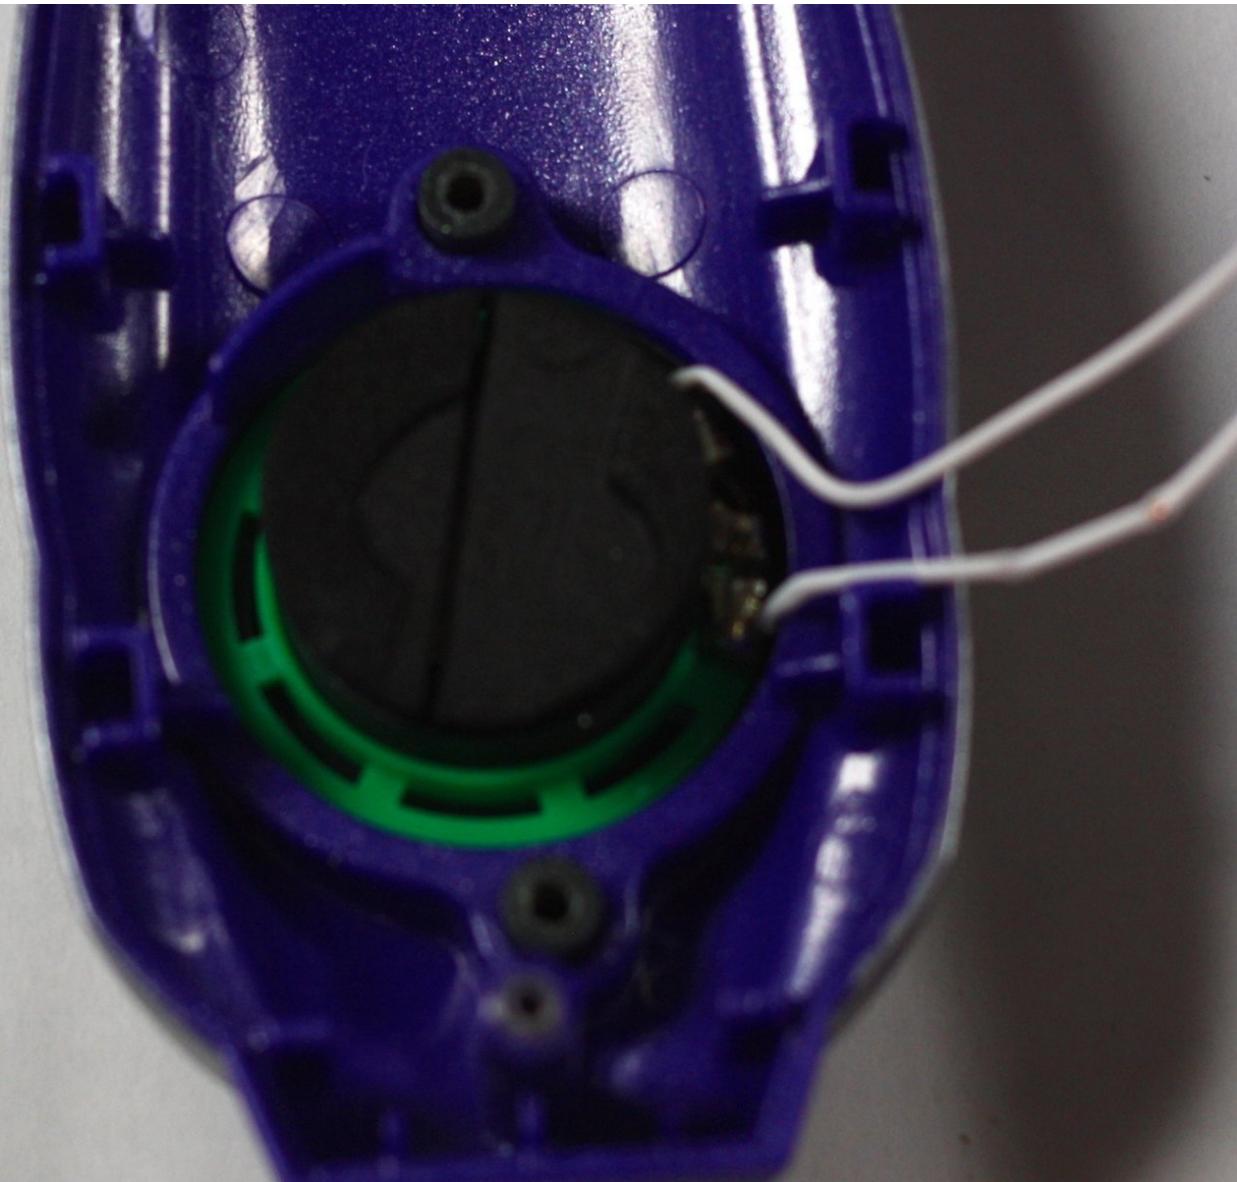

This document was generated on 2019-09-17 03:50:44 PM (MST).

INTRODUCTION

The speaker is located at the bottom of the the Justin Bieber Concert Microphone. The user will see there is a problem with the speaker if no sound is being produced. That is if the buttons are working and the batteries have charge. The speaker is the only component in the Justin Bieber Concert Microphone that is capable of producing sound.

TOOLS:

- [Flathead Screwdriver](#) (1)
- [Phillips #2 Screwdriver](#) (1)

Step 1 — Removing back panel



- Remove the back panel of the device by unscrewing the single #8 11.6 mm Flathead screw on the back of the device.

Step 2 — Removing batteries




- Remove the 3 AAA batteries from the device.

Step 3 — Removing back half of device




- Unscrew the other 4, #8 11.5 mm Phillips head screws to remove the entire back half of the device.
- Pull apart the device once screws are loose, splitting the device in half.

Step 4 — Positioning device

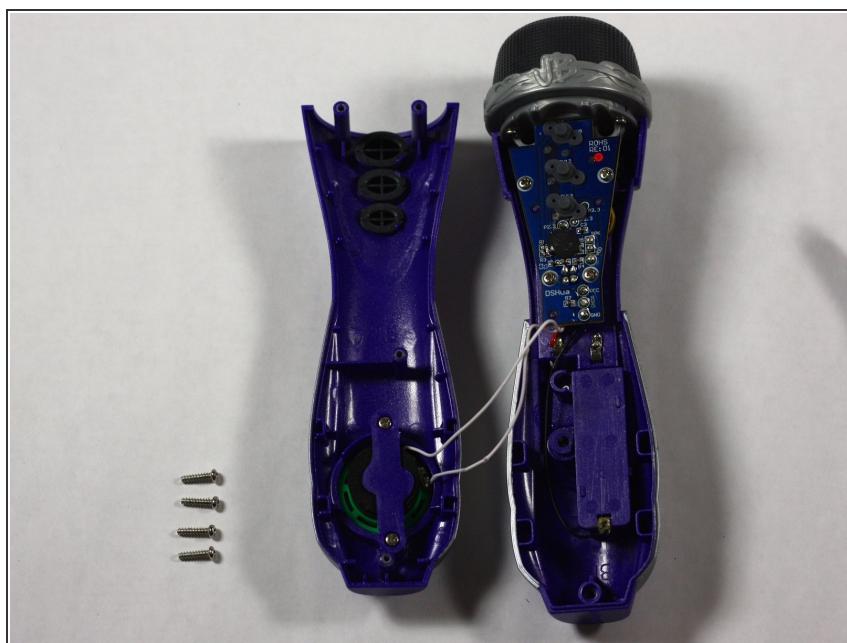


- Keeping all wires connected to their attachments, place the front half of the device face down.

Step 5 — Removing speaker

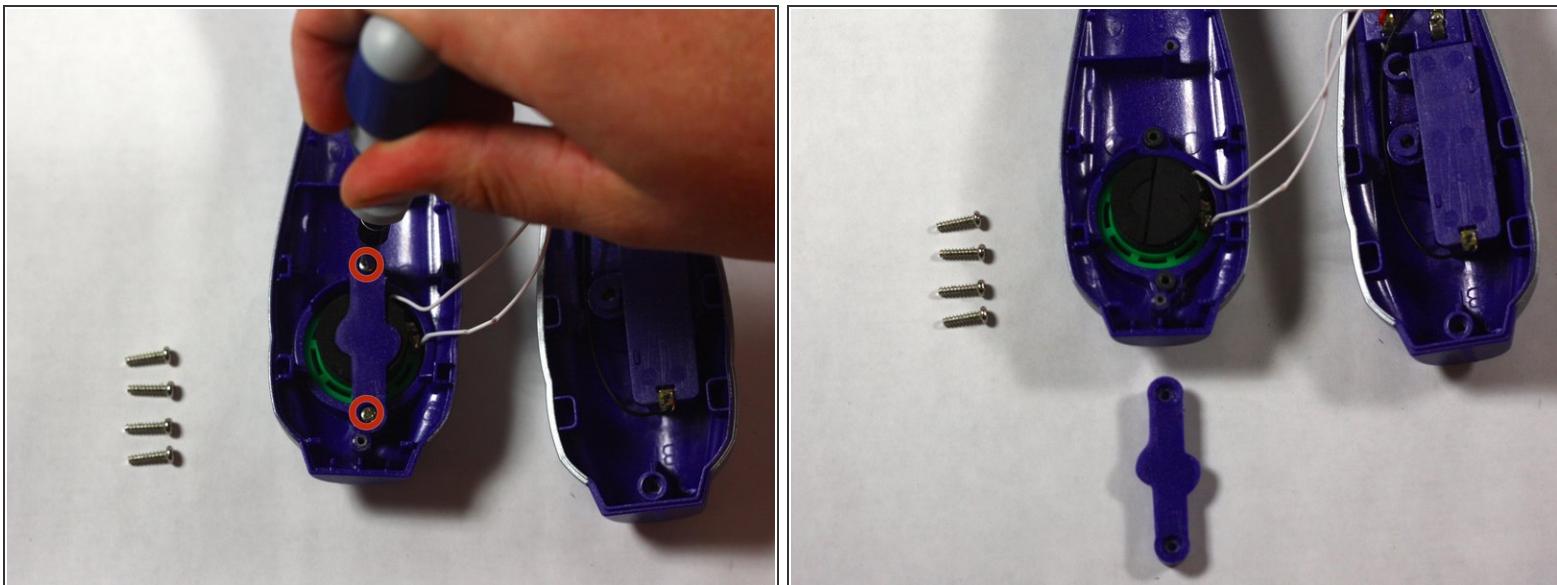

- Remove the 2, #8 11.7 mm speaker guard screws with the Phillips Head screw driver.

Step 6 — Replacing speaker

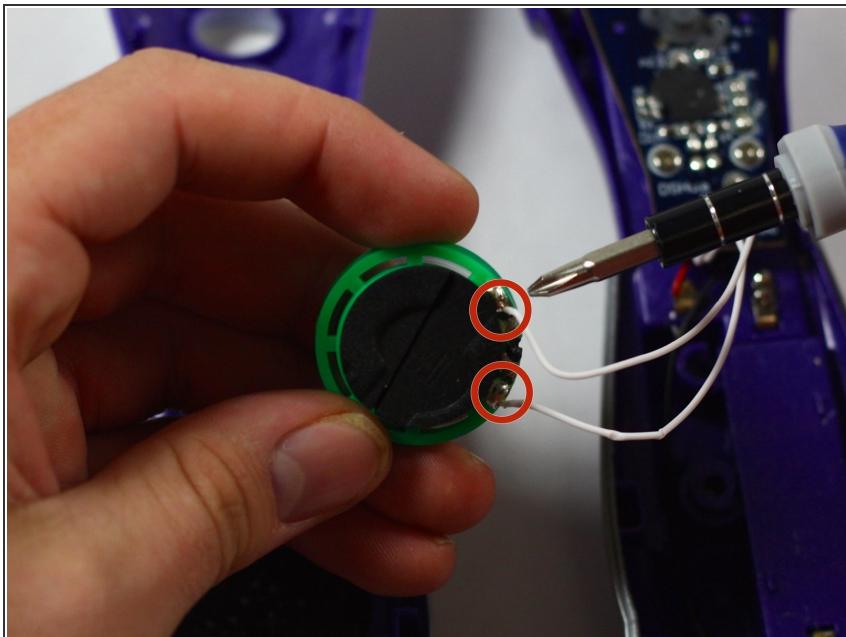

- Disconnect the speaker wires from the speaker and replace it with the new one
- Refer to [this](#) guide for help with soldering the wires back onto the speaker.

To reassemble your device, follow these instructions in reverse order.