



KDDI Kyocera A5521K Front LCD Screen Replacement

Written By: Dominic Grisafe




INTRODUCTION

These instructions will demonstrate how to remove the front LCD screen from the KDDI Kyocera A5521K.

TOOLS:

- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tri-point Y0 Screwdriver \(1\)](#)
- [Push Pin \(1\)](#)

Step 1 — Faceplate

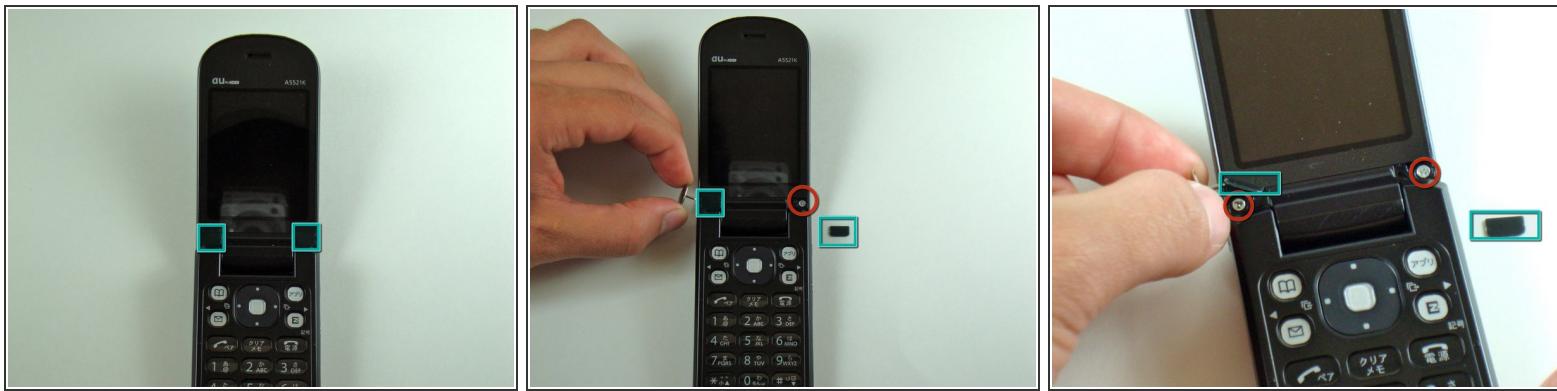

- Pry, with a metal probe, the black covers that are located by the pivoting joints of the phone.
- Beneath the covers are screws.

Step 2



- Remove the screws using a Y0 screwdriver.

Step 3



- Use the iPod pry tool to remove the outer screen.

- Two screws are now visible.


 Be careful not to crack the screen upon removal. It is adhered strongly to the phone.

Step 4



- Use the Y0 screwdriver to remove the screws.

Step 5

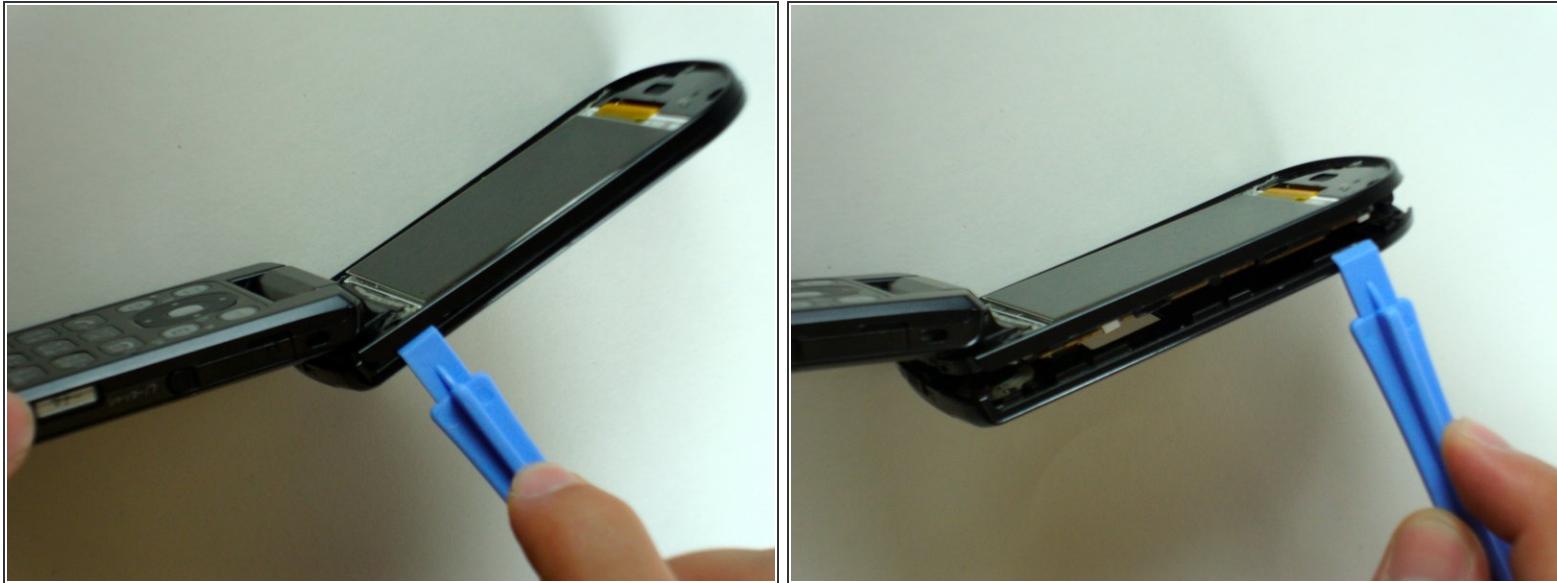


- Use the iPod pry tool to loosen the faceplate from the phone.
- *i* Slide the pry tool along the entire crease of the faceplate to completely detach it.

Step 6




- Separate the faceplate from the phone.

Step 7 — Front LCD Screen

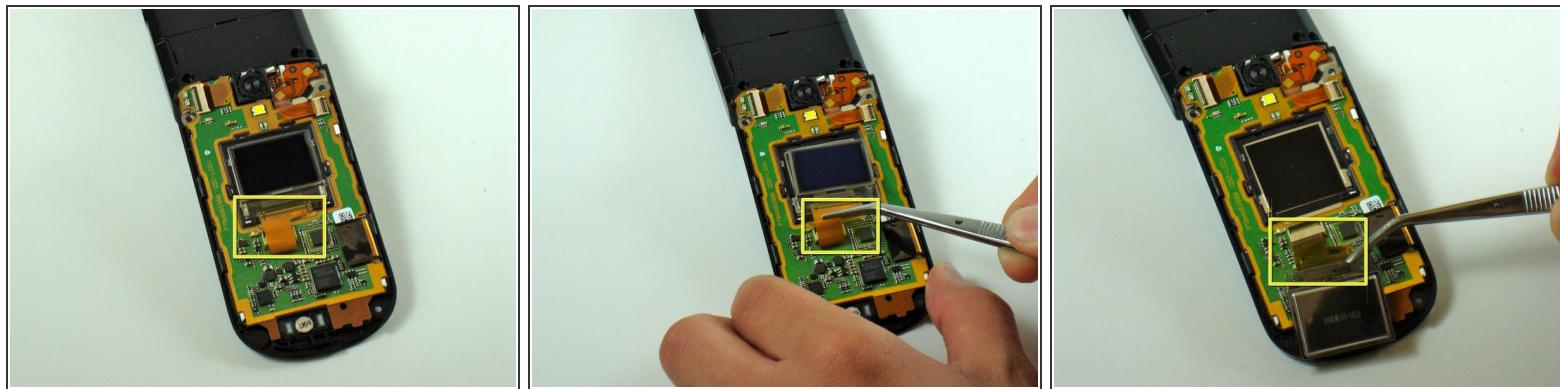

- Rotate the phone 180 degrees.
- Grab the flexible circuit with tweezers (or use your fingers if you can manage a firm grip).
- Pull the flexible circuit to towards you to separate the front LCD screen from the phone.

Step 8

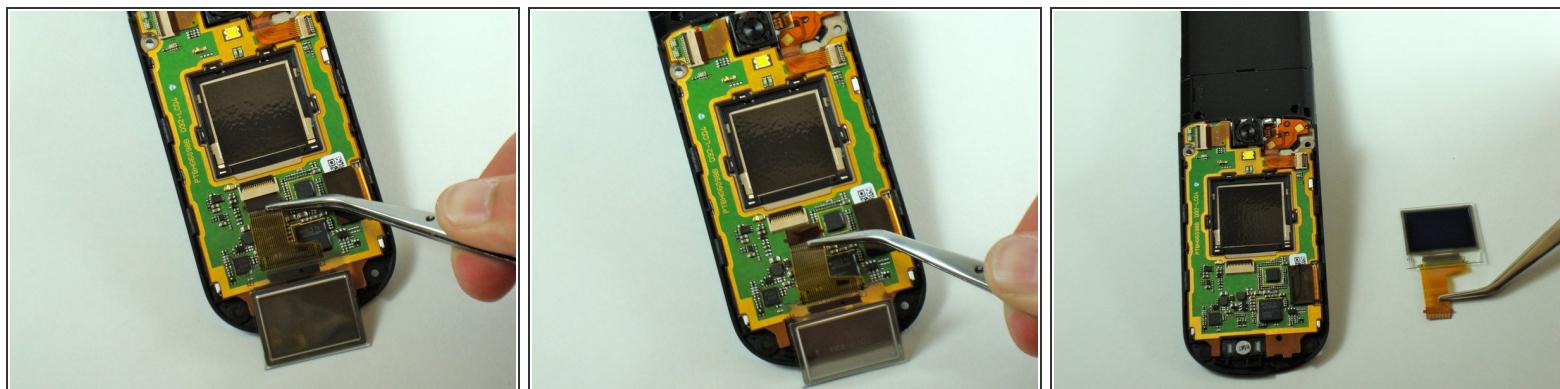

- Firmly pull the flexible circuit from the connector.
- ⚠** Be careful not to damage the flexible circuit.
- The front LCD screen should now be separate from the phone.

To reassemble your device, follow these instructions in reverse order.