



# KLH Speaker Driver Replacement

Replace the driver on your KLH bookshelf speaker.

Written By: Gavin Giesmann



## INTRODUCTION

If your KLH shelf speaker no longer produces sound from the larger speaker this guide will help you get those beats bumping again by replacing the larger speaker.

### TOOLS:

- Small Phillips Head Screwdriver (1)
- Flush Wire Cutters (1)
- Soldering Iron (1)

## Step 1 — Driver



- This is what the speaker will look like when you start.
- Step 1: Remove the speaker cover.

## Step 2



- Step 2: Remove all 4 of the 2 cm screws.

## Step 3



- Step 3: Carefully remove the speaker from the speaker box. Be sure not to break the 2 wires connecting the speaker.

## Step 4



- Step 4: Carefully cut the 2 wires connecting the speaker. Make sure to cut the wires about half way from the speaker.

## Step 5




- Step 5: Make sure the the new speaker is the same size, and is ready to be placed inside the cabinet.

## Step 6



- Step 6: Strip both of the wires so they are ready to be soldered together.

## Step 7

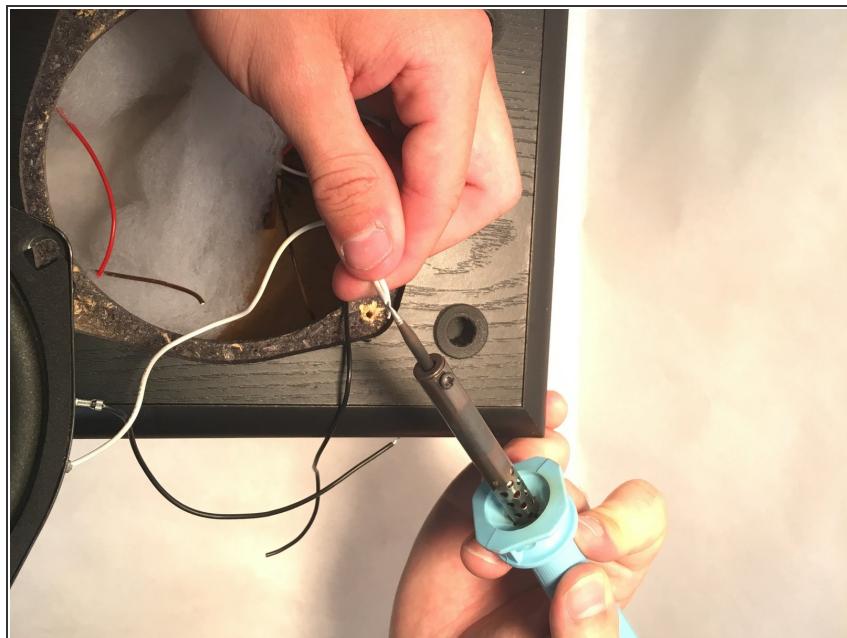

- Step 7: Solder the wires together.

## Step 8



- Step 8: Screw the new speaker back into the box using all 4 of the 2 cm screws.

## Step 9



- Step 9: Place the cover back onto the speaker box.

To reassemble your device, follow these instructions in reverse order.