


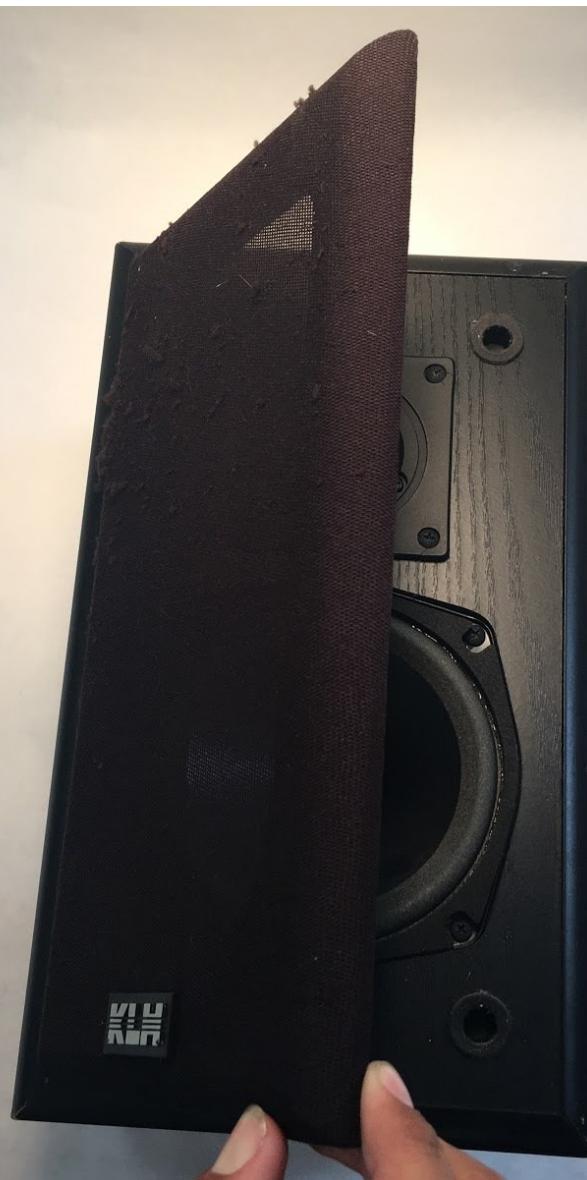

KLH Speaker Tweeter and Driver Replacement

Replace the tweeter and driver of a KLH bookshelf speaker.

Written By: Mark Lee Hensley



INTRODUCTION

Use this guide to replace the tweeter and driver of your KLH bookshelf speaker.

TOOLS:

- [Phillips #2 Screwdriver \(1\)](#)
- [Flathead Screwdriver or sudger \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)
- [8" Needle Nose Plier \(1\)](#)

Step 1 — Tweeter and Driver




- Remove the front speaker mesh to expose the speakers. The mesh will lift off without the use of tools.

Step 2



- Once the mesh is removed, begin to remove the screws securing the small upper speaker/tweeter with a #1 Phillips head screwdriver.


Step 3

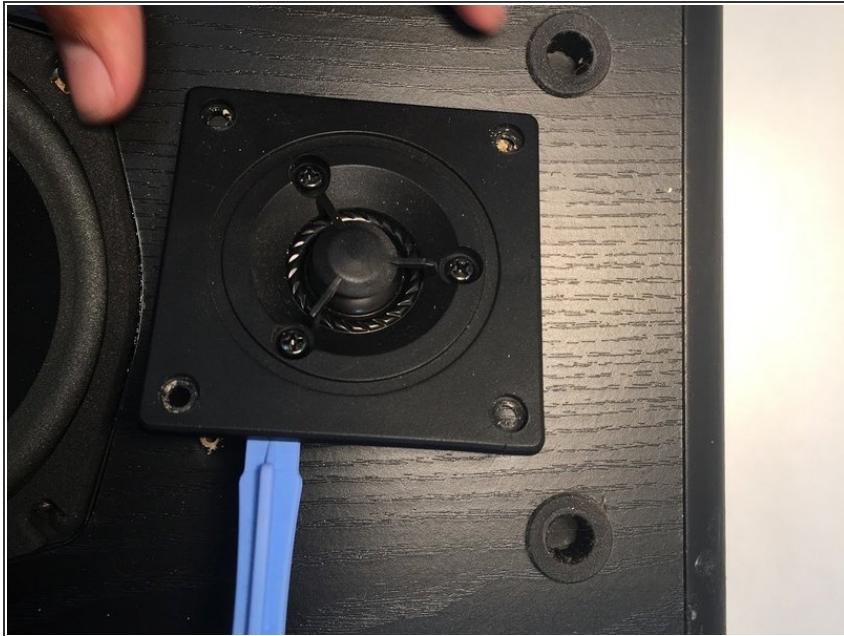

- Once the screws have been removed, pry out the small upper speaker with an opening tool.

(i) Take care not to damage the speaker's wooden body while prying the speaker out.


Step 4

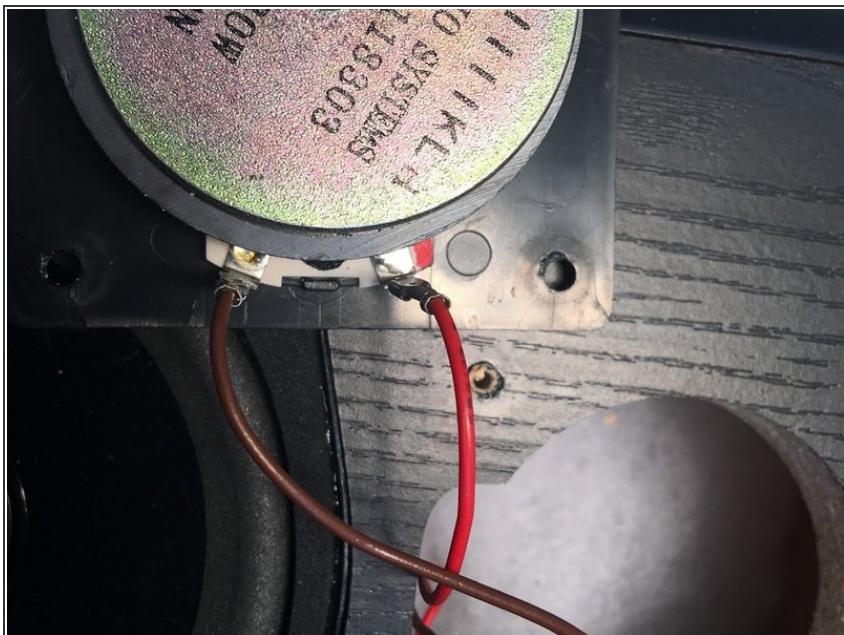

- After you have removed the speaker, disconnect the red and brown wires from the speaker.

(i) You might require needlenose pliers to do this.

Step 5

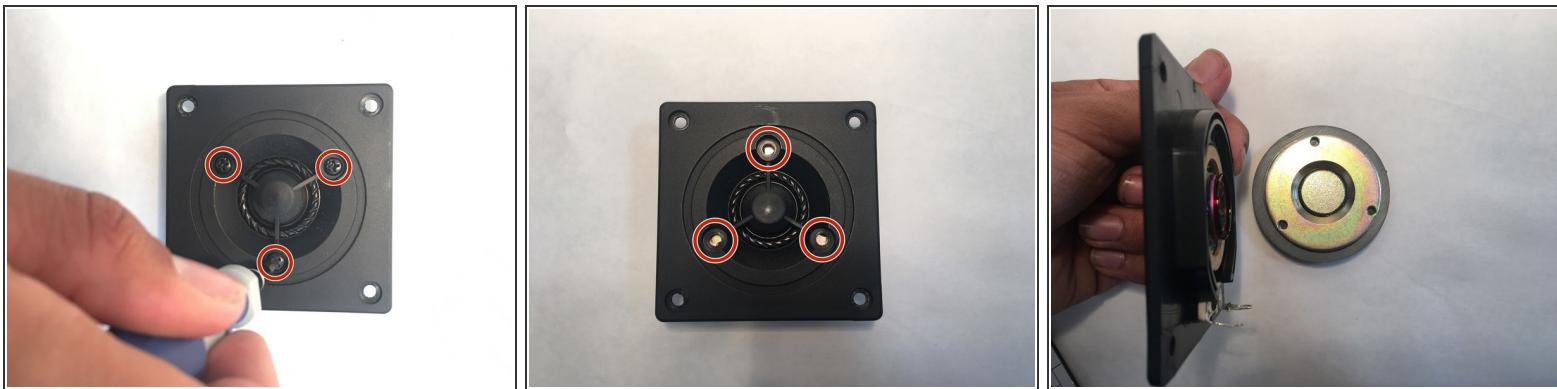

- Remove the speaker from its plastic bezel using a #1 Phillips head screwdriver.

Step 6




- For the larger bottom speaker, the same steps will be taken to remove the speaker.
- Remove the four screws securing the speaker.

Step 7



- Once the screws are removed, remove the speaker by either prying up from the top, or pushing the speaker through by pushing on the bottom of the speaker.

Step 8

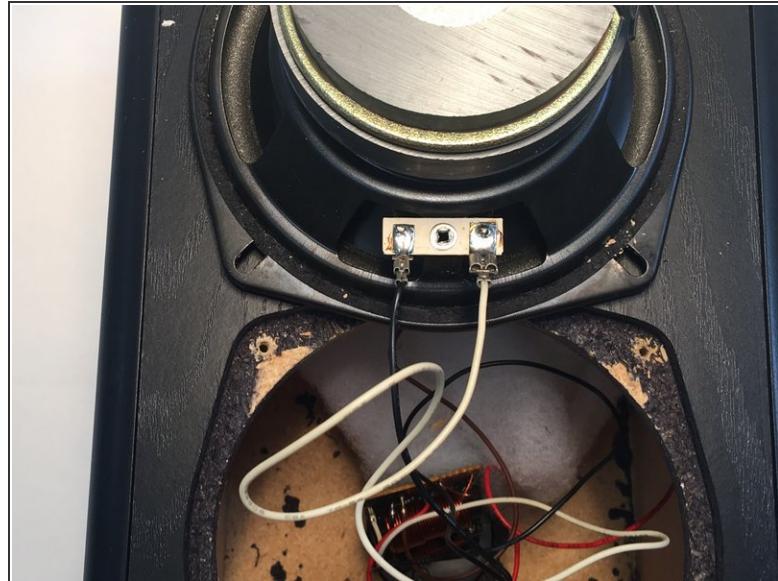

- Once the speaker is removed, remove the black and white wires.

To reassemble your device, follow these instructions in reverse order.