


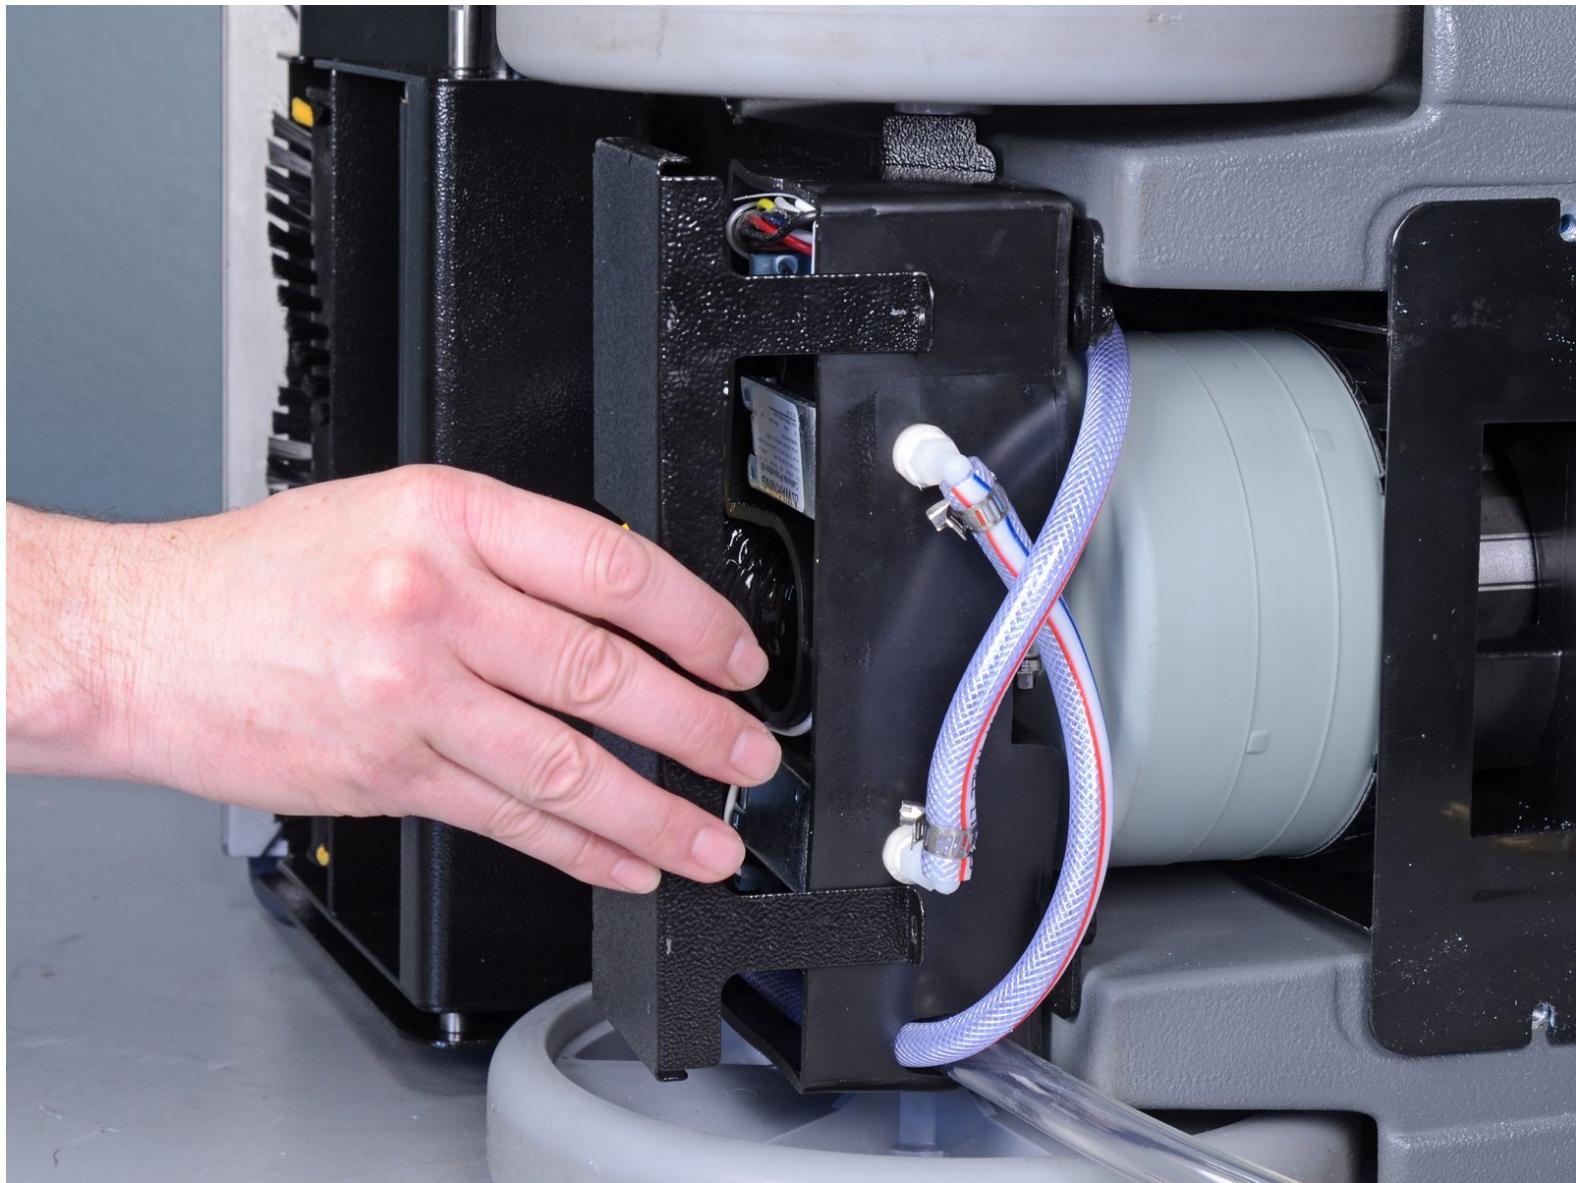

Karcher Carpet Cleaner BRC3015C 2018 Pump Cover Replacement

Remove the pump cover in a Karcher Carpet Cleaner BRC3015C 2018.

Written By: Adam O'Camb




INTRODUCTION

Use this guide to remove the pump cover in a Karcher Carpet Cleaner BRC3015C 2018.

TOOLS:

- 3mm Hex Key (1)

Step 1 — Disconnect the hose

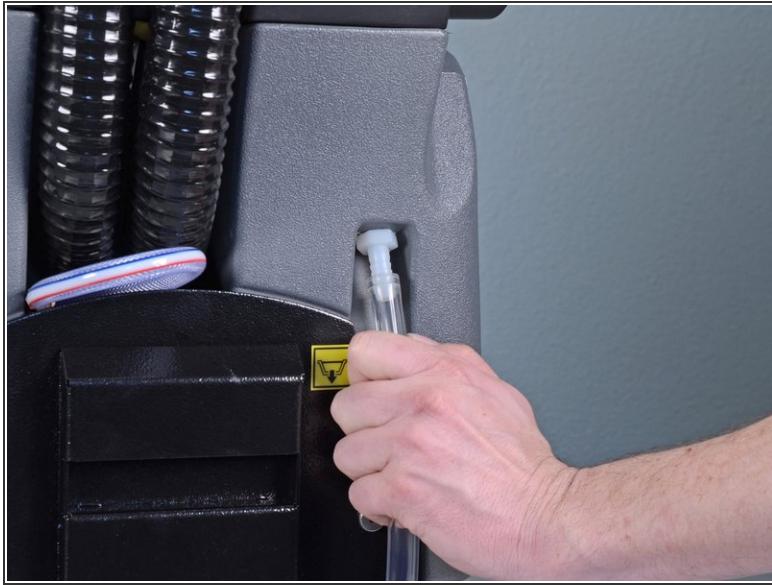

 Make sure the carpet cleaner is turned off and completely disconnected from power.

- Pull the hose on the rear of the carpet cleaner straight down to disconnect it.

Step 2 — Remove the bottom cover



- Use a 3 mm hex key to remove two bolts securing the bottom cover.


Step 3



- Rotate the bottom cover down toward the bottom of the carpet cleaner, then pull it straight back toward the rear of the carpet cleaner to remove it.


⚠ Don't completely remove the cover yet. There is a ground wire connecting the cover to the carpet cleaner that must be disconnected first.

Step 4 — Disconnect the ground wire

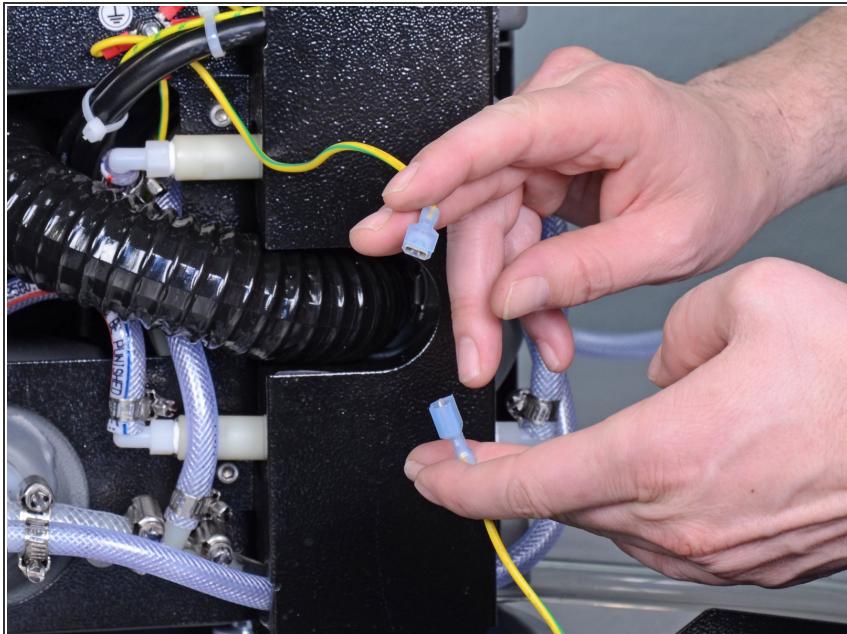



- Pull the yellow and green ground wire connectors straight apart to disconnect the bottom cover's ground wire.

Step 5 — Remove the pump cover

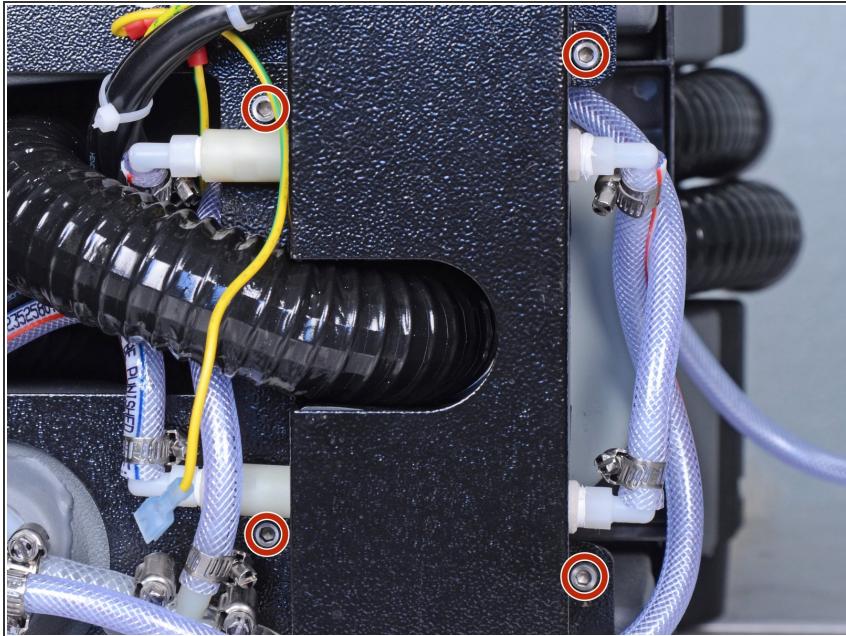

- Use a 3 mm hex key to remove the four bolts securing the pump cover.

Step 6

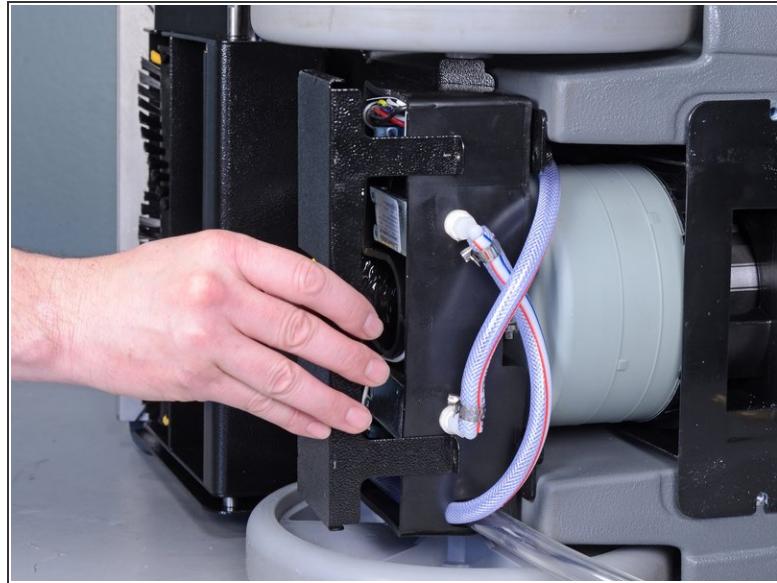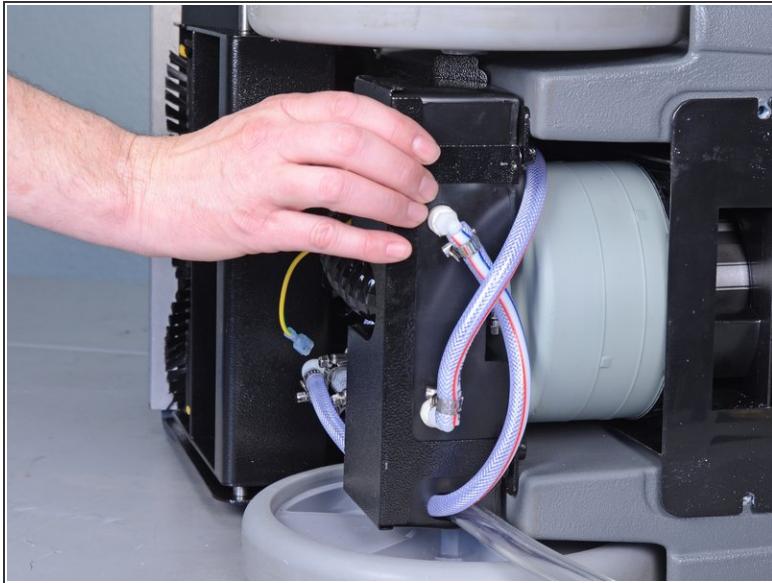

- Remove the pump cover.

To reassemble your device, follow these instructions in reverse order.