



Kenmore Series 110 Dryer Start Switch Replacement

Replace the start switch of the dryer

Written By: DuaneMurphy1



 **TOOLS:**

- **Phillips #2 Screwdriver** (1)
- **Flathead Screwdriver** (1)

Used to remove the clips on the wire blades.


Step 1 — Remove control console screws



(i) Before you begin, be sure to unplug the dryer.



- Remove the screws that hold down the control console. There is one screw on each side. The screws are #1 philips.

Step 2 — Open the control panel

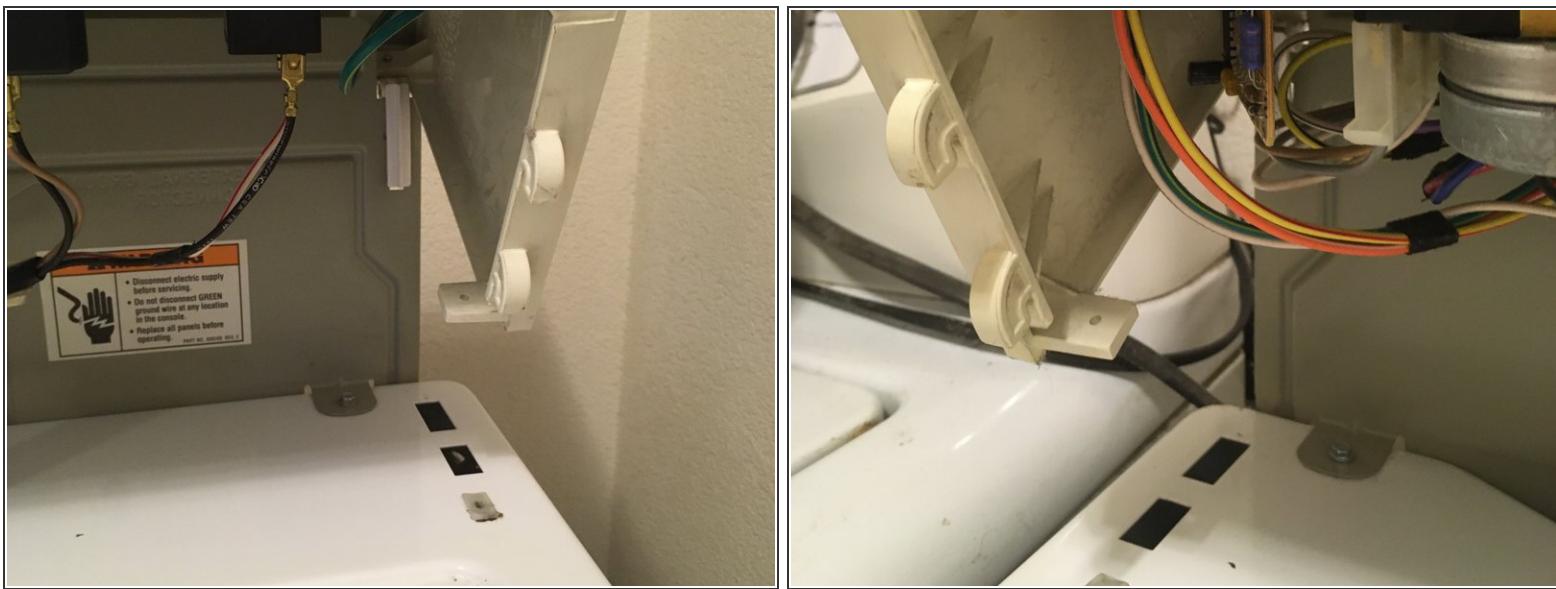

- Slide the control panel forward in order to expose the control panel controls and wiring.
- Note the tabs slide into the holes.

Step 3 — Remove the start switch

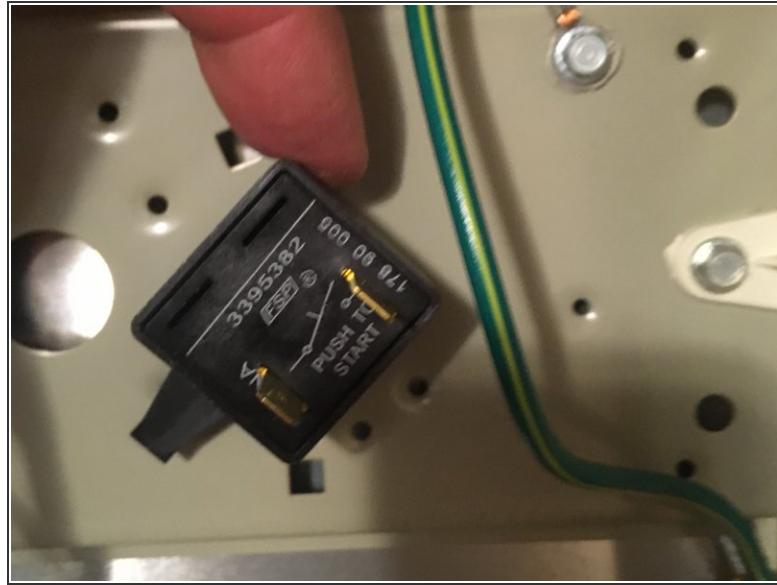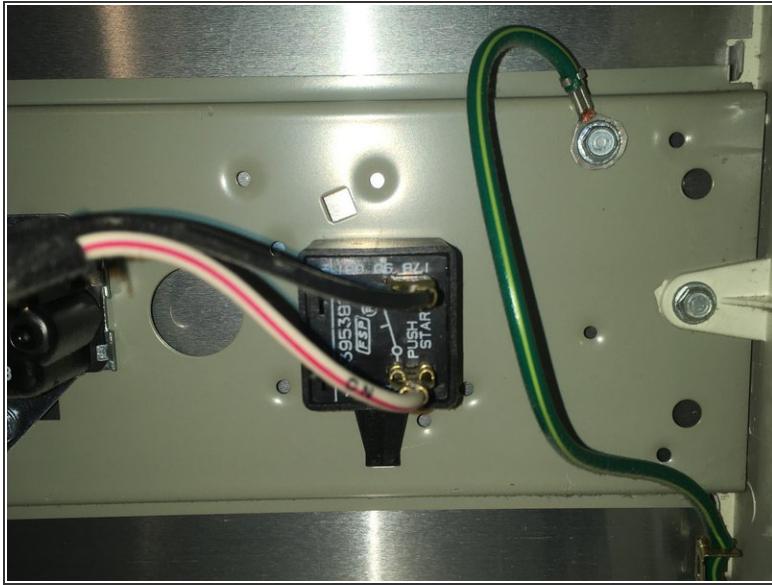

- The start switch is in the right side of the exposed control panel.
- Remove the two wire clips from the tabs on the switch. Note black on top white/red on the bottom.
- Lift the tab on the lower part of the switch and turn to the right to remove.

To reassemble your device, follow these instructions in reverse order.