



Kensington Hi-Fi Headphones 33137 Speaker Ear-Pad

This guide shows how to remove the speaker ear-pads on the Kensington Hi-Fi Headphones 33137.

Written By: William Sanders



This document was generated on 2019-09-18 02:49:54 PM (MST).

INTRODUCTION

The speaker ear-pads on the Kensington Hi-Fi Headphones 33137 provide comfort for the user when listening to the headphones. This guide shows how to remove these components.

Step 1 — Speaker Cover




- Starting with the left speaker first, pull out one side of the speaker clamp where the clamp enters the hole on the speaker cover.

⚠ Do not pull out the speaker clamp with too much force, or it may break.


- After one side of the speaker clamp is removed from the speaker cover, pull the other side of the speaker clamp out.

Step 2

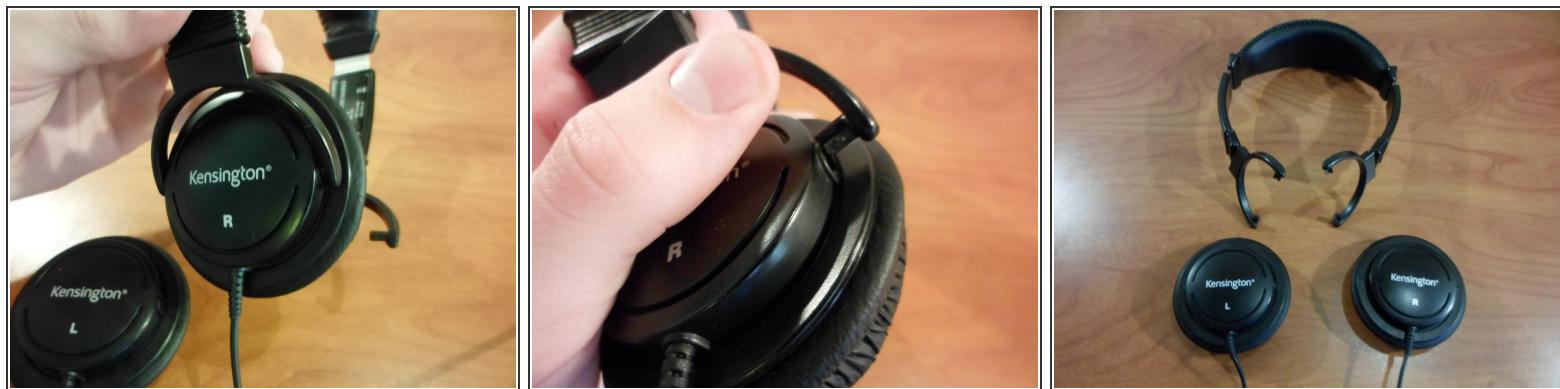

- Repeat the process in Step 1 to remove the right speaker clamp.

Step 3

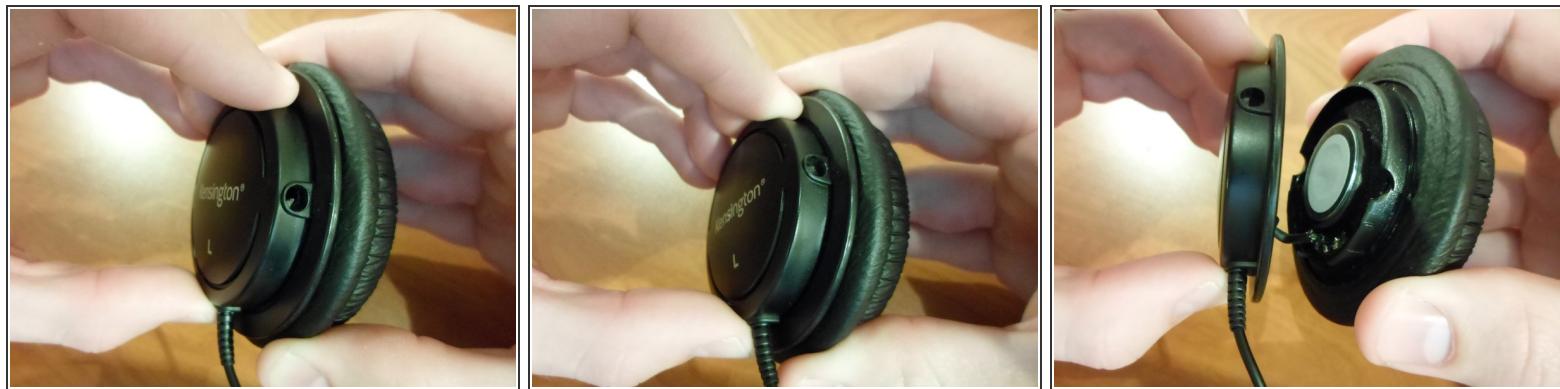

- Hold the speaker cover in one hand and the speaker ear-padding in the other.
- Turn the speaker cover counter-clockwise until it stops turning.
- Pull the speaker cover and the speaker ear padding apart to expose the inner components of the speaker.

⚠ Make sure to pull the speakers apart gently to avoid disconnecting the speaker cable wires from the speaker.

ⓘ If the speaker cover and ear-padding don't easily come apart, then make sure the speaker cover is fully turned.

- Repeat this process for both speakers.

Step 4 — Speaker Ear-Pad



- After the speaker cover has been removed, hold the edge of the speaker ear-pad with fingers.
- Gently pull the edge of the speaker ear-pad around the edge of the speaker.

⚠ To avoid tearing the speaker ear-pad, don't use too much force when pulling it around the edge of the speaker.

- Repeat this process for the other speaker ear-padding.

To reassemble your device, follow these instructions in reverse order.