



Kenwood DNX571HD CD/DVD Drive Replacement

How to remove and replace the CD/DVD module in a Kenwood DNX571HD.

Written By: Wendy Zaballos




INTRODUCTION

If the CD/DVD drive in your Kenwood DNX571HD car stereo has stopped working, or has physically broken, follow this guide to remove the module and replace it with a new one.

TOOLS:

- [Spudger](#) (1)
- [Phillips #1 Screwdriver](#) (1)


Step 1 — CD/DVD Drive

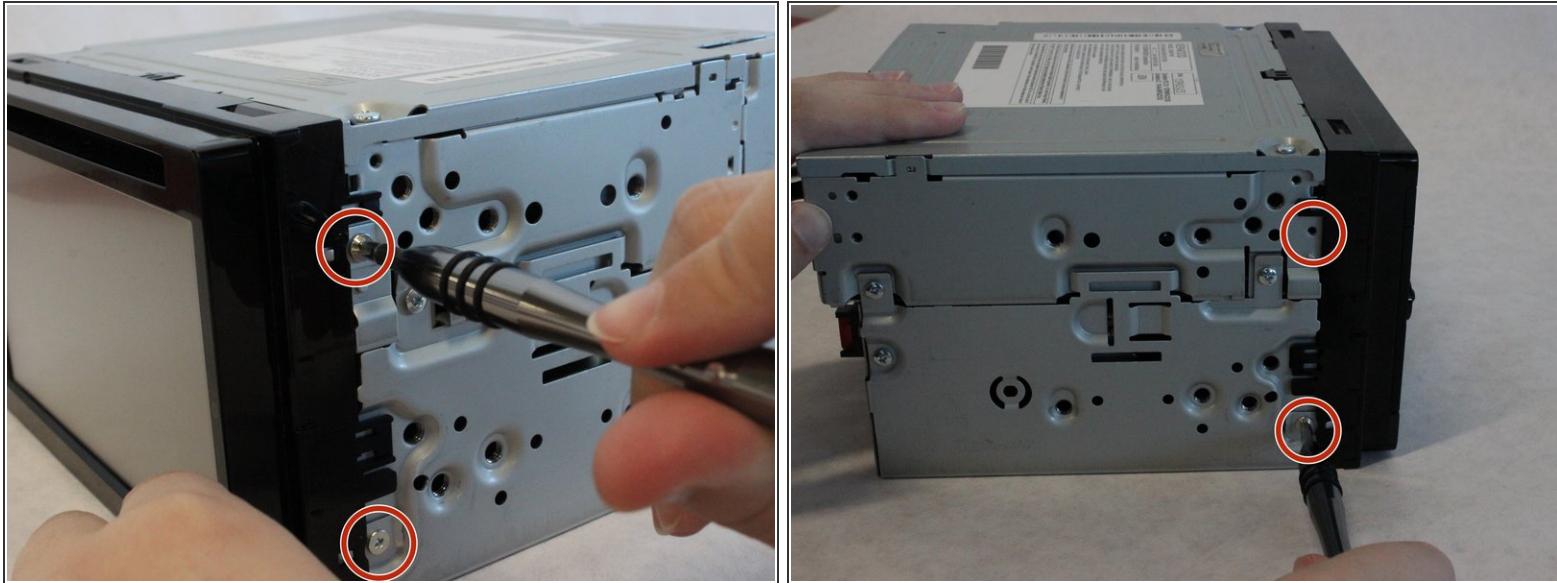

- Unscrew the four 3.5mm side screws with a Phillips #1 screwdriver.


(i) There are two screws per side.

Step 2

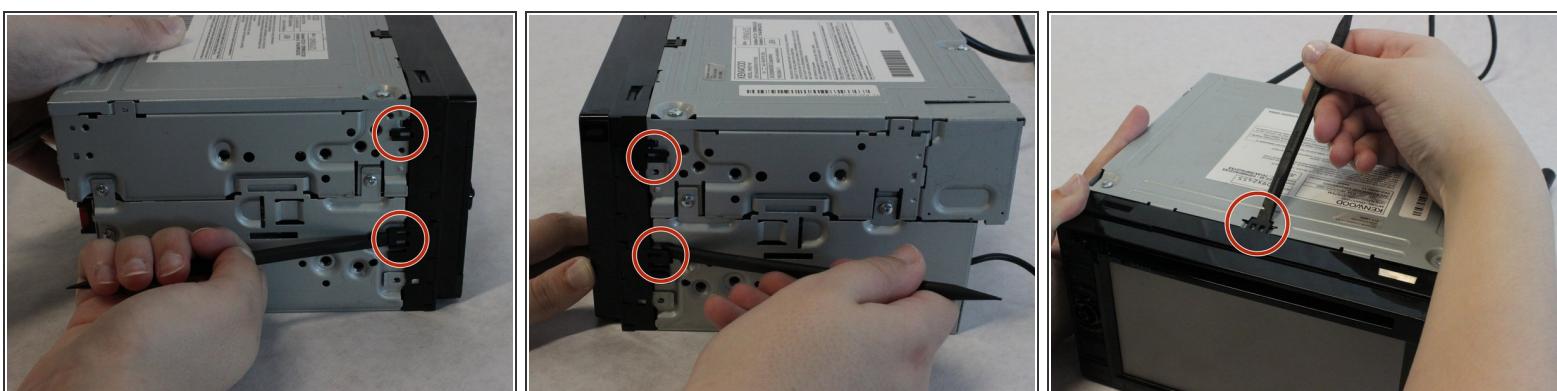

- Use a spudger to unhook the plastic clips on the sides and top of the front panel. There are two clips on each side and one clip on the top.
- (i)* Place the spudger between the plastic tab and the metal case and gently lift the spudger away from the case.

Step 3

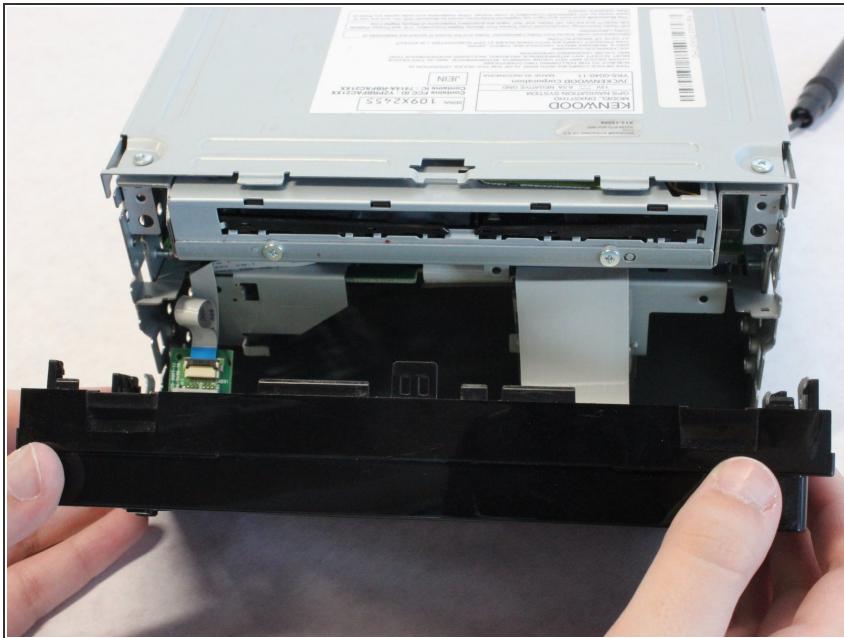


- Pull the top of the front panel out and down to remove front panel.
- ⚠ Remove the front panel gently so as not to damage the ribbon cables behind it.

Step 4




- Unscrew the three 5mm screws from the top of the device using a Phillips #1 screwdriver.
- Lift up to remove the top casing.

Step 5

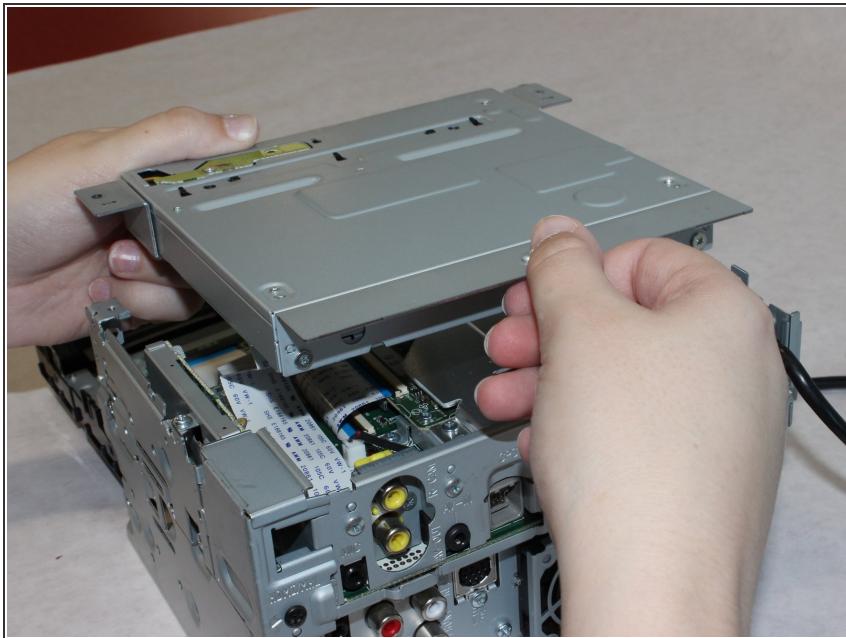

⚠ Lift the CD drive carefully to expose the attached cable underneath.

Step 6

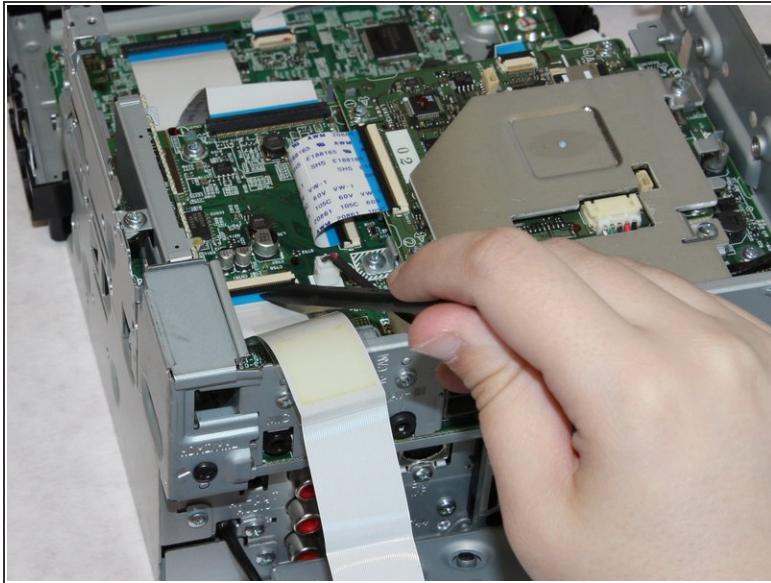

- Flip up the black clasp with a spudger to disconnect the large white ribbon cable connecting the CD drive to the board underneath.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-21 01:11:35 PM (MST).

