



# Kenwood KDC-BT362U Button Replacement

This guide will demonstrate how to reach and replace the buttons.

Written By: Steven Chov



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Front Panel

- Locate the face-plate eject button.



## Step 2



- Press the eject button with your forefinger.
- Remove the face-plate.

## Step 3



- Starting on the top side, pop the front panel frame out.
- Remove the face-plate frame.

## Step 4



- Use the plastic opening tool to pry open the tabs.
- Repeat on the opposite side.


This document was generated on 2019-09-21 01:13:08 PM (MST).

## Step 5




- Remove the front panel.

## Step 6 — Button

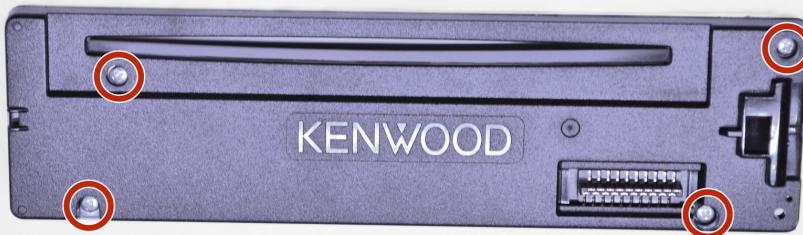


- Use the Phillips #0 Screwdriver to remove the four screws.

## Step 7

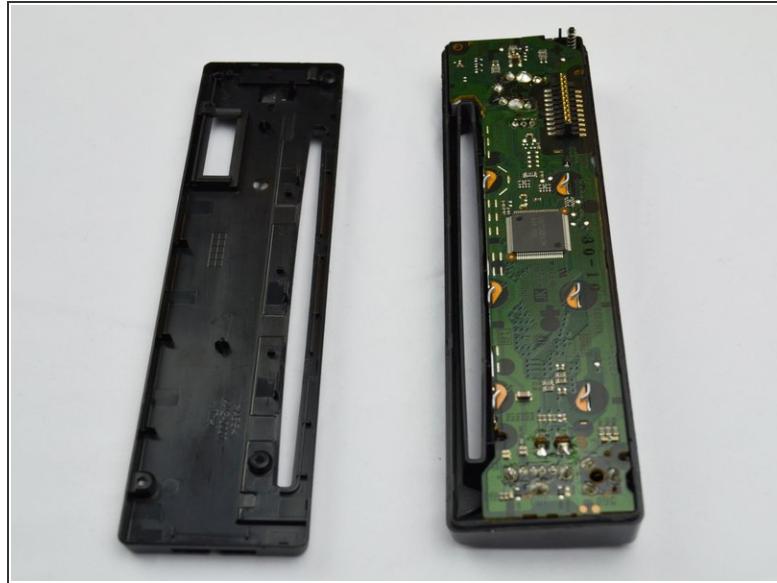


- Use the plastic opening tool to pry it open.

## Step 8

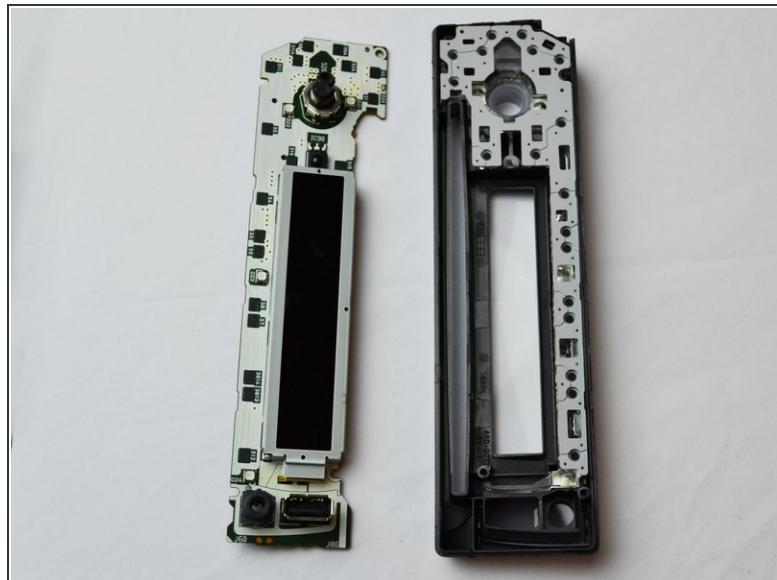


- Lift and remove the motherboard to reveal the inside of the front panel.

## Step 9

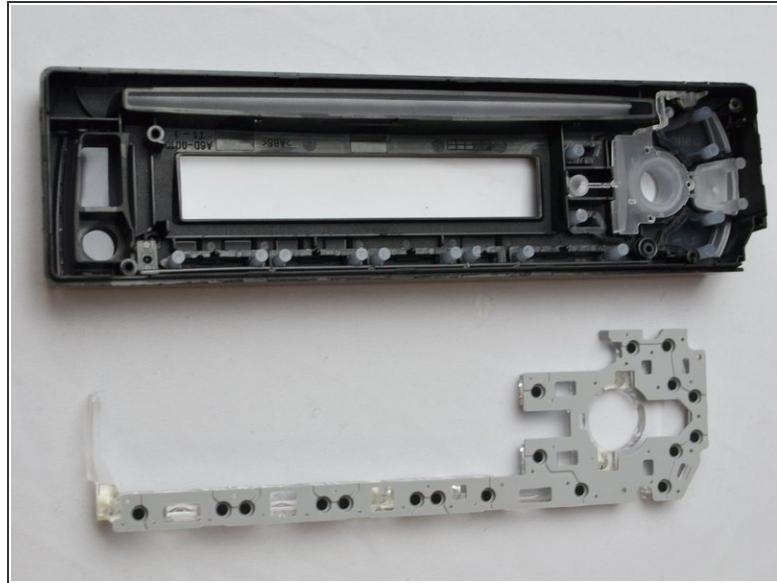

- Use the plastic opening tool to lift up and remove the cover.

## Step 10

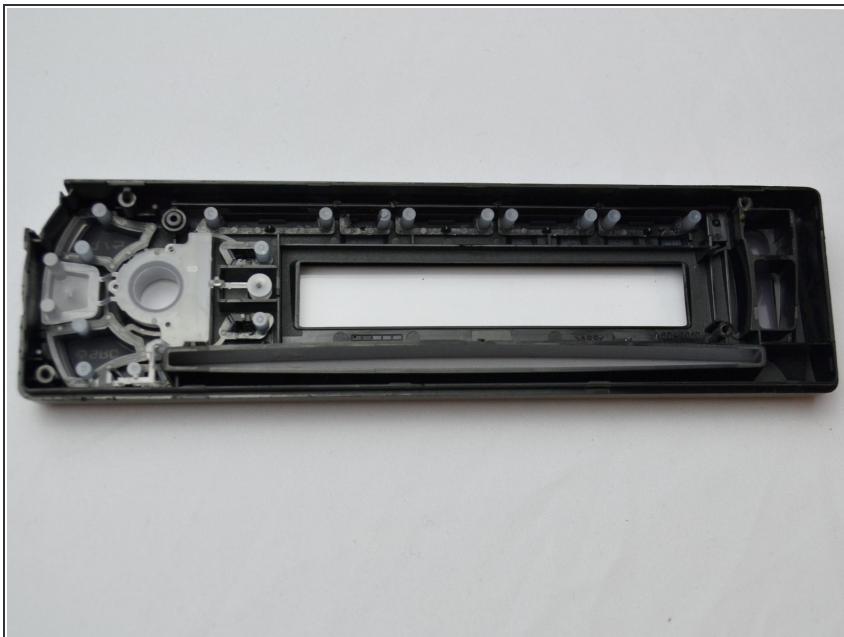

- The buttons are now able to be removed and replaced if damaged or missing.

To reassemble your device, follow these instructions in reverse order.