




# Kenwood KDC-BT565U LCD Screen Replacement

This guide will walk you through the process of replacing the LCD screen in a Kenwood KDC-BT565U

Written By: Yusef Flowers

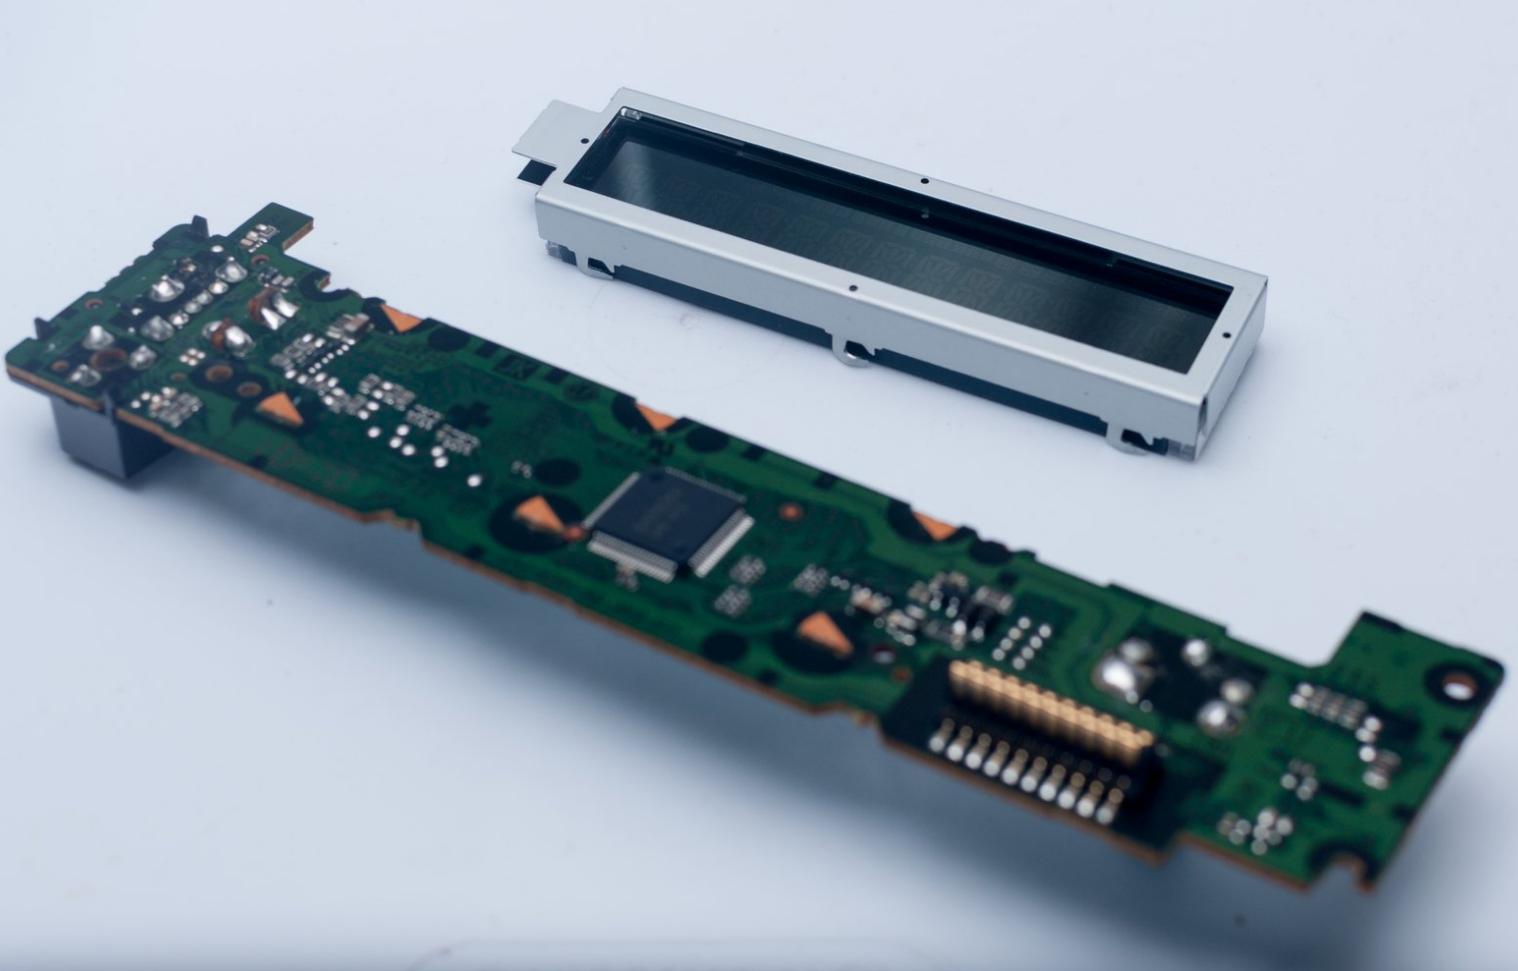

This document was generated on 2019-09-18 01:11:17 PM (MST).

## INTRODUCTION

If the LCD screen in the KDC-BT565U is not displaying text properly, or suffering from too much fading/dimness, it could be a sign that the screen needs replacing. This guide shows you how to easily replace this LCD screen.

### TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

### PARTS:

- Kenwood KDC-BT565U LCD Screen (1)

## Step 1 — Face Plate



- Press the eject button on the bottom left corner of the face plate.

## Step 2




- Begin by slightly lifting the face plate out from the side located by the release button.
- Slide towards the side of the eject button, *then* completely lift out.

## Step 3 — LCD Screen




- Remove the four 7.5mm Phillips #0 screws on the back of the face-plate.

## Step 4

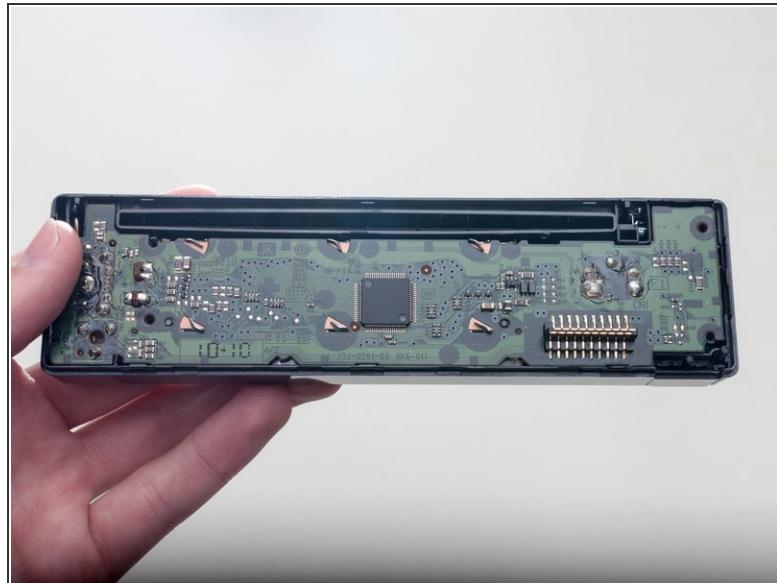


- Use a spudger or prying tool to open the back of the face plate. Pry the back at multiple points around the edge of the face plate. This will take some patience. Applying too much force risks breaking the plastic.

## Step 5

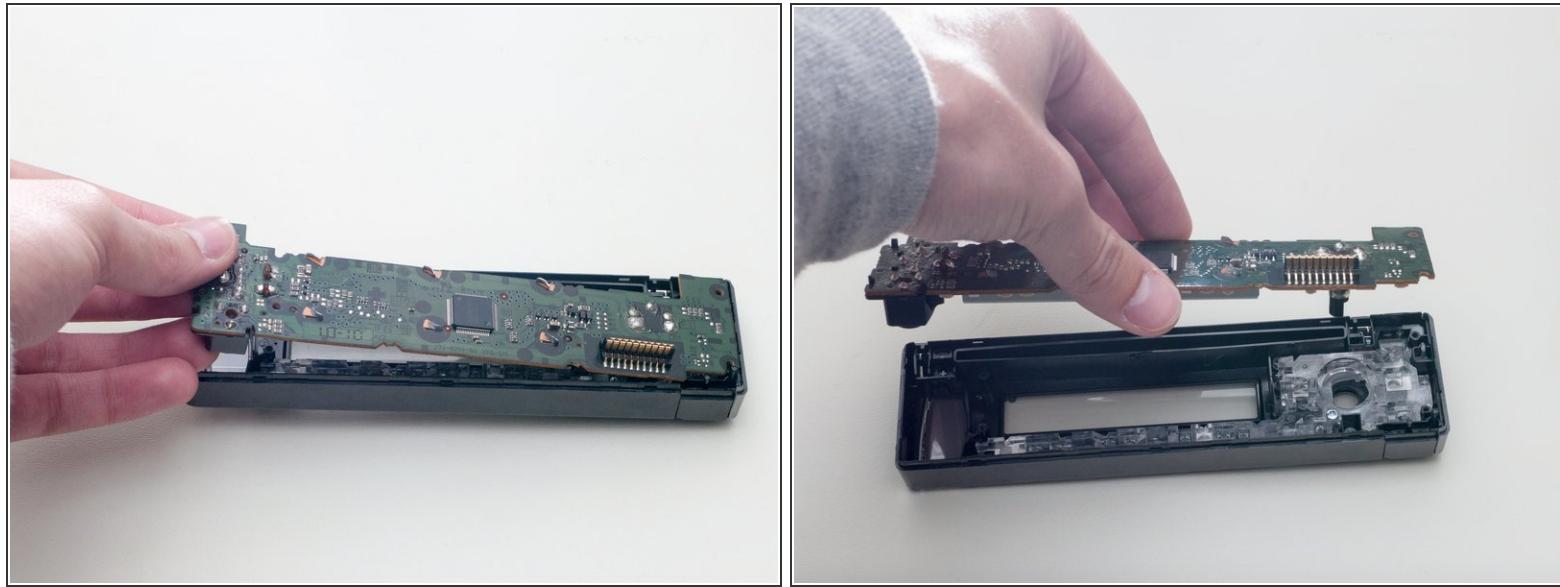

- Lift and remove the motherboard to reveal the inside of the front panel.
- You might need to pry the right side up with the spudger.

## Step 6

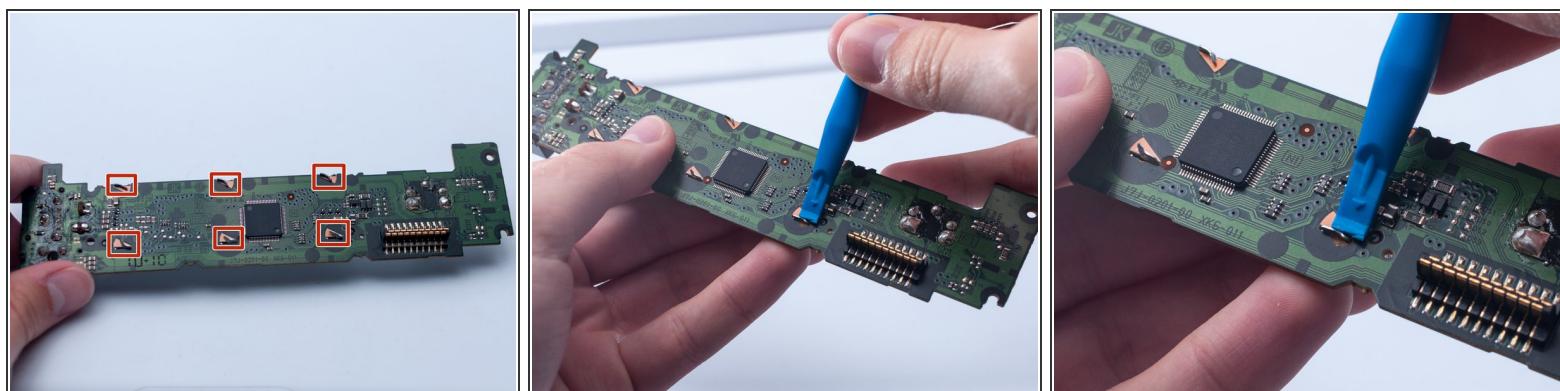

- Use the plastic spudger to straighten out the six pegs to allow the removal of the LCD screen.

**⚠** Make sure to use an [ESD](#)-safe prying tool when working on electrical boards. Here, we are using a plastic tool, not a metal one.

## Step 7



- Lift the LCD screen to remove and replace it.

To reassemble your device, follow these instructions in reverse order.