




Kenwood KMM-BT522HD Face Plate Replacement

A guide on how to remove face plate from a Kenwood KMM-BT522HD radio.


Written By: Andrew Waldon

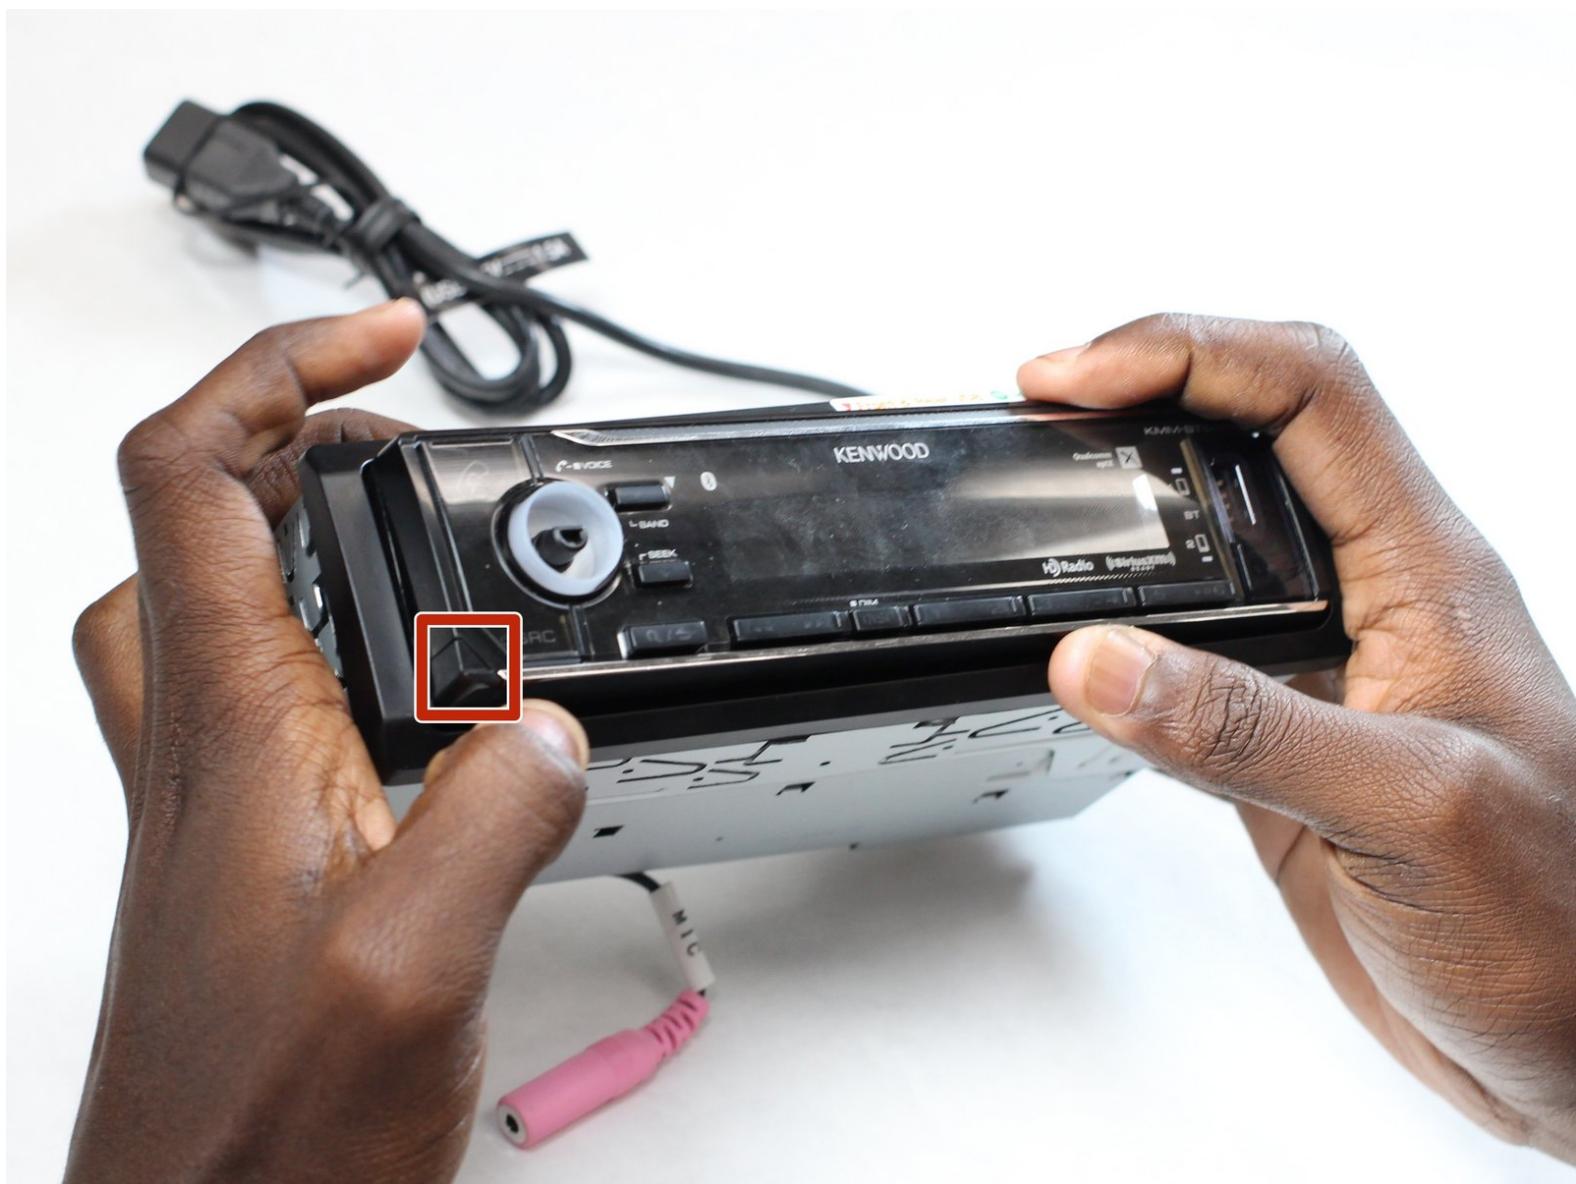

INTRODUCTION

This repair guide might be needed in the event of a defective LCD screen, or when repairing broken buttons in the face plate.

Step 1 — Face Plate

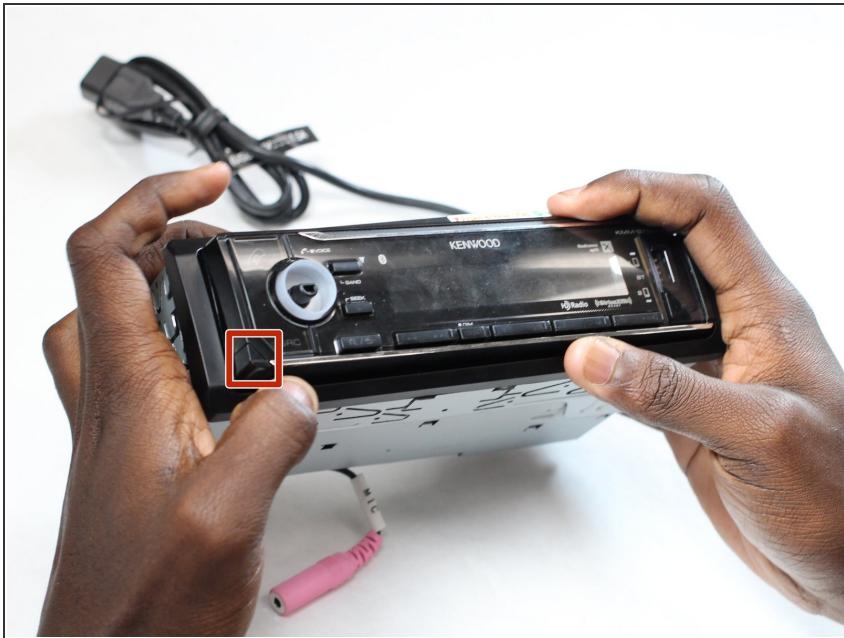

- Press the ejection button on the lower left corner of the face plate.

Step 2



- Remove the face plate by pulling upwards and in the direction of the ejection button.

To reassemble your device, follow these instructions in reverse order.