



Keurig K70 Handle Replacement

If your Keurig K70 does not close properly you may need to replace the handle. This guide will walk you through the necessary steps to do so.

Written By: Westin McHaney



INTRODUCTION

If your Keurig K70 does not close properly you may need to replace the handle. This guide will walk you through the necessary steps to do so. It is an easy fix but requires an uncommon tool.

TOOLS:

- [T15 Torx Screwdriver \(1\)](#)

Step 1 — Handle



- Locate the handle on top of the unit
- Locate the two Torx head screws on the underside of the handle. Remove them with a T15 screwdriver

Step 2



- Bend the handle outward to remove

To reassemble your device, follow these instructions in reverse order.