



# Keurig K70 Limit Switch Replacement

Use this guide to replace the Limit Switch in your Keurig K70.

Written By: Kyle Maxwell



## INTRODUCTION

Use this guide to replace the Limit Switch that tells the Keurig that the K-Cup section is closed.

### TOOLS:

- **Phillips #2 Screwdriver (1)**
- **Phillips #1 Screwdriver (1)**

## Step 1 — Limit Switch



- Open the K-Cup Holder by lifting the handle.

## Step 2



- While looking upwards from underneath the Keurig, remove the two 8mm Phillips #2 screws from underneath the black plastic "shroud".

## Step 3




- Remove the black plastic "shroud" by pushing inwards and then pulling upwards to disengage the plastic hooks that are not visible.

## Step 4



- Remove the two 10mm Phillips #1 screws from the switch.

## Step 5

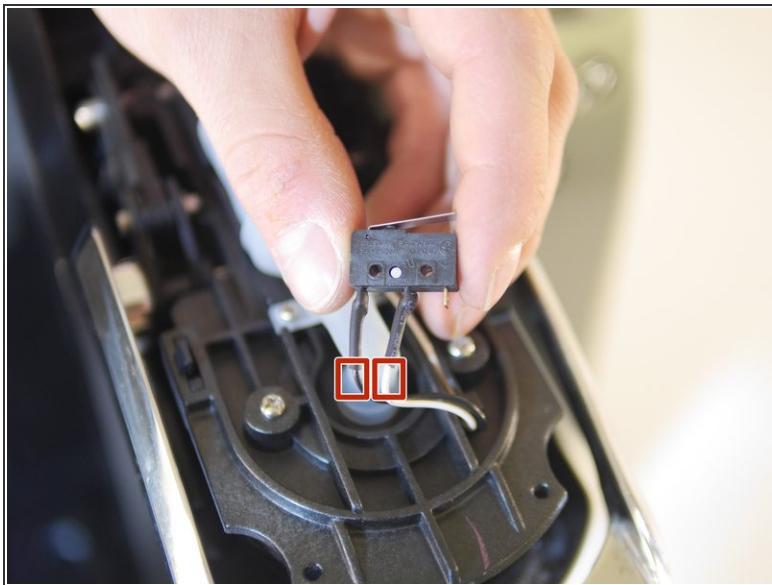

- Remove the switch by cutting the two connecting wires. Reconnect a replacement switch [using this guide to join wires with solder](#), or [using this guide to solder connections](#), or by using any other technique to connect wires.

To reassemble your device, follow these instructions in reverse order.