




Keurig Mini B-31 Top Needle Replacement

If your K-cups are not being punctured properly, you may need to replace your Keurig Mini's needles. This guide will walk you through the steps to do so.

Written By: Andrew Adriance

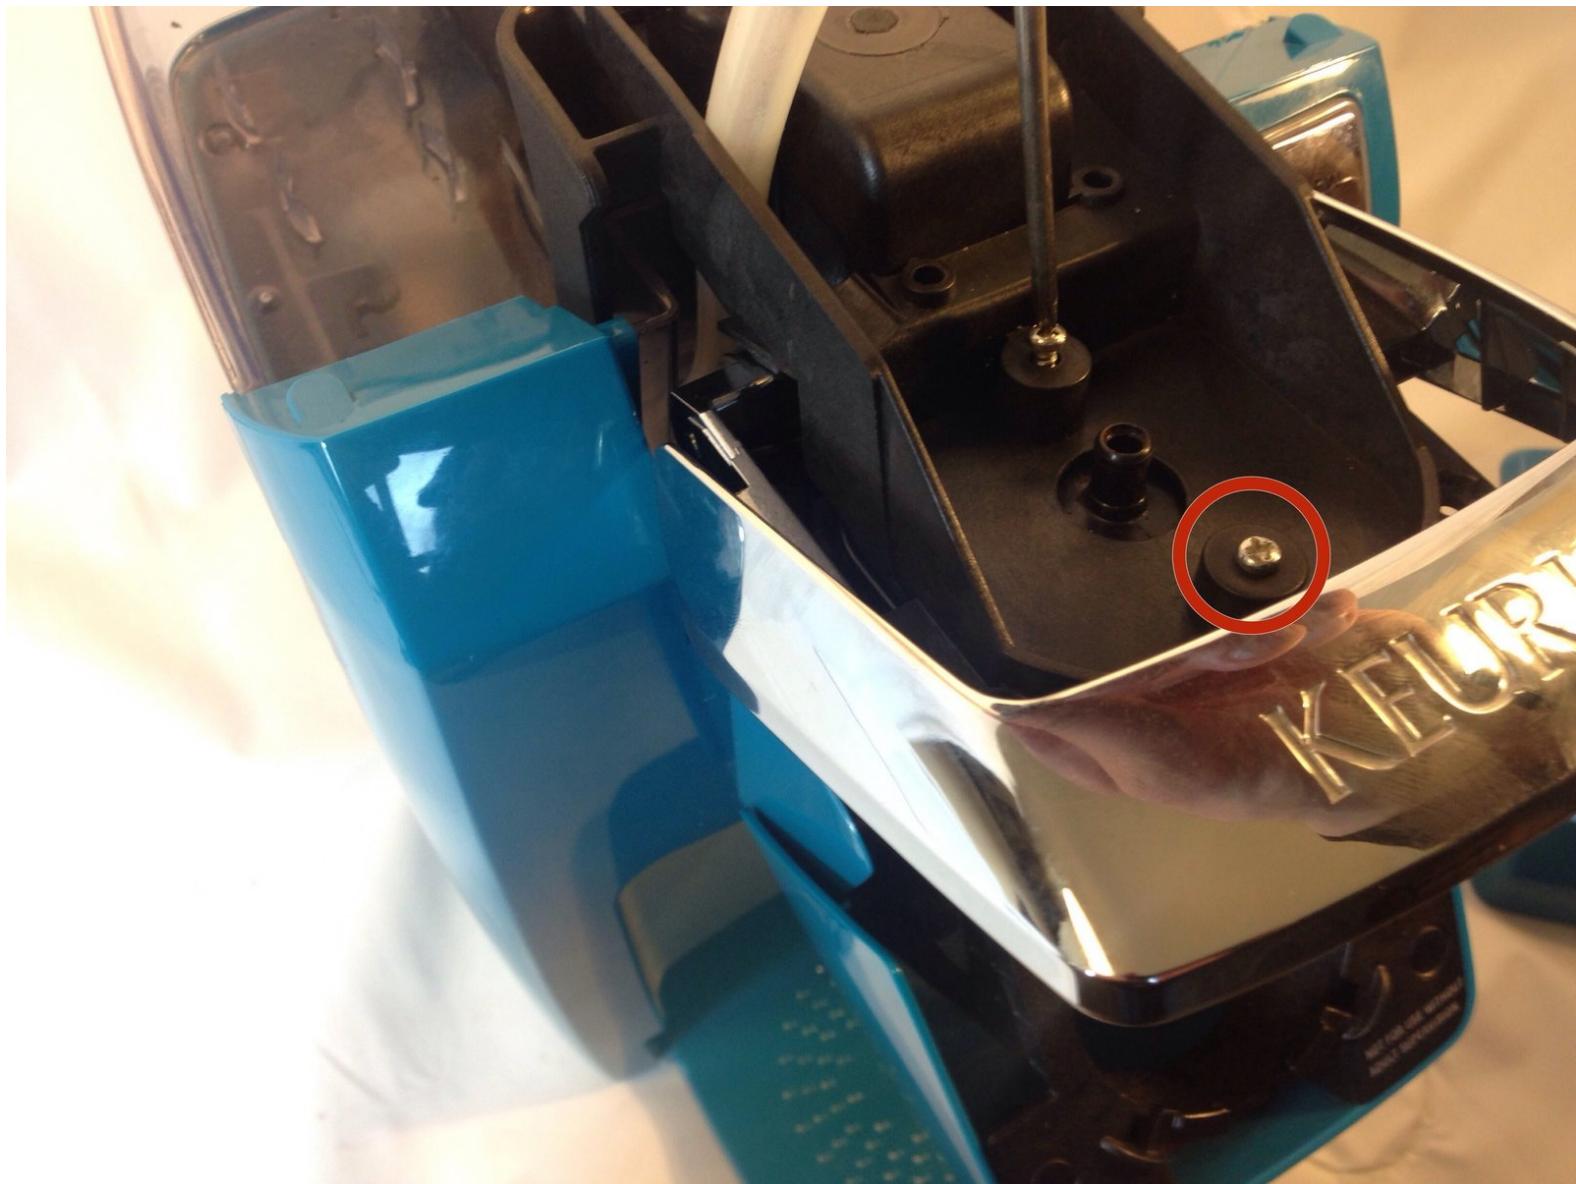

INTRODUCTION

This guide will help walk you through the steps of replacing the needle of a Keurig Mini. To get into the device all you will need is a #1 Philips screw driver.

TOOLS:


- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — K-cup holder



- Lift up the handle of the Keurig Mini.

Step 2

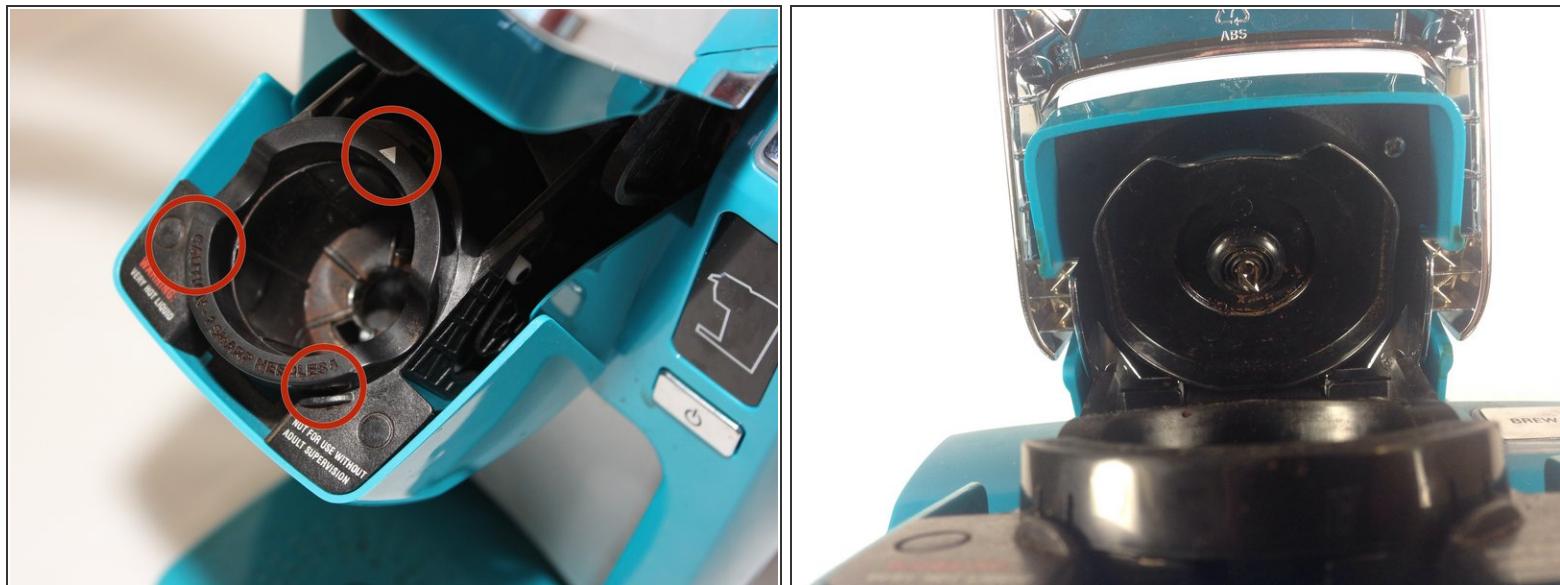

⚠ Make sure to avoid the needles above and inside the K-cup because may puncture your hand

- Firmly place a finger on each one of the three tabs that hold the K-cup holder into place, pushing in lightly. The tabs are difficult to see, but they are there and will make the removal easier. The top tab is located in the same location as the white triangle and the bottom two are located under the plastic bumps highlighted in the picture.

Step 3



- Firmly rock the K-cup holder from side to side, loosening the K-cup holder from its seat.

Step 4




- Pull the K-cup holder straight out.

Step 5 — Top




- Open the top lid of the Keurig.
- Pull directly outwards on one of the arms that holds the top lid in place. It will take some force to get the arm off the peg. Once one side is off, repeat the process on the second arm.

Step 6

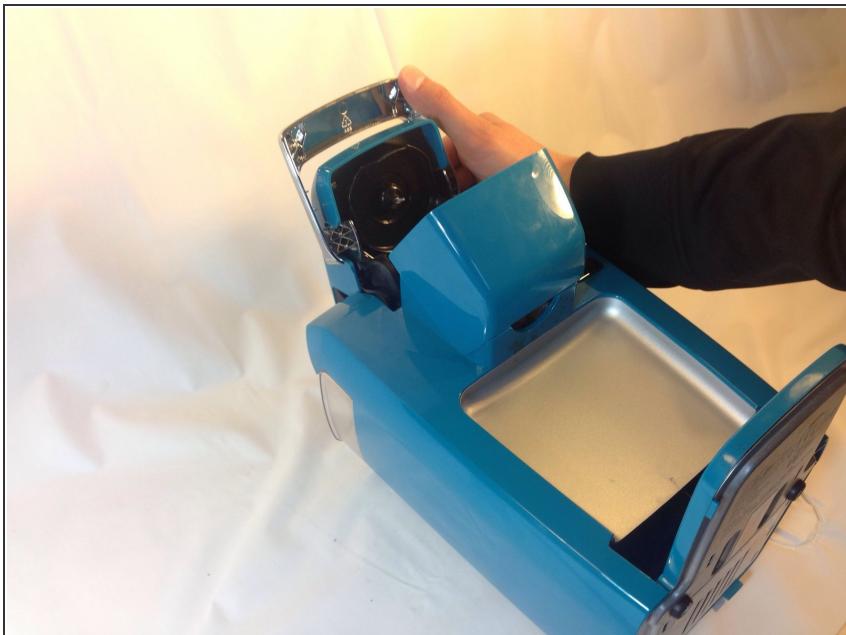

- Lay the Keurig on its back with the water reservoir pointing away from you.


Step 7

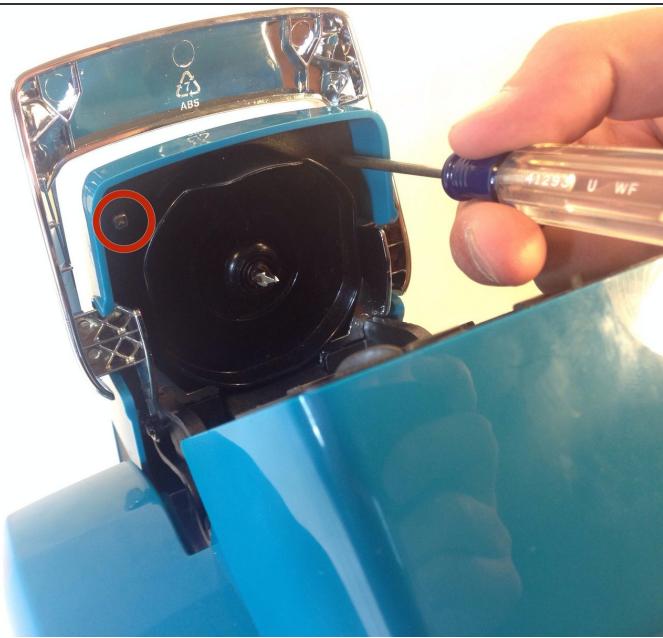

⚠ Avoid the top needle as it may puncture your hand.

- Unscrew the two 9mm #1 Philips screws that hold the top plastic cover in place.

Step 8

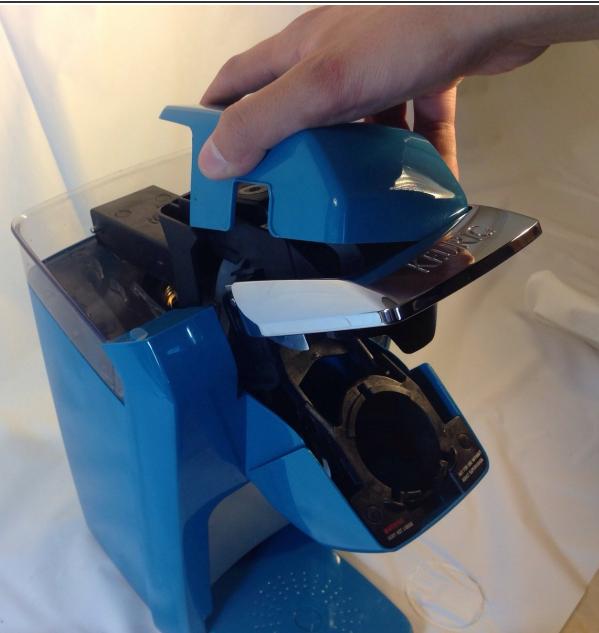

- Set the Keurig in an upright position with the front side facing you.
- Pull the cover off the top of the Keurig. It should come off easily with little force.

Step 9



- Firmly grasp the hose and pull it off of the plastic nozzle.

Step 10 — Top Needle



- Unscrew the two 9 mm #1 Philips screws at the top of the device.

Step 11



- Push down lightly on the nozzle that the hose was attached to. The plastic housing along with the needle should pop off without much force.

To reassemble your device, follow these instructions in reverse order.