




# Kicker CXA300.1 Bass Remote Replacement

A guide on how to replace the bass remote in the Kicker CXA300.1

Written By: Tim Keptya

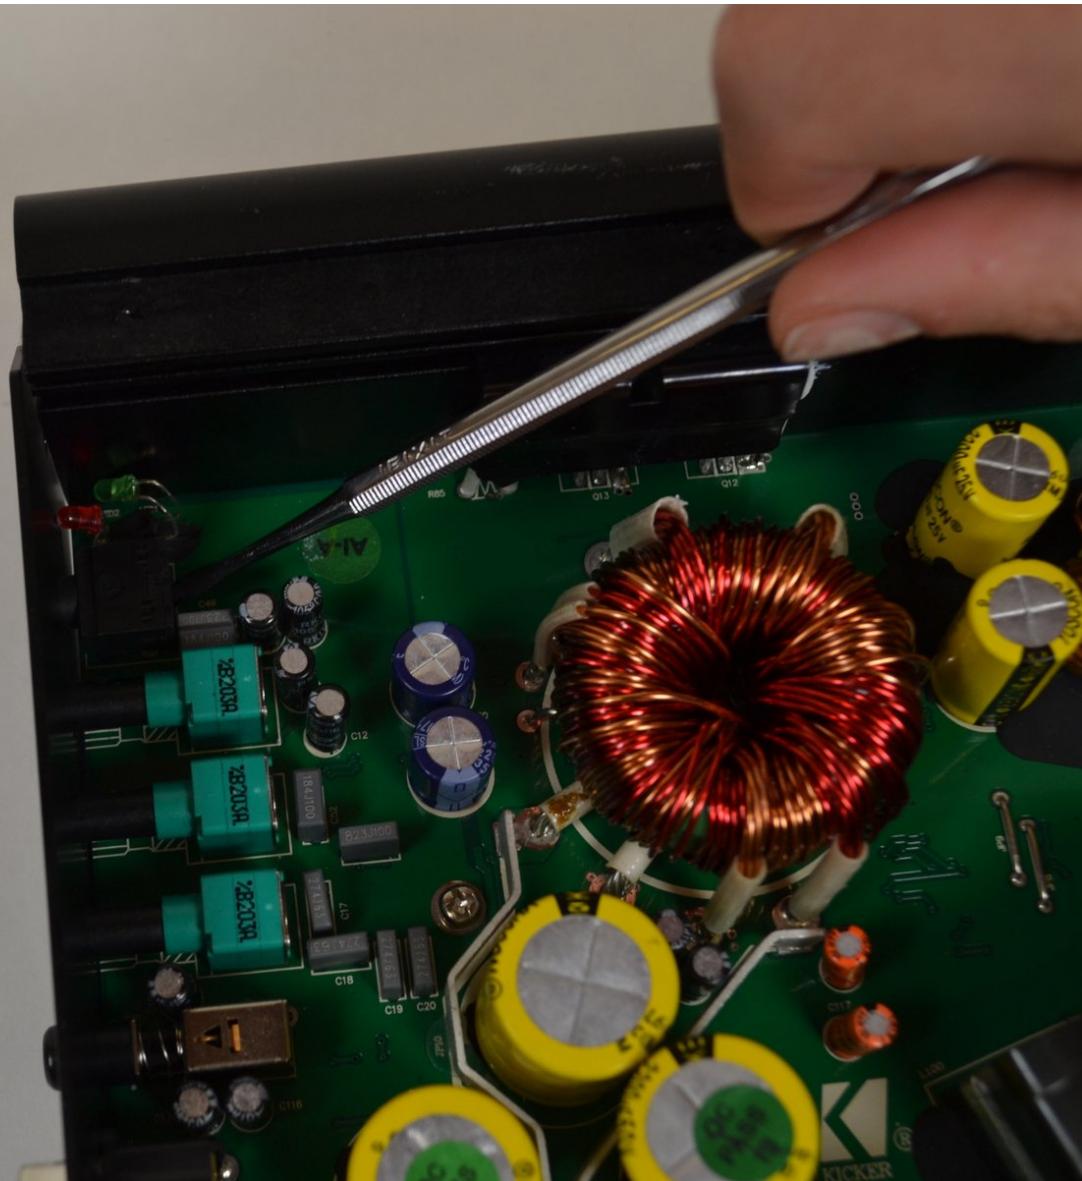


## INTRODUCTION

A guide on how to replace the bass remote in the Kicker CXA300.1

### TOOLS:

- [2mm Hex Key](#) (1)
- [T10 Torx Screwdriver](#) (1)
- [Portable Soldering Iron](#) (1)

## Step 1 — Bass Remote

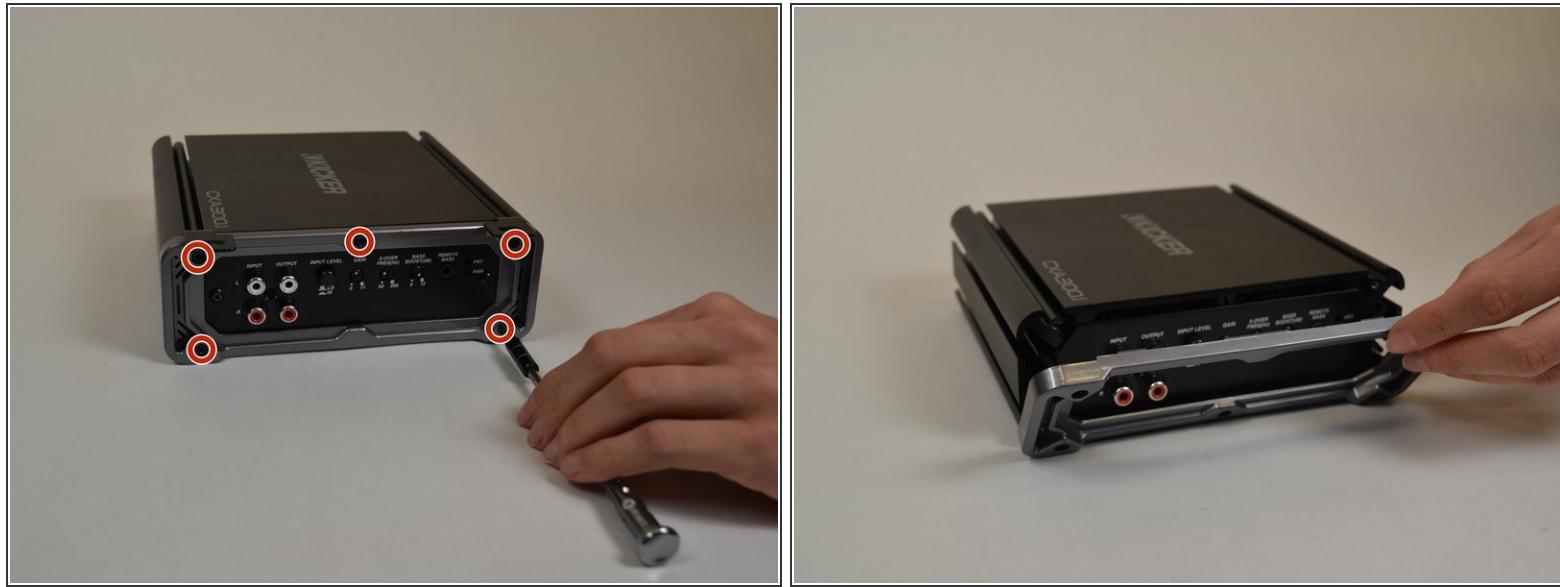


- Remove the five T10 Torx screws on silver plate.

## Step 2




- Remove the two T10 Torx screws from the faceplate.

## Step 3

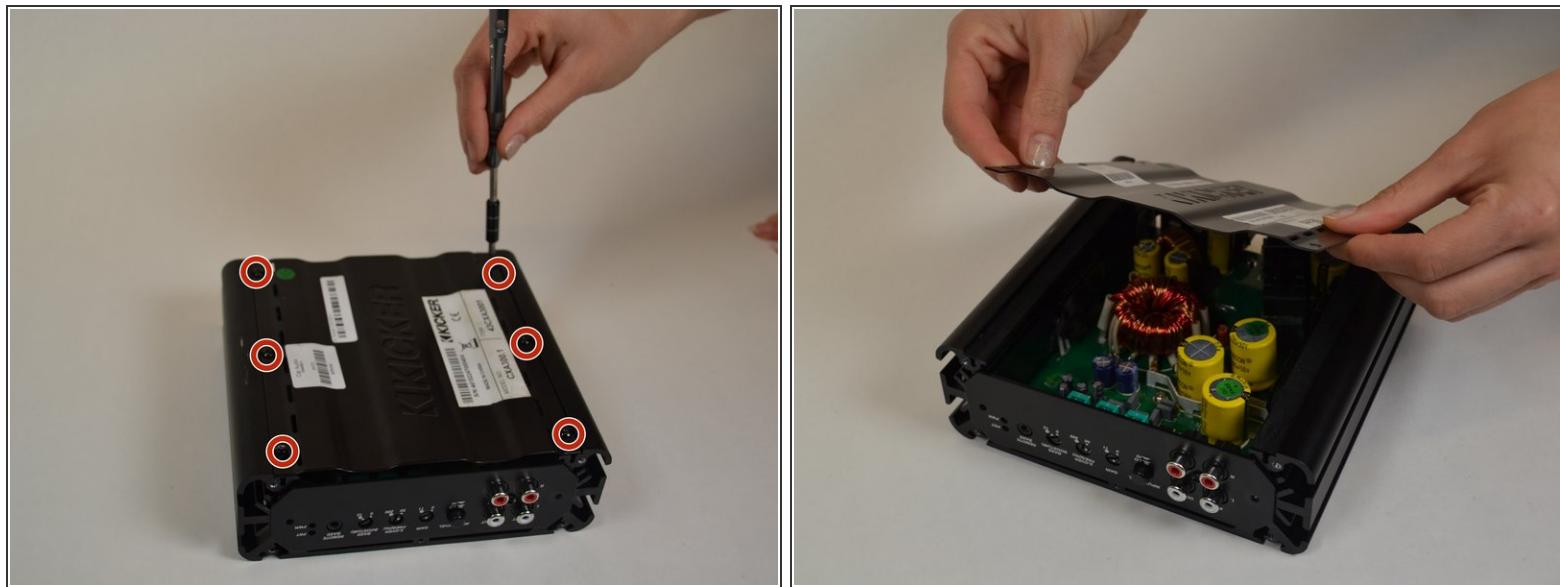

- Remove the six T10 Torx screws from the bottom.
- Remove bottom panel.

## Step 4

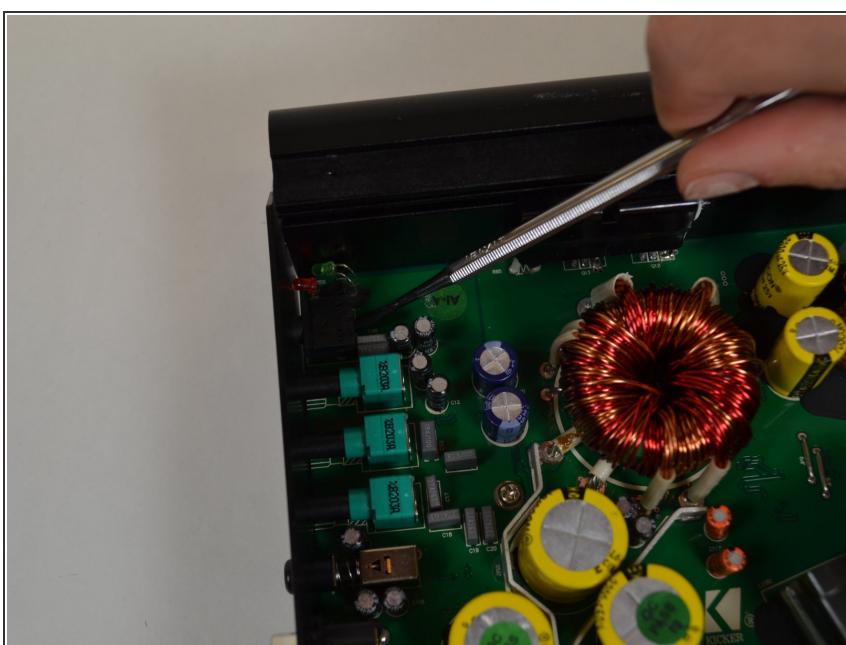

- Desolder the remote receiver from the motherboard.

To reassemble your device, follow these instructions in reverse order.