


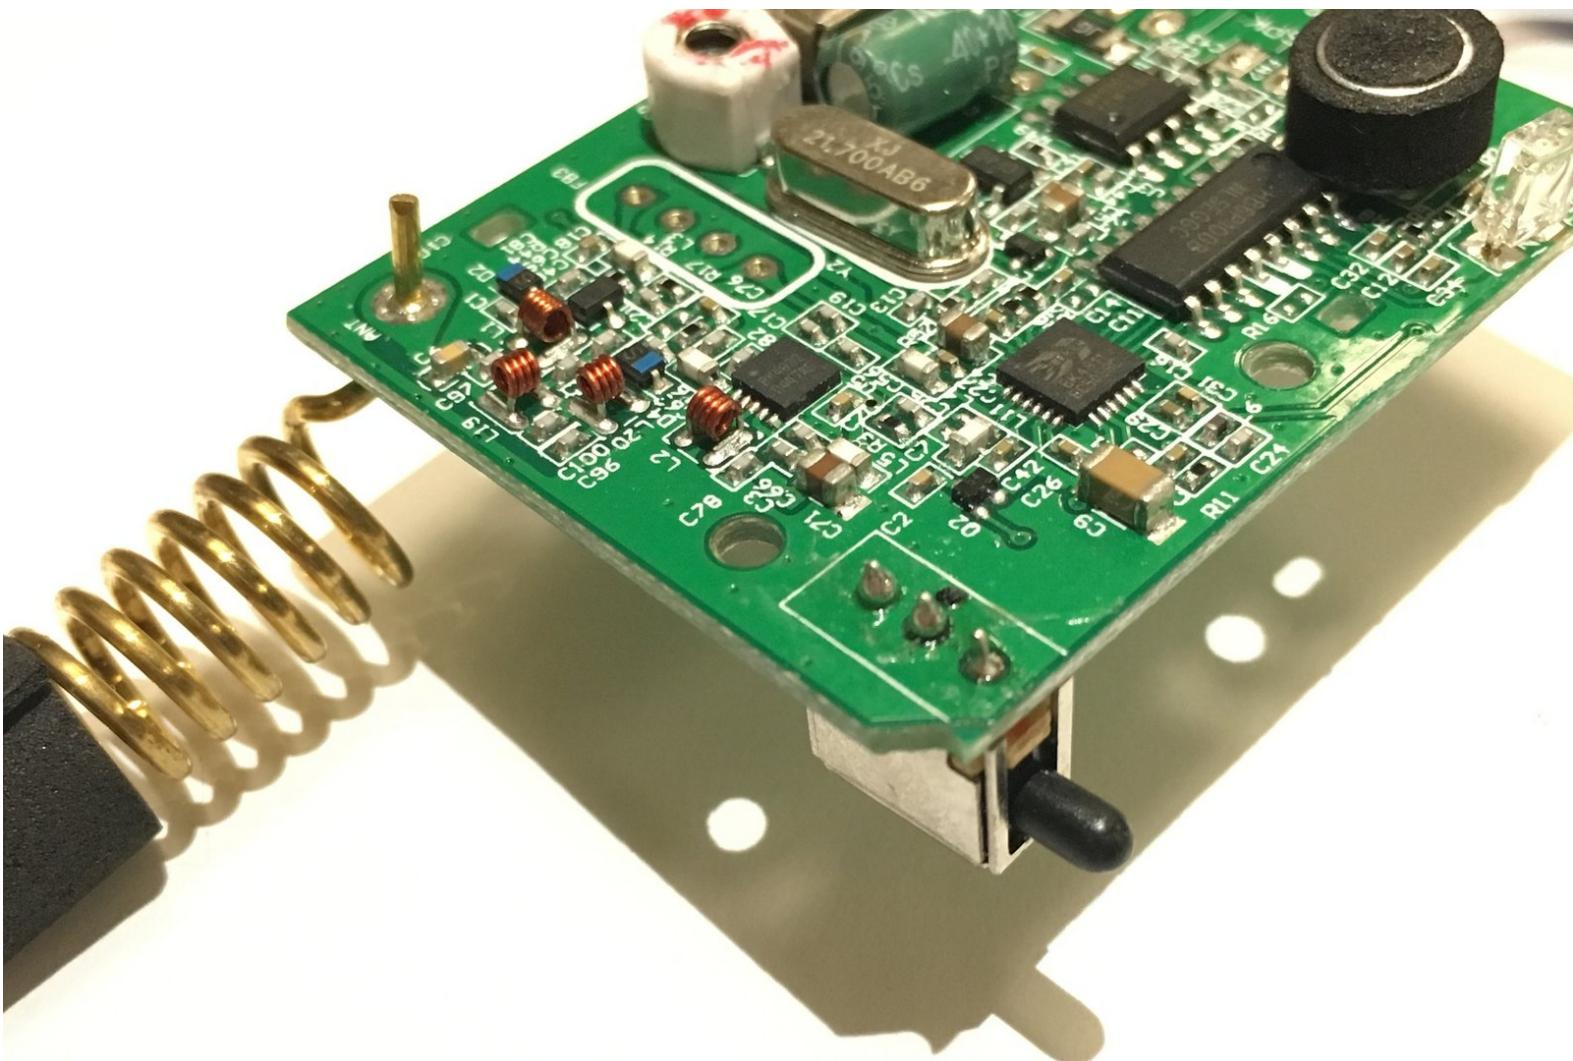

KidzLane Walkie-Talkie Press-to-speak button Replacement

In this guide, you will be shown how to replace the Press-to-speak button on the KidzLane Walkie-Talkie in 4 easy steps.

Written By: Amin



INTRODUCTION

You will need a small Phillips head screwdriver and a soldering device to complete this project.

TOOLS:

- [Small Phillips Head Screwdriver](#) (1)
- [Portable Soldering Iron](#) (1)

Step 1 — Press-to-speak button




- Place the Walkie-Talkie on a flat surface-preferably a table or a desk.
- Flip the device over to where you see four screws in each corner.
- Make sure you take out the batteries before proceeding.

Step 2




- Using your Phillips head screwdriver, unscrew all four 4mm screws from each corner.

Step 3

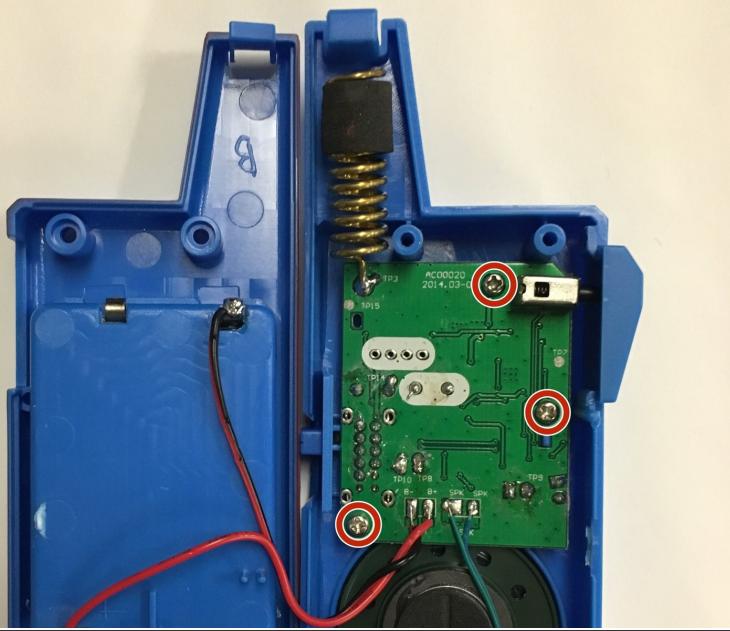

- Once you have unscrewed all four corners, open the device so it will be in two parts.
- As you're opening the inside of the Walkie-Talkie, don't break off any wires within the device.
- Taking the Phillips head screwdriver again, unscrew the three screws on the circuit board (green plate).
- Separate these screws from the other four since they are different sizes.

Step 4

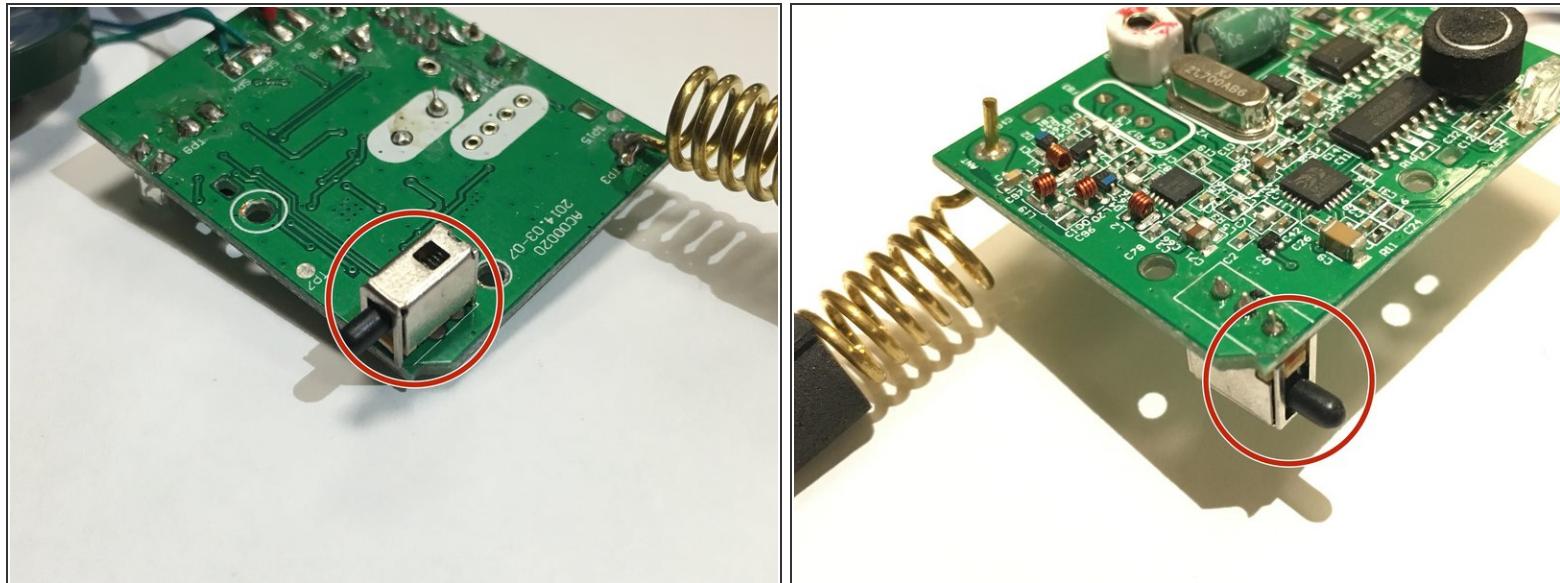

- Take the circuit board out of the plastic casing.
- Use the soldering device to iron the silver box (press-to-speak button), and then remove it from the circuit board.
- Replace the button with a new one.
- Reassemble the Walkie-Talkie by screwing in all seven screws in their correct holes and putting the two sides back together.