




# Kidzlane Walkie-Talkie Battery Replacement

Use this guide for instructions to be able to replace the batteries.

Written By: Amin

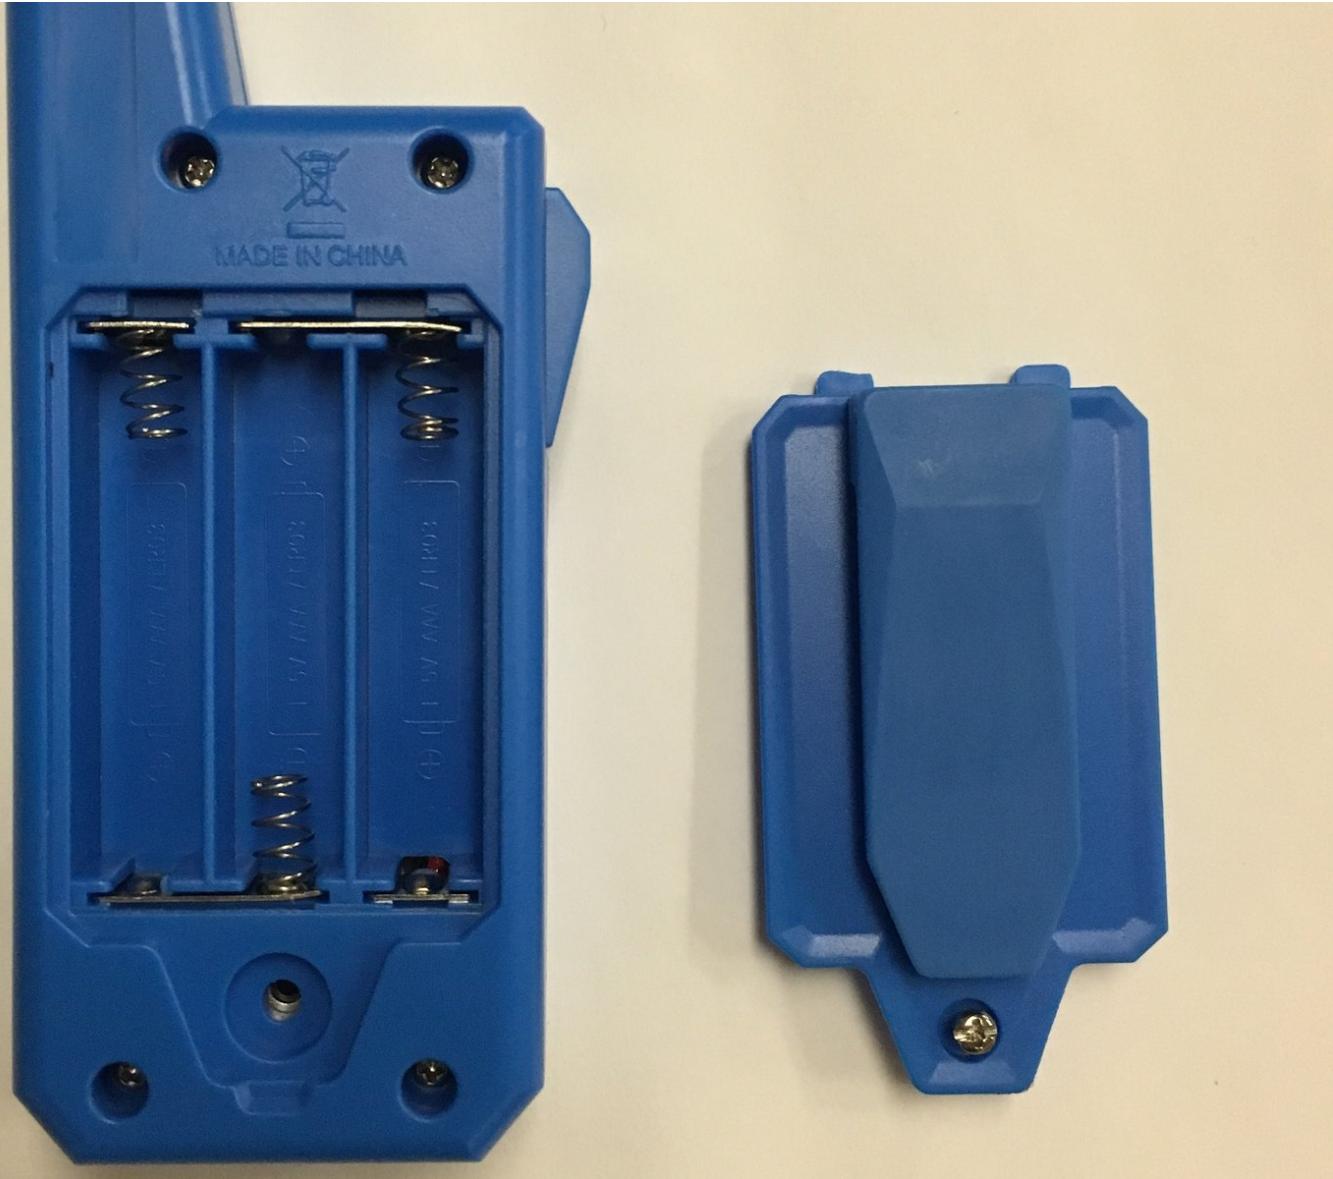

## INTRODUCTION

This guide demonstrates how to safely remove and replace the batteries in a Kidzlane Walkie-Talkie.

### TOOLS:


- **Phillips #0 Screwdriver (1)**

## Step 1 — Battery



- Position the device so the bottom panel is facing up.
- Use a screwdriver to remove the highlighted 4 mm screw.

## Step 2

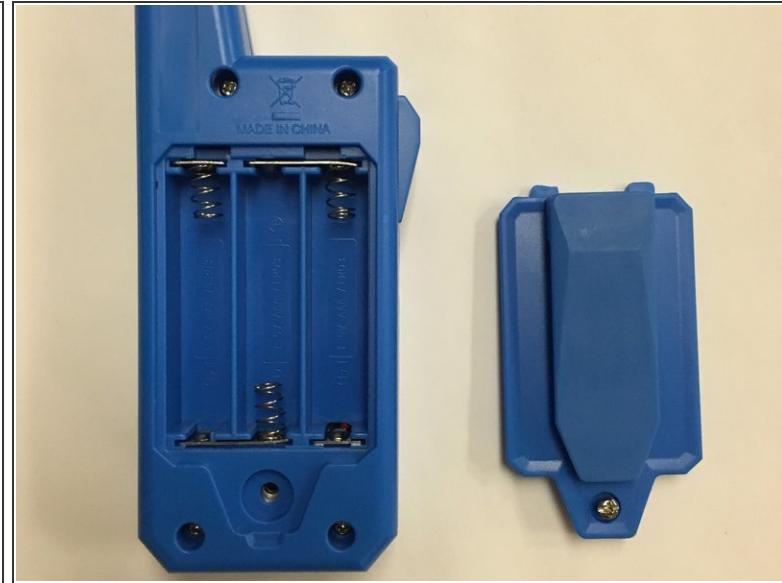

- Remove the battery cover. Replace the old batteries with the new ones.

To reassemble your device, follow these instructions in reverse order.