


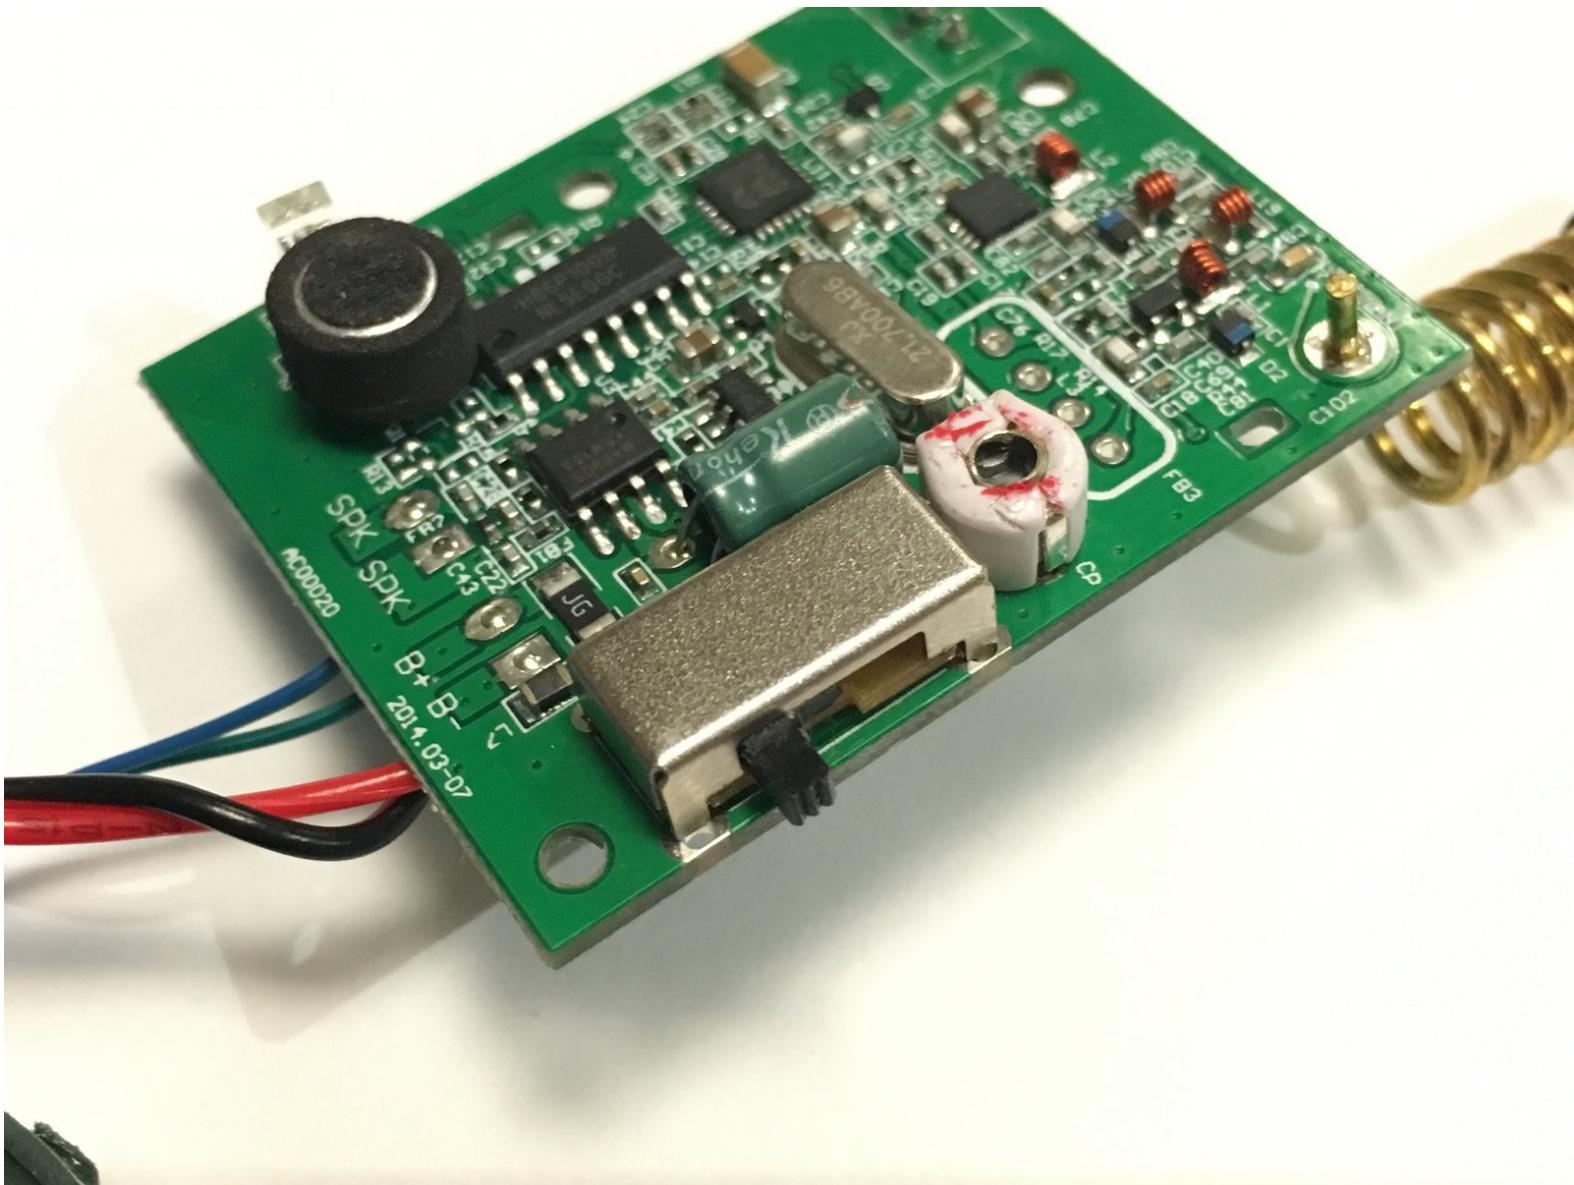

# Kidzlane Walkie-Talkie Power Button Replacement

You will be able to replace the power button. If you successfully follow the rules, you will be able to replace the button securely.

Written By: Amin



This document was generated on 2019-09-18 01:33:18 PM (MST).

## INTRODUCTION

You will need to use solder device in order to be able to replace the power button.

### TOOLS:


- [Soldering Workstation \(1\)](#)
- [Philips screwdriver \(1\)](#)

## Step 1 — Power Button





- Use a screwdriver to remove the four pictured 4mm screws.

## Step 2

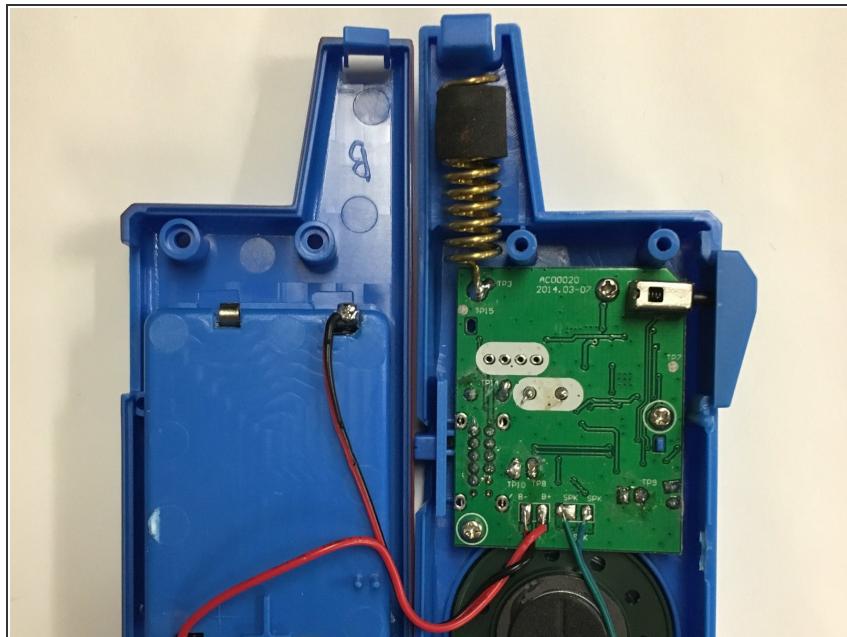

- Slowly separate the cases of the device. Try not to damage the wires connecting the two pieces.
- Keep the two pieces away from each other so you can follow the next step accordingly.

## Step 3

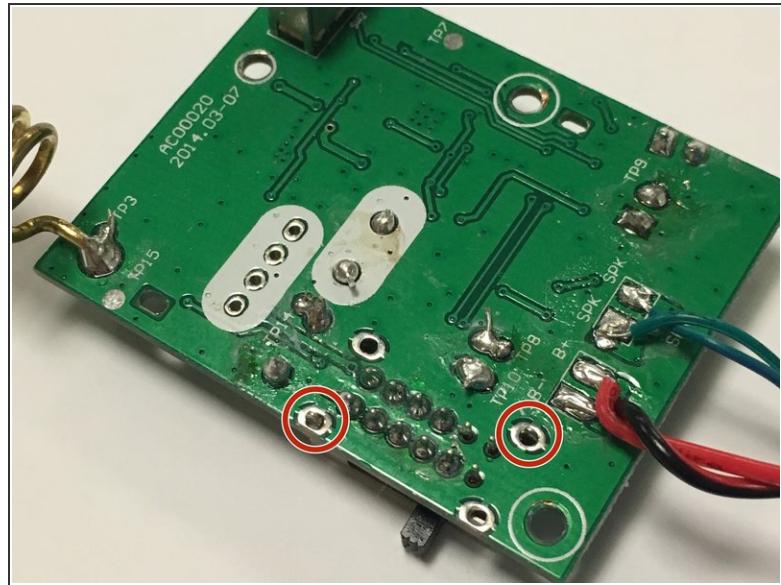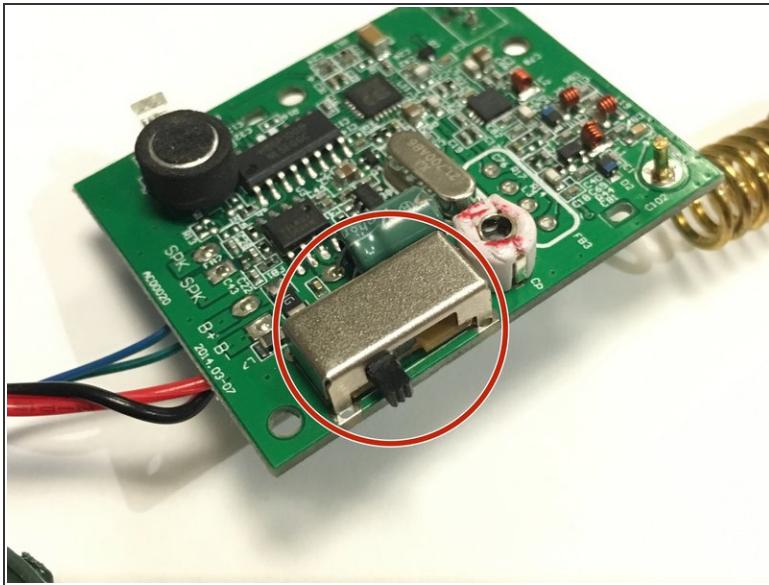

- Use the soldering iron to remove the broken switch.
- Push down on the metal locks to separate the switch from the motherboard.

To reassemble your device, follow these instructions in reverse order.