



# Kindle 7th Generation Back Panel Replacement

Your back panel is cracked or damaged.



Written By: Abby Roulier



 **TOOLS:**

- [T5 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Magnetic Project Mat \(1\)](#)

## Step 1 — Front Panel

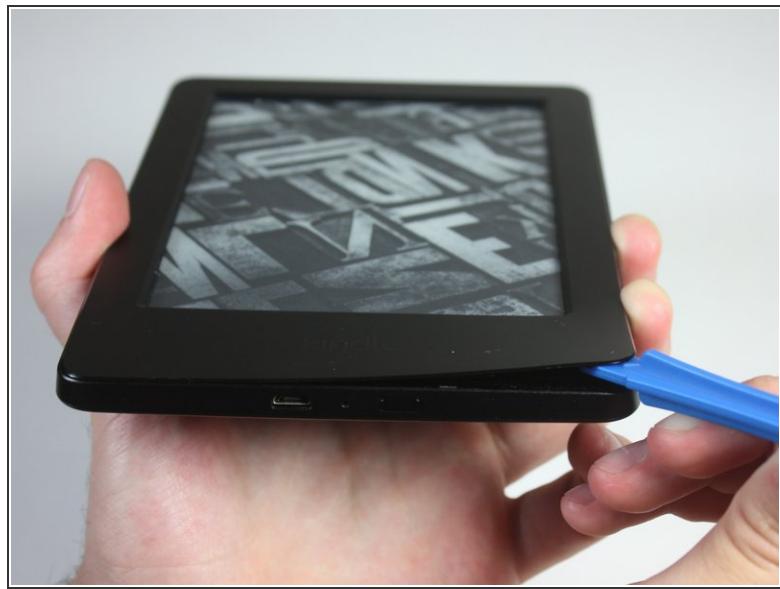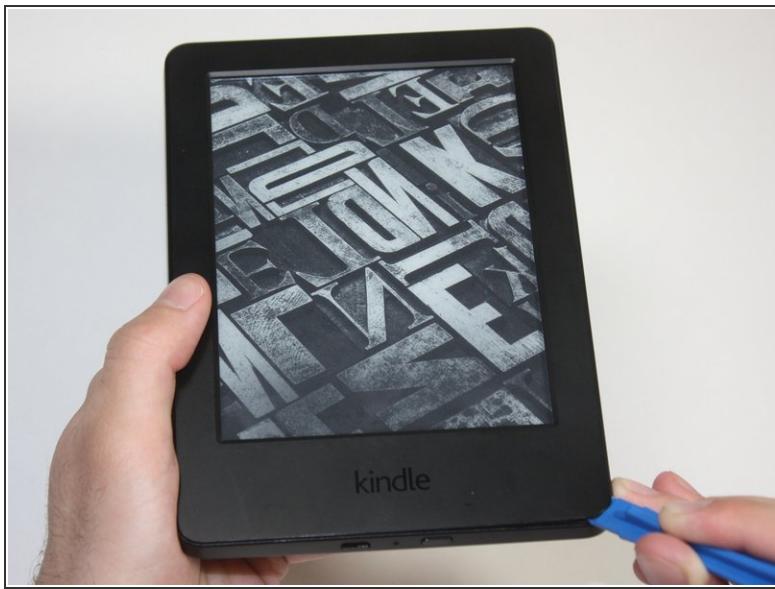

⚠ Power off your Kindle before beginning disassembly.

- At each corner, use the blue plastic opening tool to unhook and separate the front panel from the adhesive.
- Run the tool along the seams to pry open the front panel.

## Step 2




- Peel the front panel off to remove it from the Kindle.
- ⚠ If this is the first time the front panel has been removed, the adhesive may require a significant amount of force to undo.
- To prevent damaging the front panel, peel the panel from the corners towards the middle of the Kindle.
- 📌 When reassembling your device, if you are replacing the front panel, additional adhesive may be required.

## Step 3 — Back Panel



- Remove the ten 5.0 mm Phillip Head screws with the T5 Torx screwdriver.
- *(i)* A magnetized screw mat can help you keep track of your screws.

## Step 4

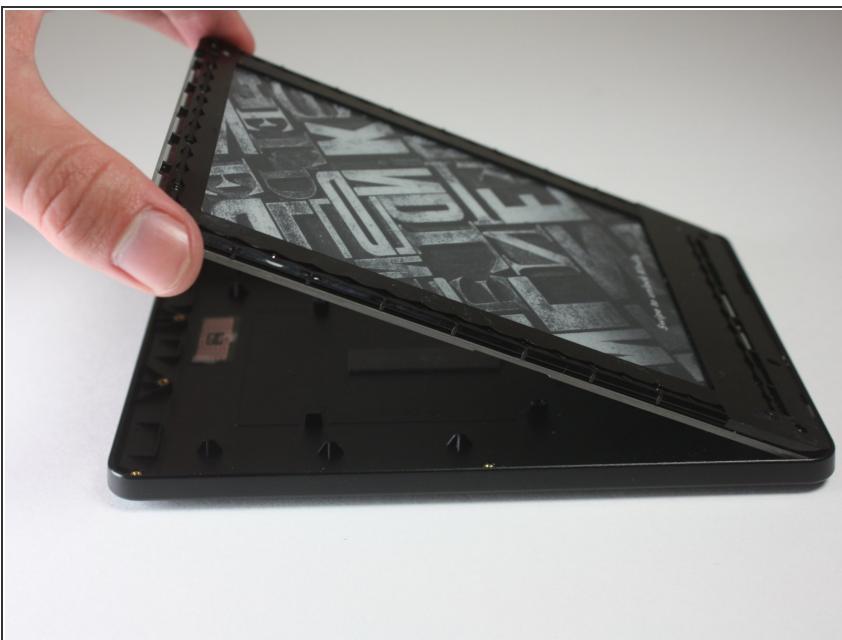

- Working evenly along the corners and edges, separate the internal contents from the back panel.
- *(i)* There are many clips securing the screen to the back panel. Force will be required to remove the back, but you should never feel that the Kindle may break.

To reassemble your device, follow these instructions in reverse order.