



Kindle Fire HD 10 Screen Replacement

In this guide you will be replacing the screen and the digitizer in a 7th generation Kindle Fire HD 10.


Written By: William Hess



 **TOOLS:**

- [iOpener \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [Jimmy \(1\)](#)

Step 1 — Screen

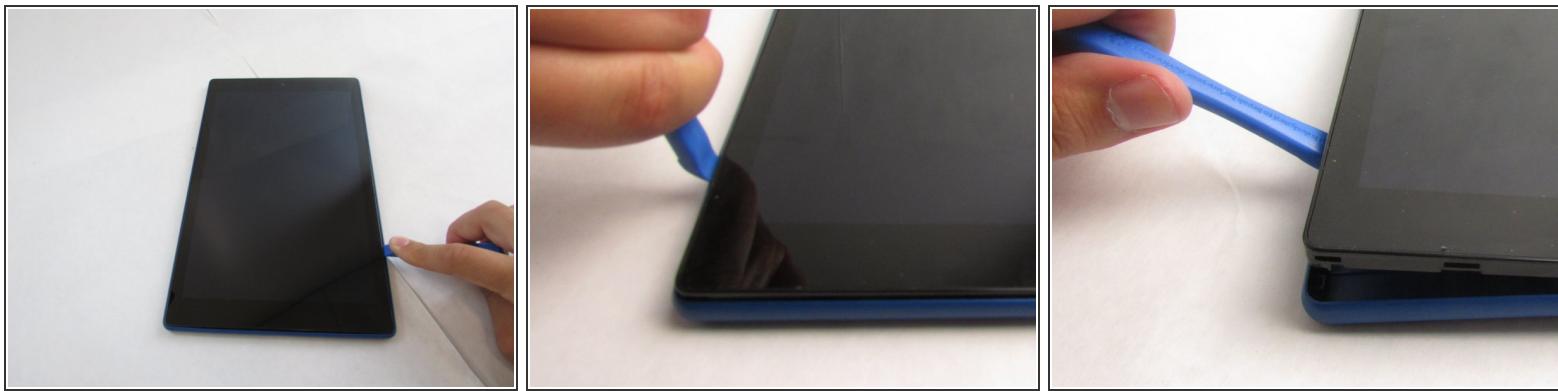

- Pry open the case using the iFixit tool.
- Make sure to go around the whole case before removing the whole case.

Step 2



- After removing the casing, flip the tablet over so the screen is facing down.

Step 3



- Pry open the ZIF connector that is attached to the screen carefully using an iFixit Jimmy tool.
- Pull out the connector using the rubber tipped tweezers carefully.


Step 4



- Heat up an iOpener (or use a heatgun) and apply it along the edges of the screen.
- Begin to pry open the edges of the screen carefully using an opening pick.

(i) It may help to pry open the edges first.

Step 5

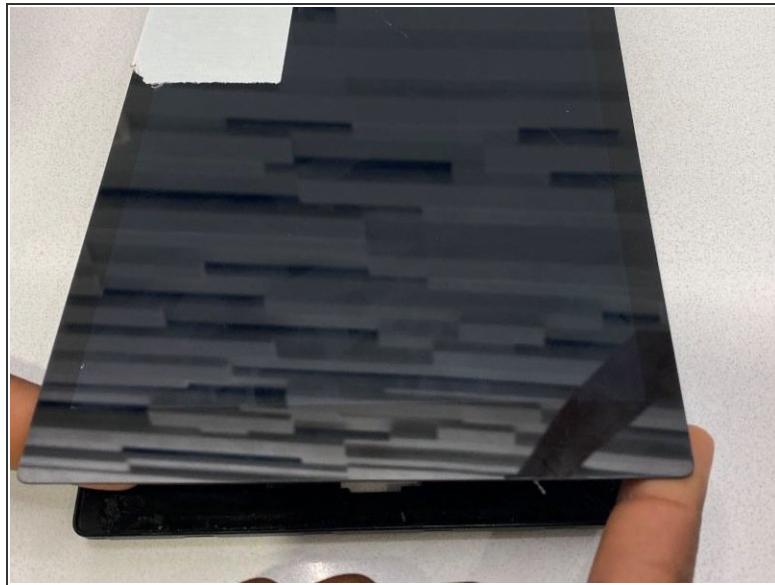

- Remove the screen with your fingers.

To reassemble your device, follow these instructions in reverse order.