



# Kindle Fire HD 10 Sound and Power Button Replacement

How to replace the sound and power buttons in an 7th generation Amazon Kindle Fire HD 10.


Written By: William Hess



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

## Step 1 — Sound and Power Button

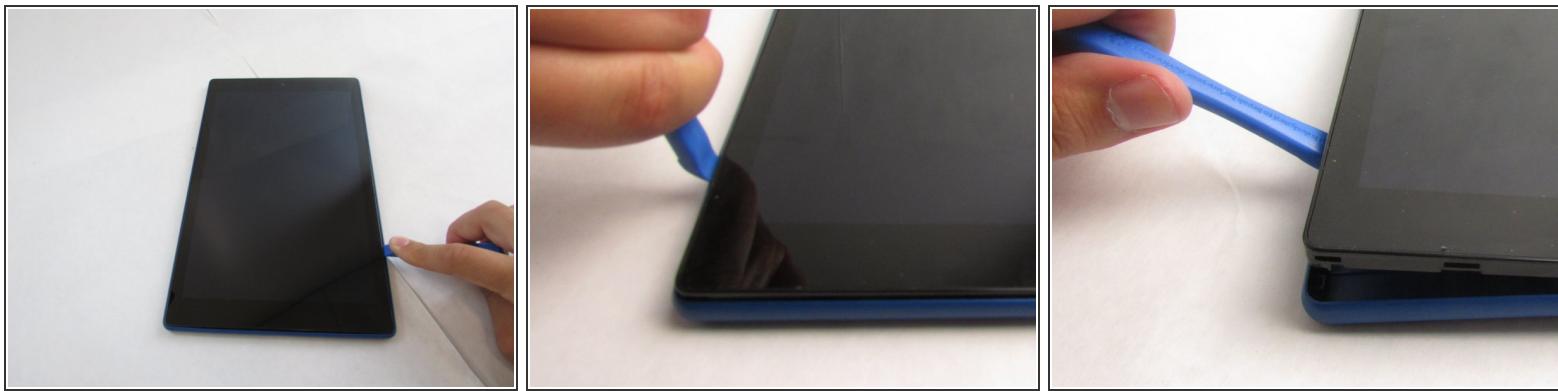


- Use an iFixit opening tool to pry open the back case.
- Make sure to go around the whole case before removing the whole case.

## Step 2




- Power and Sound Buttons can be found on the top of the device.

## Step 3

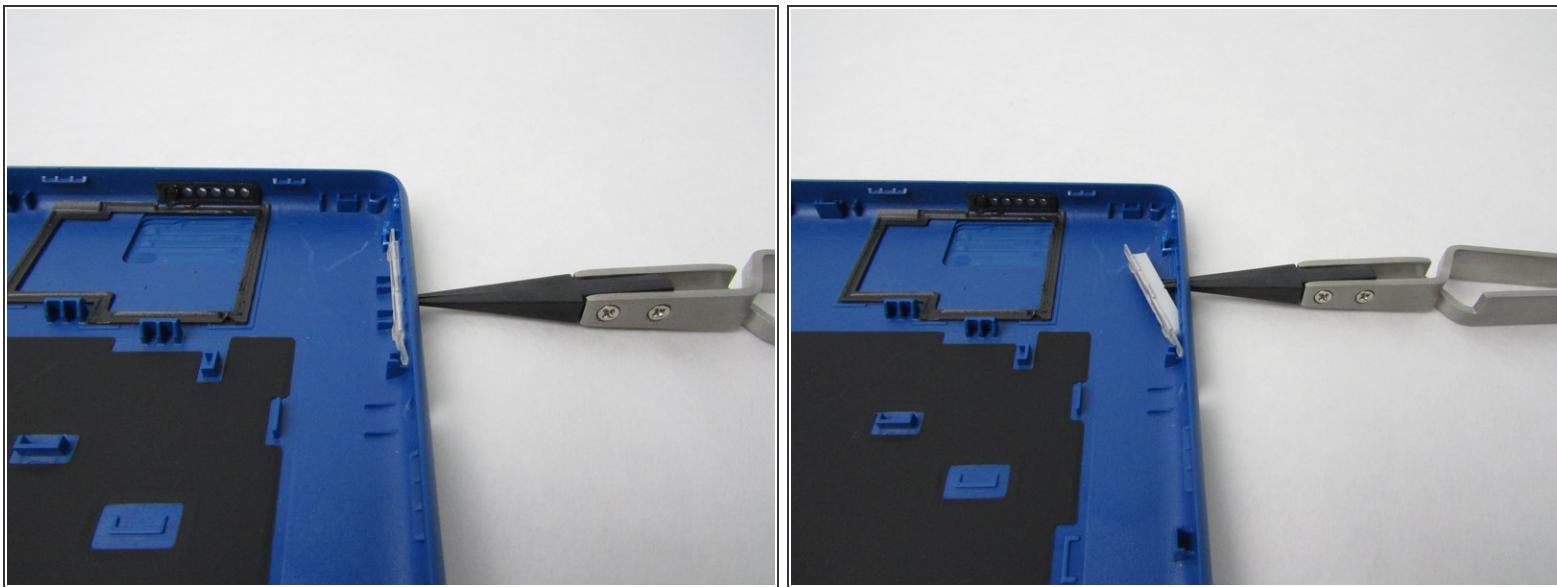

- Push out the sound button with the tweezers gently.
- Use tweezers to then remove the button.

## Step 4

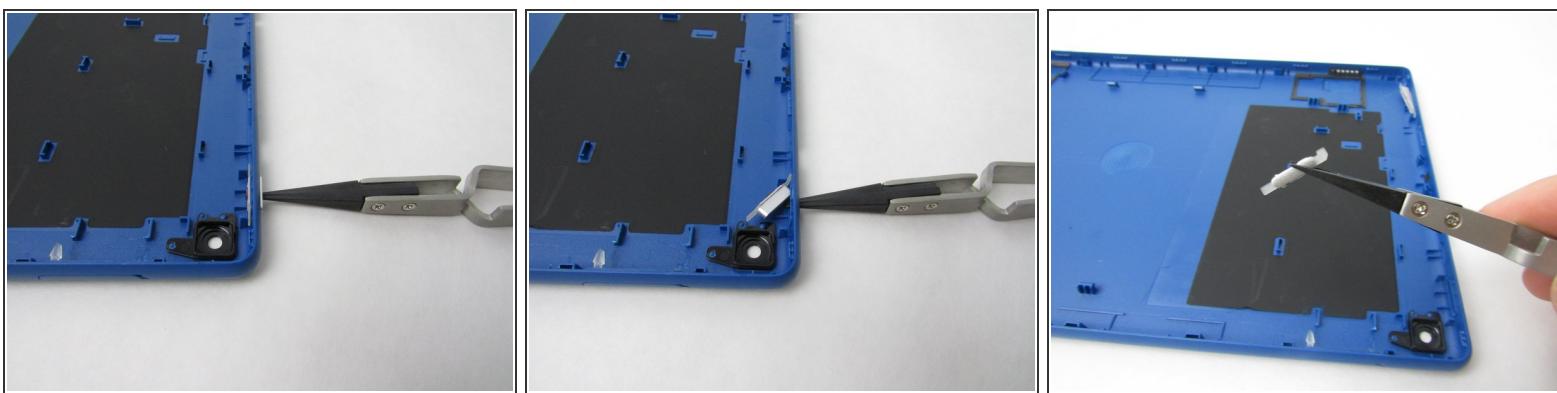

- Use tweezers to remove and pick up the button carefully.

To reassemble your device, follow these instructions in reverse order.