




Kindle Paperwhite 2nd Generation Power Button Replacement

This is a walk through on how to replace the power button on an Amazon Kindle Paperwhite 2.

This guide requires the device be powered off, an opening tool, and a screwdriver.

Written By: Tyler Davis

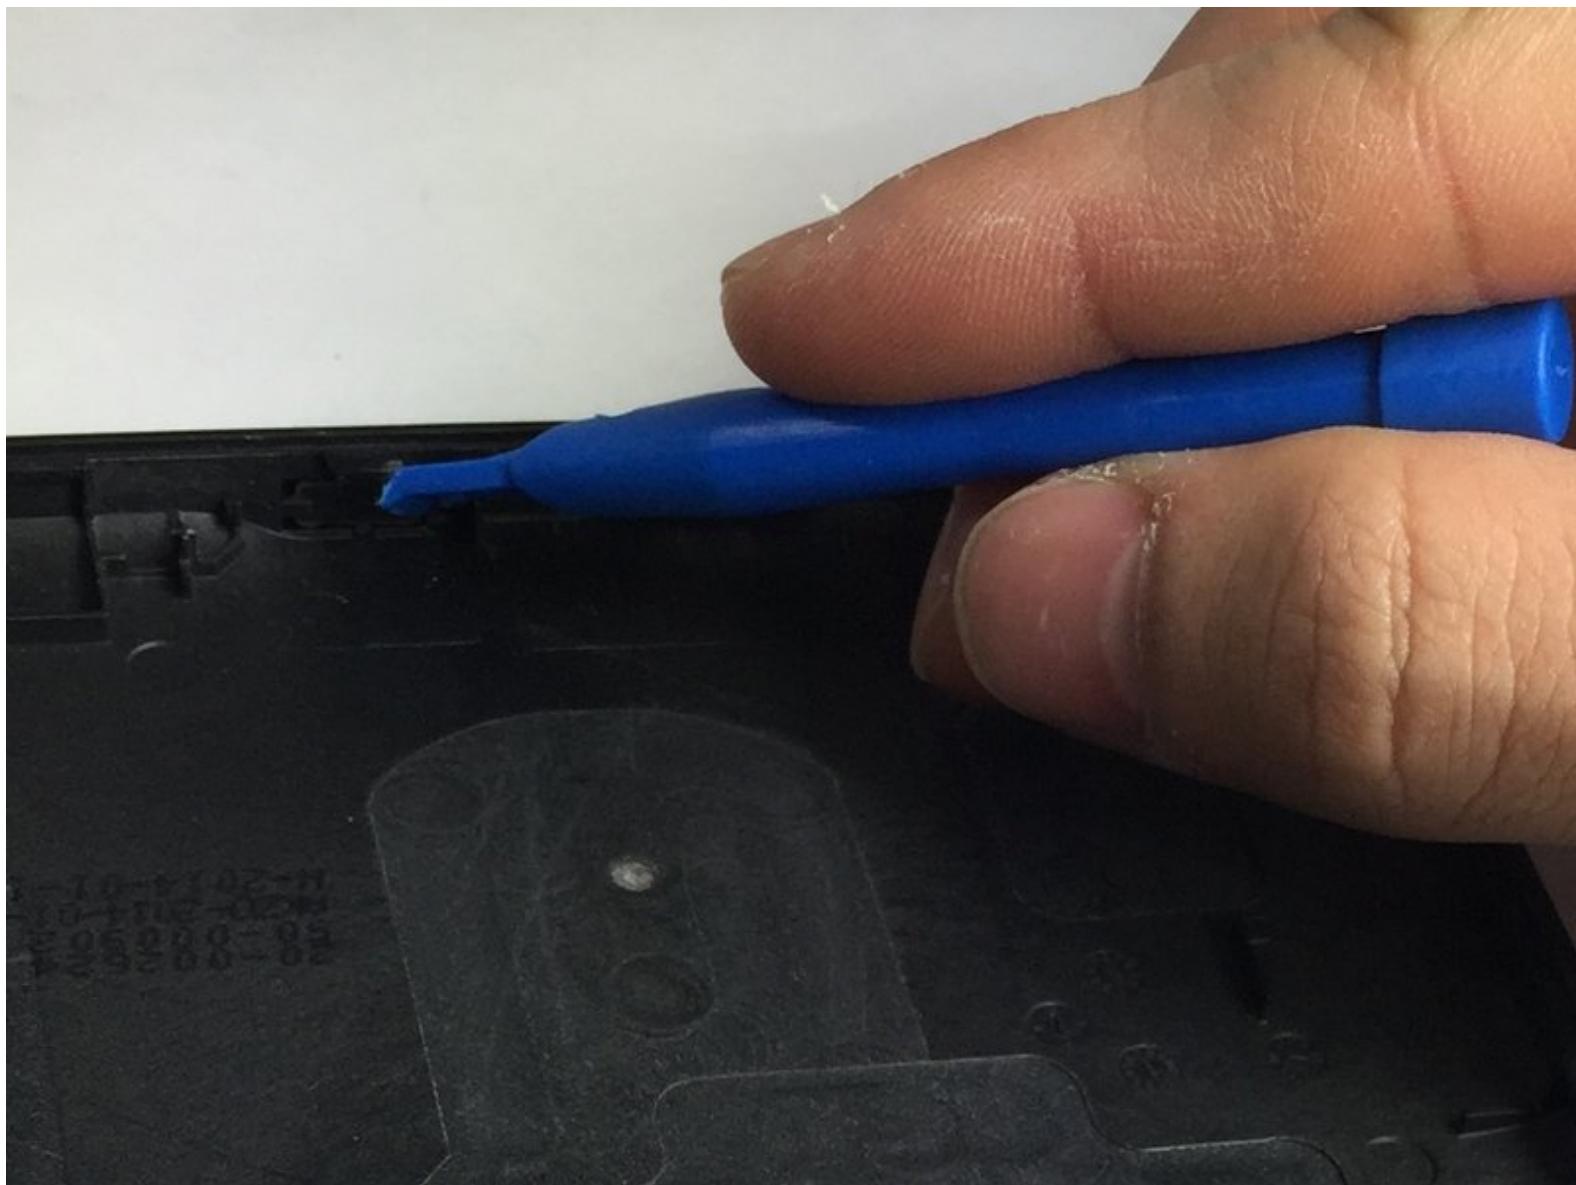

This document was generated on 2019-09-20 03:45:47 AM (MST).


INTRODUCTION

Disassembling a tablet often requires some gentle prying of the frame. Be sure to exercise care during these first few steps(disassembling), and do not lose your screws! The Paperwhite is a sturdy tablet that can be broken down into just a few components. This guide will show you in just three short steps how to replace a bad power button.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Power Button

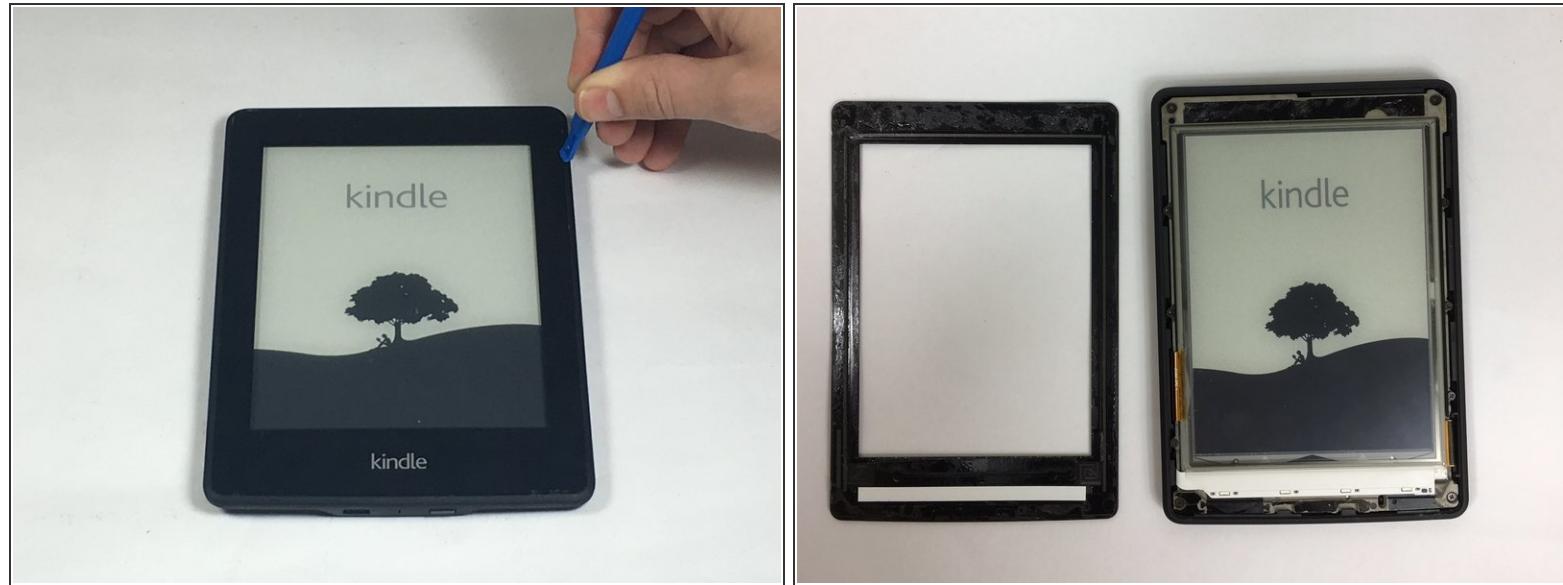

- Insert plastic opening tool into the corners of the Paperwhite and slide around the edge perimeter to remove bezel.
- ① Be sure to begin prying along the edges, these are the optimal points for removing the bezel.

Step 2

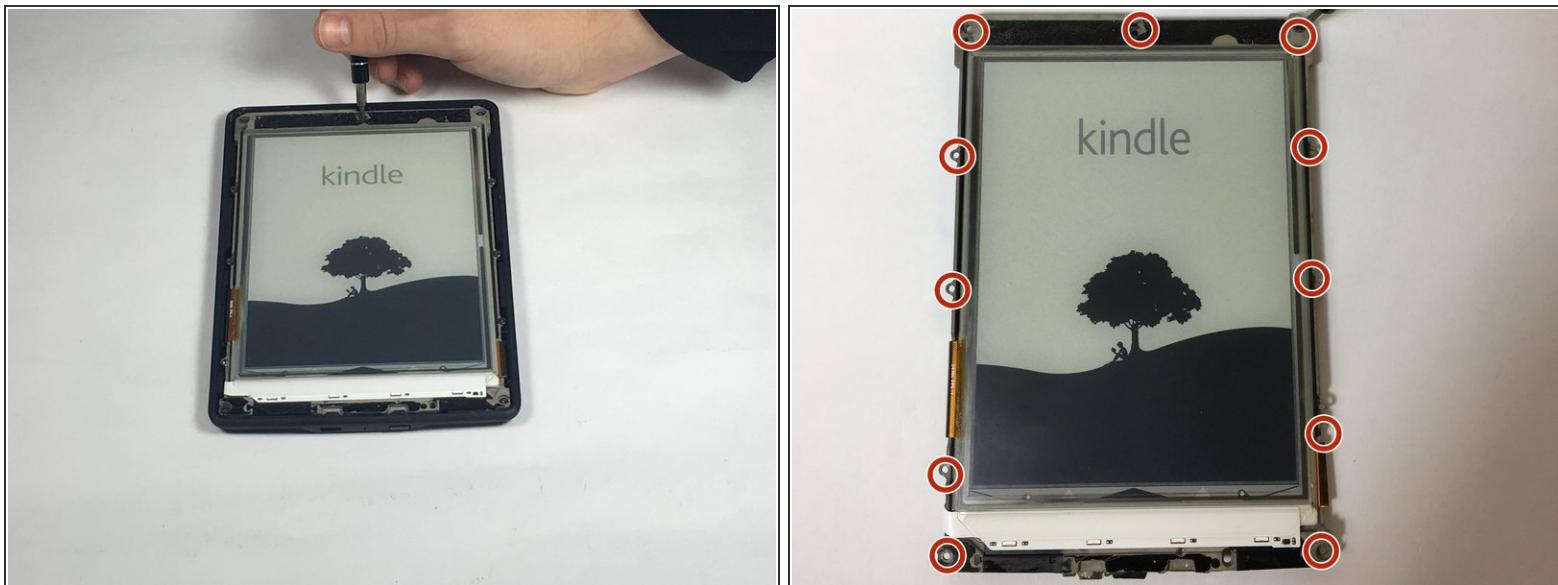

- Remove the eleven 3.2 mm Phillips 000 screws from corners of mid-frame and from behind the black strip as shown.
- *(i)* Do not forget the screw in the middle of the black adhesive strip.

Step 3



- Carefully lift and remove the mid-frame.

Step 4



- Remove the power button carefully using a blue plastic opening tool, and replace with a functional unit.

To reassemble your device, follow these instructions in reverse order.