



Kindle Paperwhite 3 (7th Generation) Battery Replacement

Use this guide to replace your battery in case it is failing to charge or has unacceptably low battery life.

Written By: Micah Smart



This document was generated on 2019-09-17 04:18:04 PM (MST).

INTRODUCTION


Amazon's Kindle Paperwhite 3 (7th Generation) possesses a 3.7 Volt, Lithium Polymer battery (Model No: MC-354775-05). This guide requires that the Kindle is turned off, and that a plastic opening tool, and a PH000 screwdriver are used.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery




 Ensure that the device is turned off before beginning.

- Gently pry the bezel off the screen using a plastic opening tool. Start at the corners and slide around the edges until you return to your starting point.

 Be careful if using the metal spudger, as it can scratch the surface of the Kindle.

Step 2

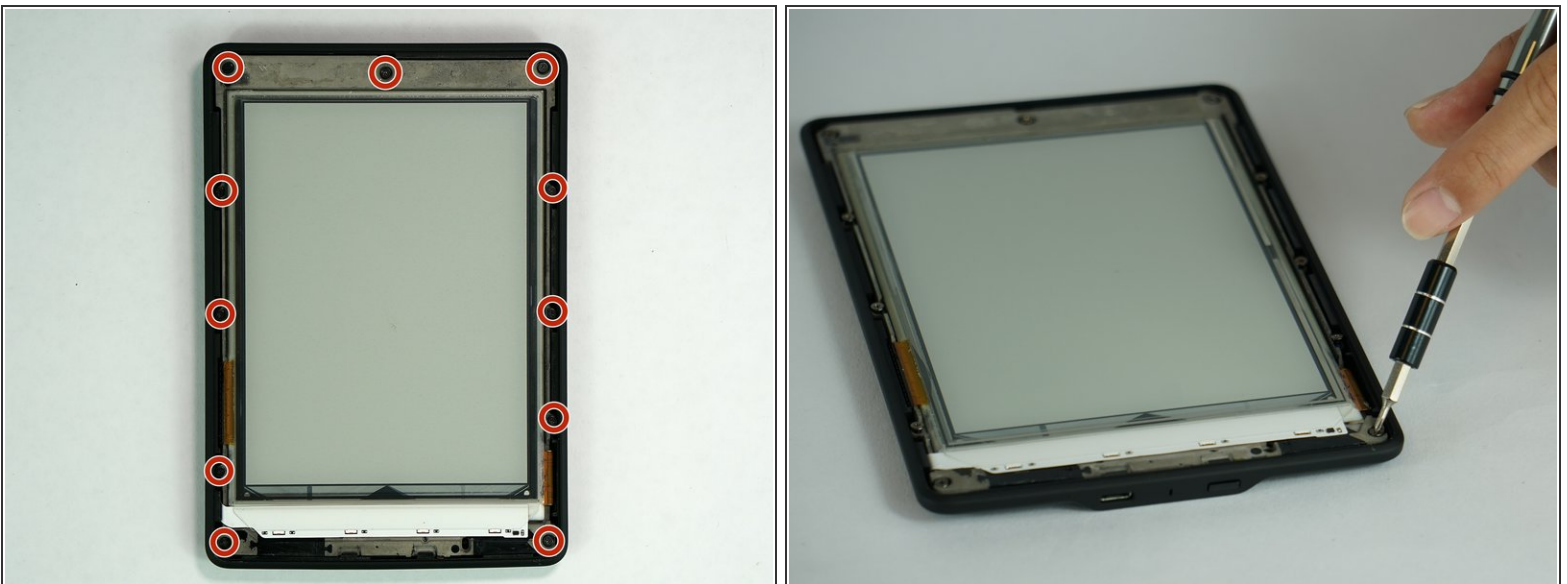

- Unscrew the eleven 3.2 mm Phillips #000 screws surrounding the frame.

Step 3




- Gently lift the mid-frame out of the case with your hands.

Step 4



- Unscrew the three 3.0 mm Phillips #000 screws that are securing the battery.

Step 5

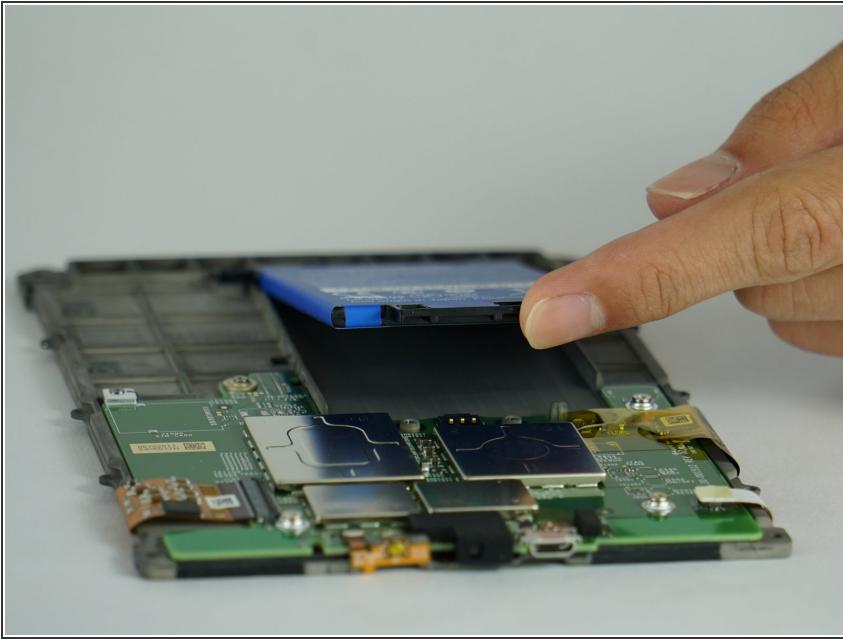

- Gently lift the battery from the frame.

To reassemble your device, follow these instructions in reverse order.