



Kitchen Gourmet XQ-673H Bottom Cover Replacement

This guide will show the owner how to take apart the device and show the owner how to replace the Bottom Cover.

Written By: Sean Perry



KITCHEN GOURMET[®]
MODEL XQ-673H
ITEM NO. 14A5024
120V a.c. 60Hz 600W
CAUTION: HOUSEHOLD USE ONLY
READ ALL INSTRUCTIONS BEFORE USE
MADE IN CHINA
DATE CODE: 0705
FOR CUSTOMER SERVICE, CALL 1-800-845-3827



INTRODUCTION

This guide will help the owner of a Kitchen Gourmet XQ-673H replace the Bottom Cover.

TOOLS:

- Phillips #1 Screwdriver (1)

Step 1 — Bottom Cover



- Turn the Kitchen Gourmet upsidedown.

 Make sure the device is unplugged before continuing.

Step 2



- Using a phillips #1 screwdriver, remove the six 10mm screws found on the bottom of the device.
- Remove the bottom cover.

To reassemble your device, follow these instructions in reverse order.