



# Kitchen Scale (CM-103/10672Z) Disassembly

This guide clearly describes how to disassemble a kitchen scale.

Written By: Floris



## INTRODUCTION

This guide clearly describes how to disassemble a kitchen scale.

### TOOLS:

- Phillips #0 Screwdriver (1)

## Step 1 — Kitchen Scale (CM-103/10672Z) Disassembly



- Remove the battery cover and batteries.

## Step 2




- Peel off the information sticker.

## Step 3





- Unscrew the ten screws (countersunk cross head 1,5 mm; 8 mm).

## Step 4

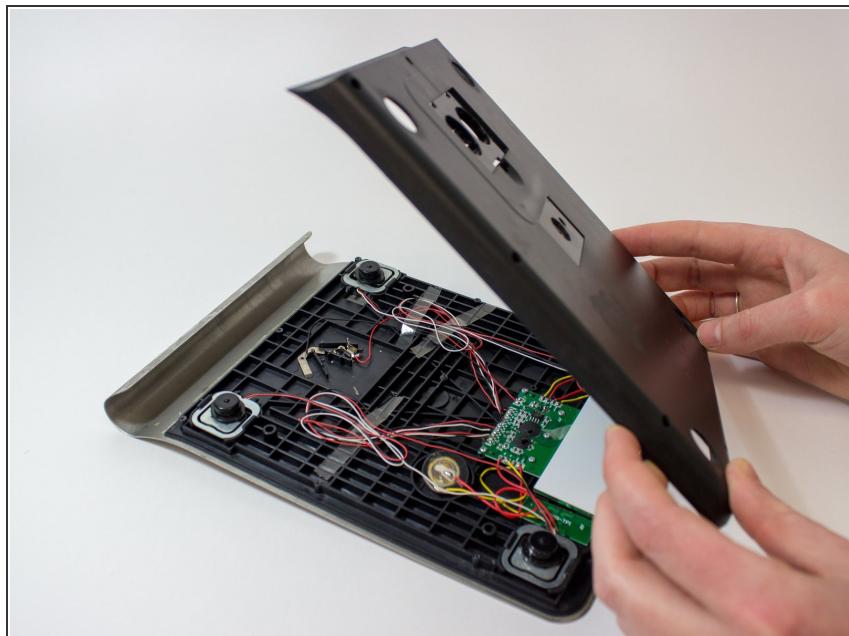




- Remove the black back cover.

## Step 5

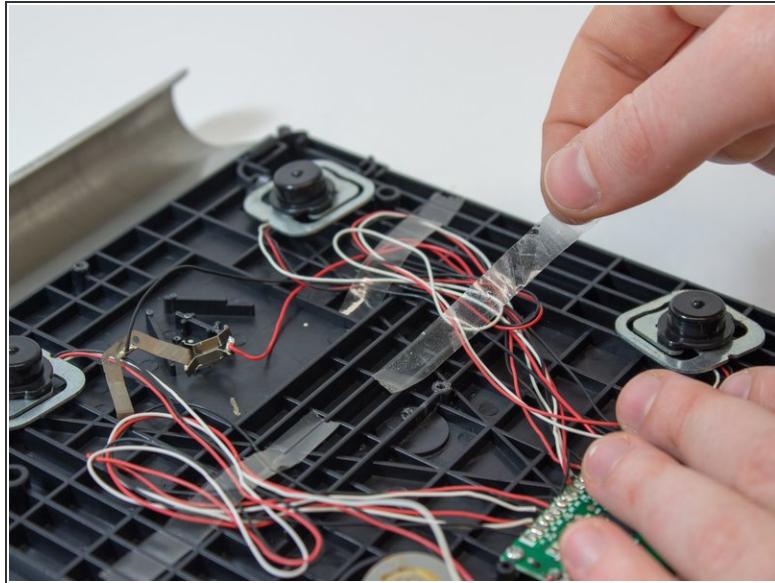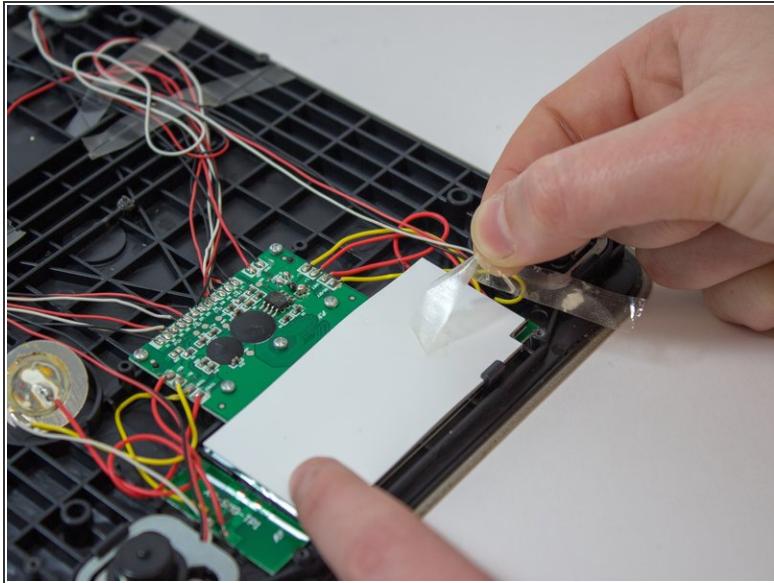


- Remove the tape which holds the electrical wires in place.

## Step 6

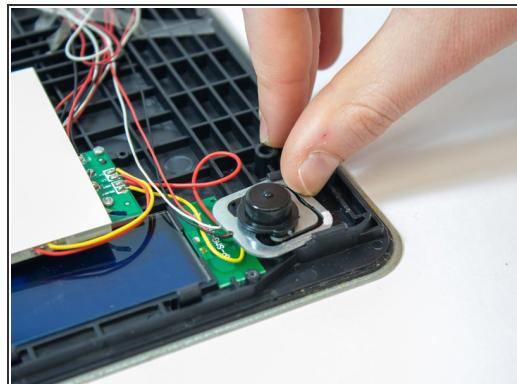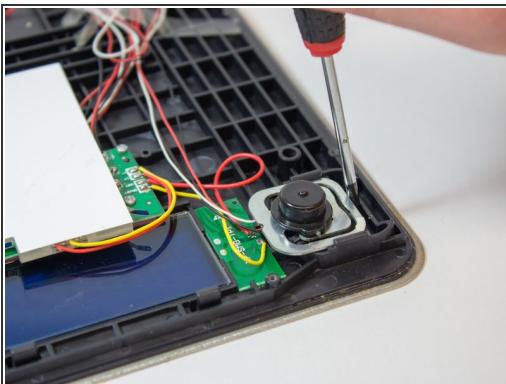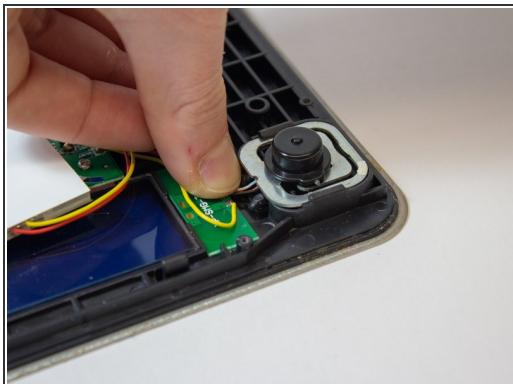



- Push down the click fingers and slide out the feet.

## Step 7

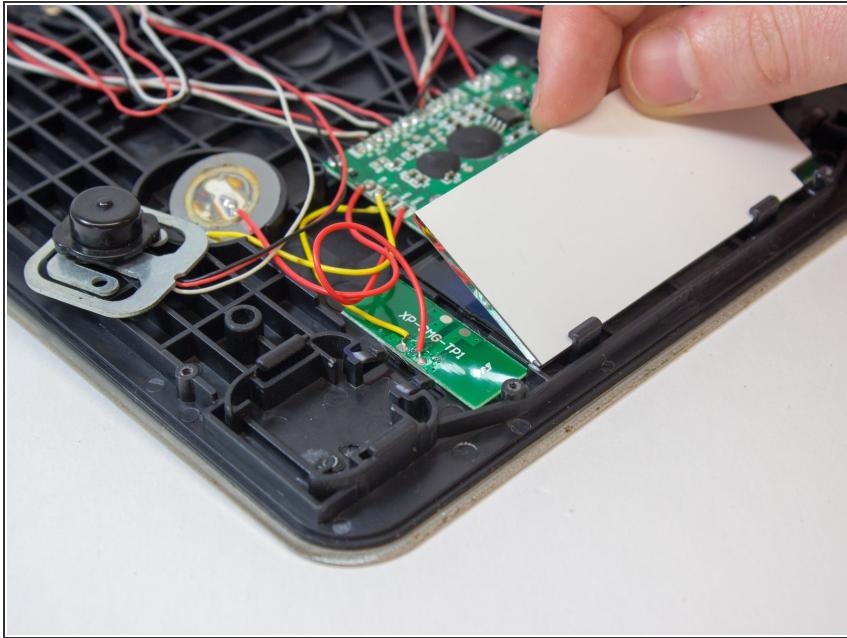



- Remove the backlight from the screen.

## Step 8

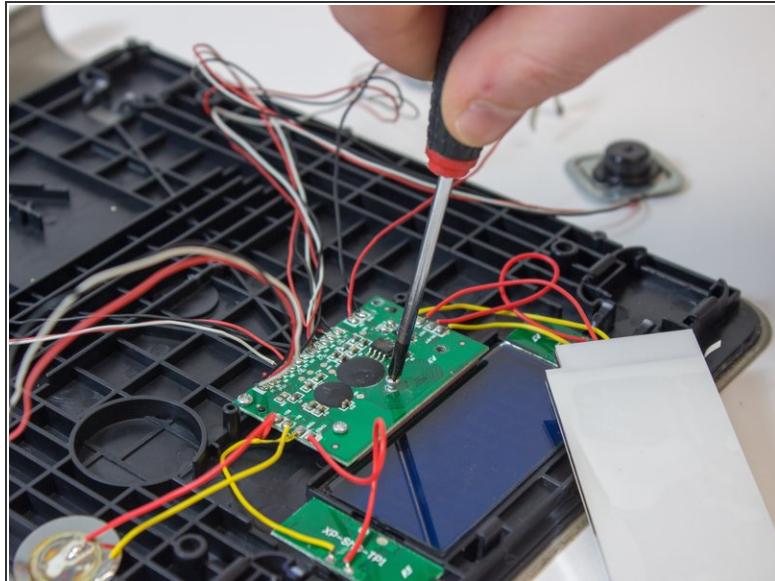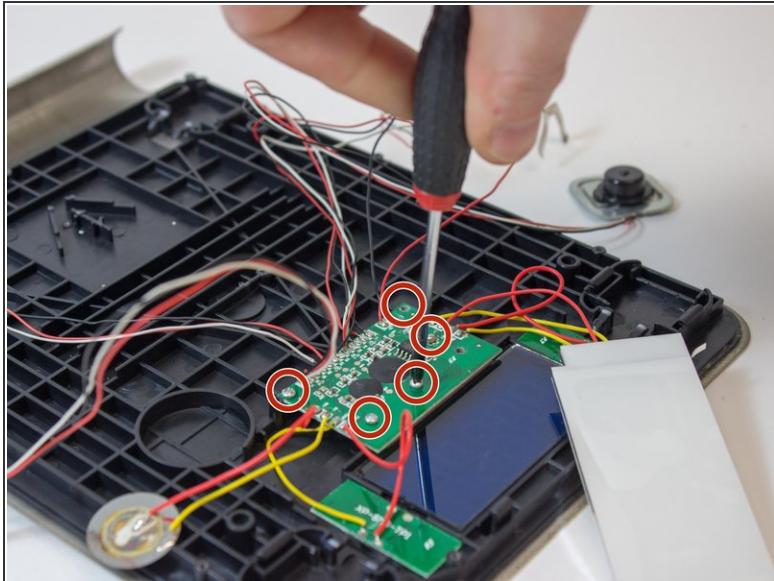



- Unscrew the 5 screws from the PCB and screen (round cross head 1,5 mm; 6 mm).

## Step 9

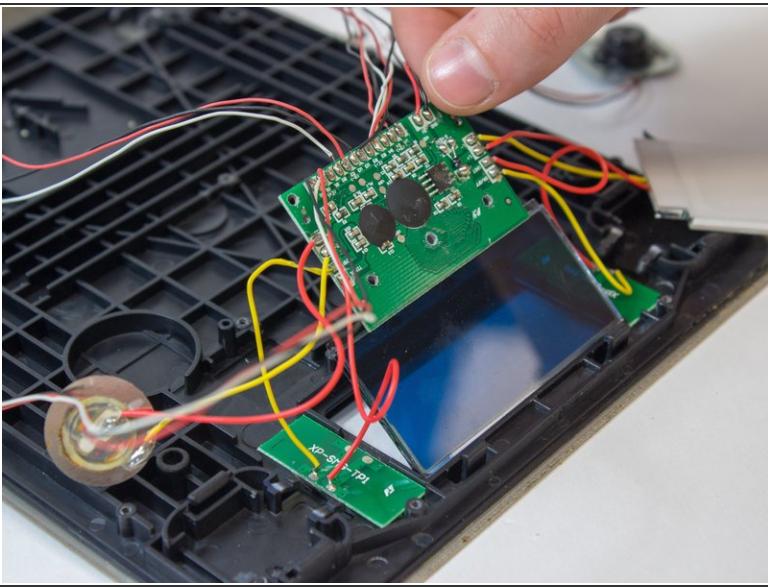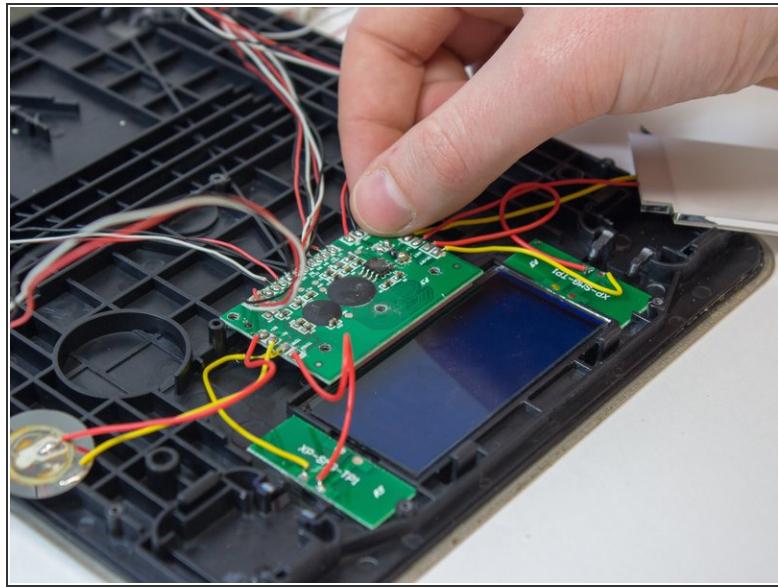


- Lift out the PCB and screen.

## Step 10

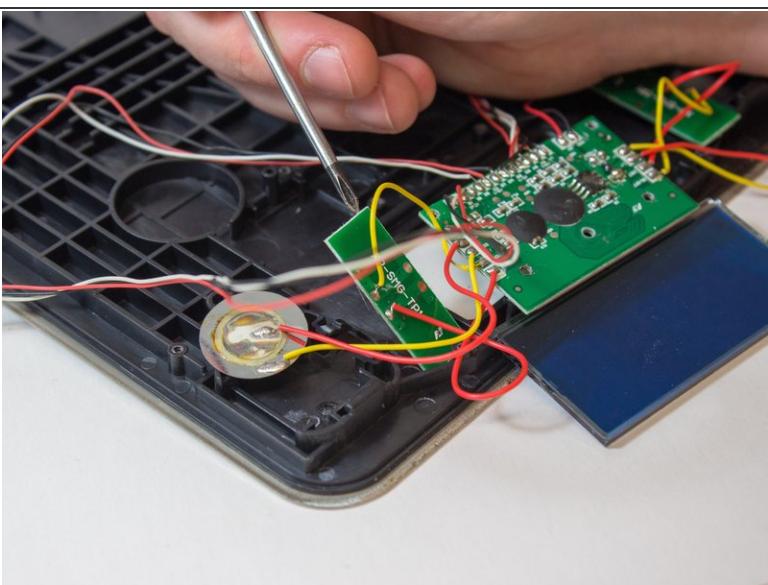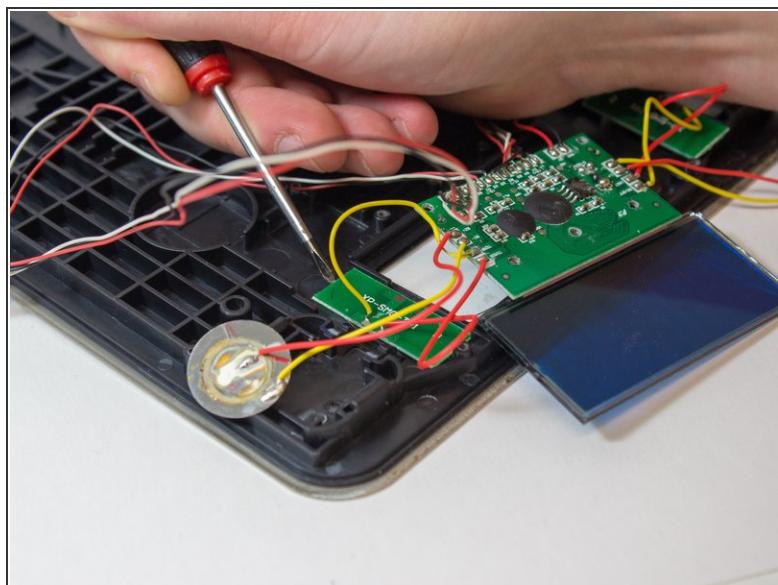

- Pry out the PCBs which include the touch sensors (2).

## Step 11

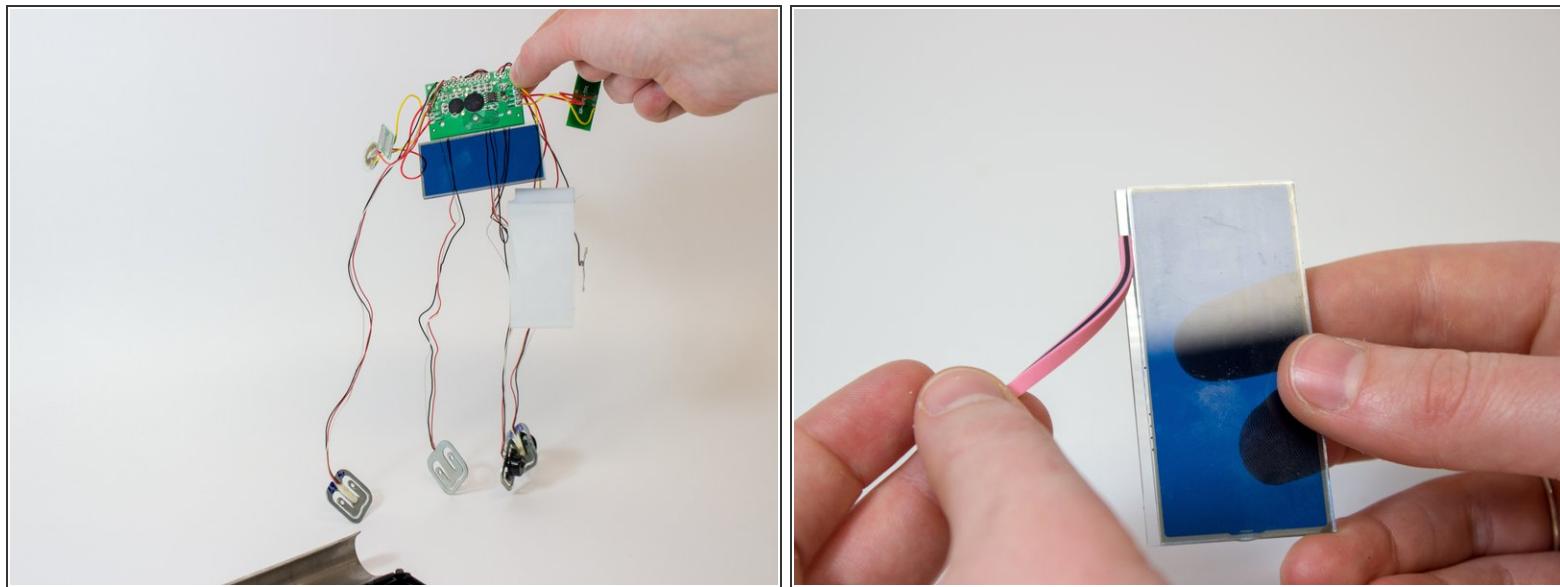

- Lift out the complete electronic circuit and remove the screen and connector.

## Step 12



- Pry off the metal cover from the top of the kitchen scale.
- Remove the glass screen cover.

To reassemble your device, follow these instructions in reverse order.