



KitchenAid KSM150PSER Carbon Brushes Replacement

How to replace KitchenAid KSM150PSER carbon brushes.

Written By: Hayley Young



INTRODUCTION

If your device is not turning on it could be because of worn down carbon brushes. Here is a guide to replace these brushes.

TOOLS:

- Flathead Screwdriver (1)

Step 1 — Carbon Brushes



- Using a flat head screwdriver, unscrew the brush cap on each side of the mixer by turning them counter clockwise.
- Remove brush cap by pulling it toward you.

 The brushes are held in by springs and will fly out if removed too fast.

Step 2



- Remove brush by pulling it toward you.

 One corner of the brush is flattened. You can check which way the brush is oriented by shining a flashlight inside the hole.

To reassemble your device, follow these instructions in reverse order.