


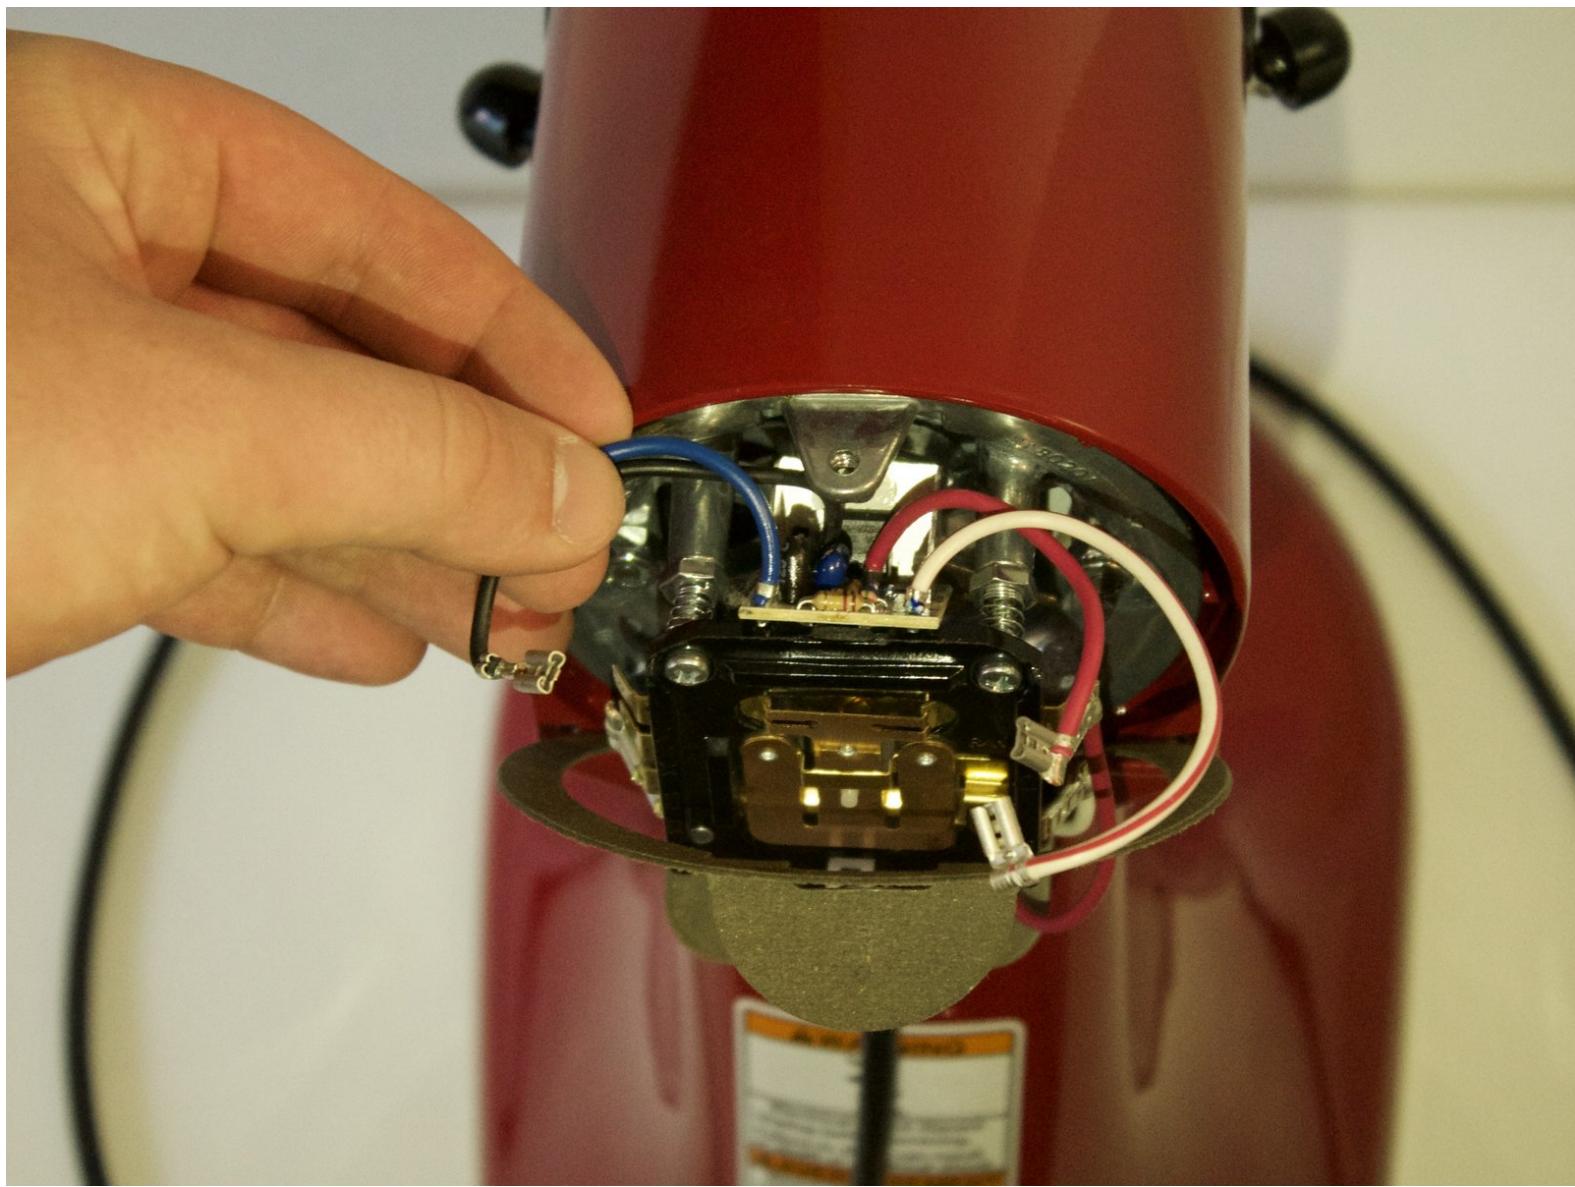

KitchenAid KSM150PSER Circuit Board Replacement

How to replace circuit board on KitchenAid KitchenAid KSM150PSER stand mixer if it isn't turning on or changing speeds.

Written By: Luke Leonard



This document was generated on 2019-10-31 12:15:34 AM (MST).

INTRODUCTION

The circuit board is a small part inside the back of the mixer. It is fairly easy to get to and doesn't require many steps.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [Phillips #2 Screwdriver \(1\)](#)
- [Large Needle Nose Pliers \(1\)](#)



Step 1 — Circuit Board



- Using a Phillips #2 screwdriver, remove the 10mm screw on the back cover by rotating it counterclockwise.
- The back cover is now free. Remove it by pulling it back and up.



 Ensure that the mixer is disconnected from any electrical source prior to removing the back cover.

Step 2

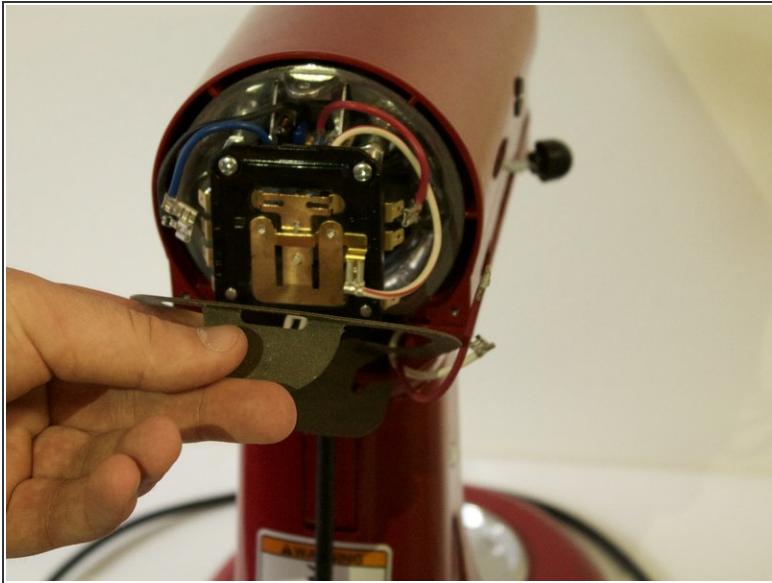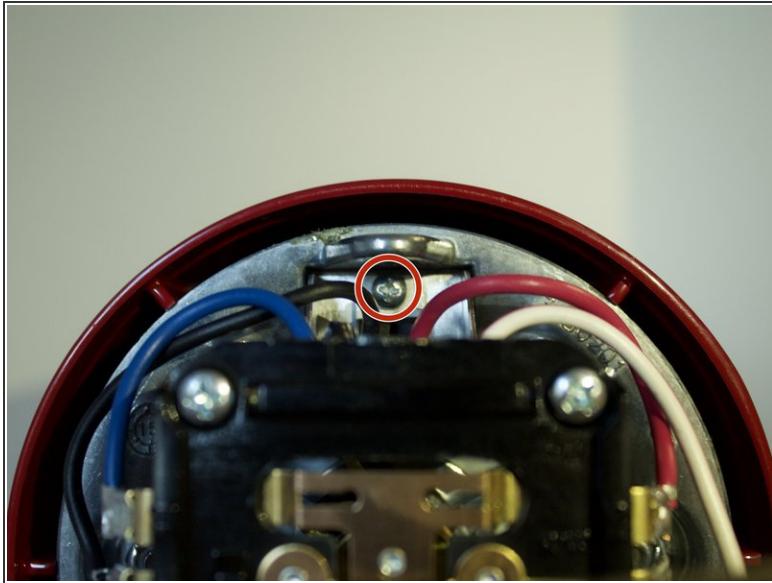

- Using a Phillips #1 screwdriver, remove the 9.5mm screw above the circuit board by rotating it counterclockwise.
- (i)* If you can't see the screw, try pulling the seal down past the wires to make the screw more accessible.


Step 3

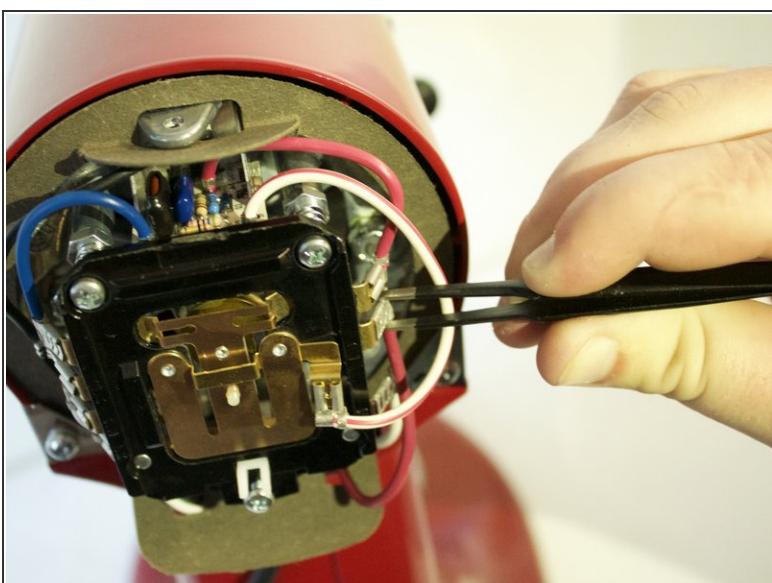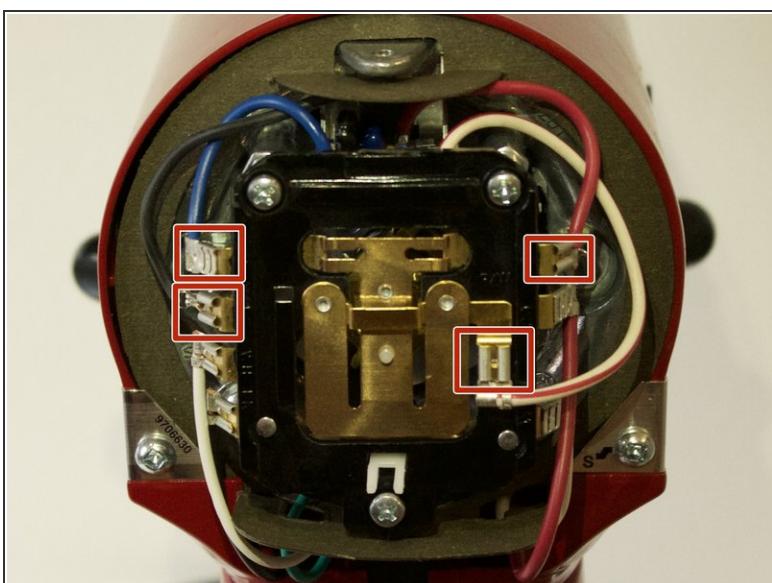

- Using pliers or tweezers, remove the connectors of the four wires attached to the circuit board.

This document was generated on 2019-10-31 12:15:34 AM (MST).

Step 4

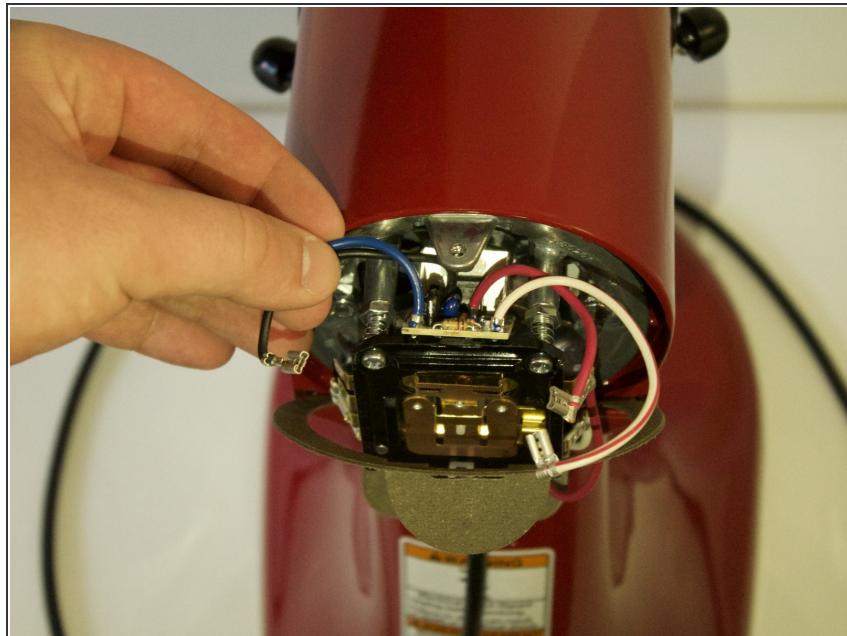

- Grab the wires and tilt the edge of the board up to lift the circuit board up and out.

To reassemble your device, follow these instructions in reverse order.