


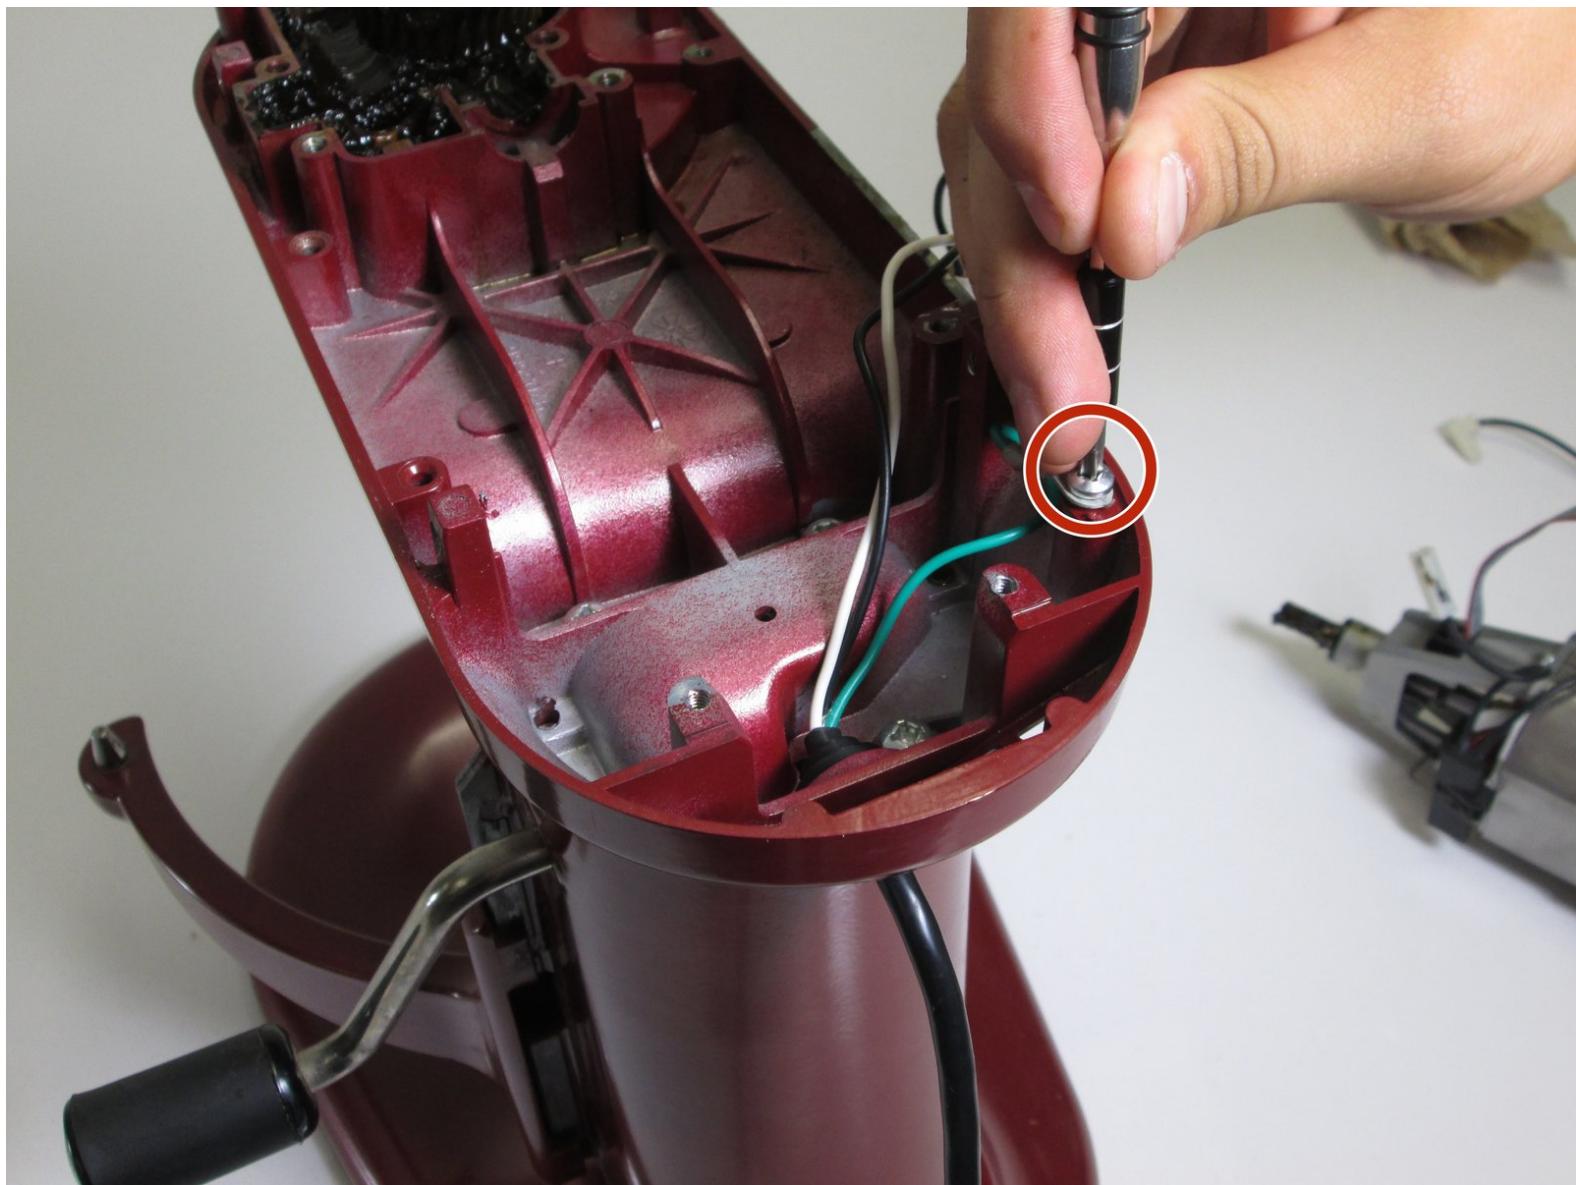

KitchenAid Professional 600 Power Cord Replacement

This guide will provide a detailed step-by-step instruction guide on how to remove the power cord from the KitchenAid Professional 600.

Written By: Luke



This document was generated on 2020-04-17 02:48:23 PM (MST).

INTRODUCTION

This guide will provide a detailed step-by-step instruction guide on how to remove the power cord from the KitchenAid Professional 600.

TOOLS:

- Phillips #2 Screwdriver (1)

Step 1 — Top Cover



- Take out the screw which holds on the silver band using a Phillips #2 screwdriver.
- Remove the silver band.

Step 2



- Remove the four Phillips #2 screws located around the mixer where the band was removed.


(i) This picture only shows two of the screw that you need to remove. The other two are on the exact opposite side of the mixer.

Step 3




- Remove the top of the mixer to reveal the inner parts.

Step 4 — Speed Selector

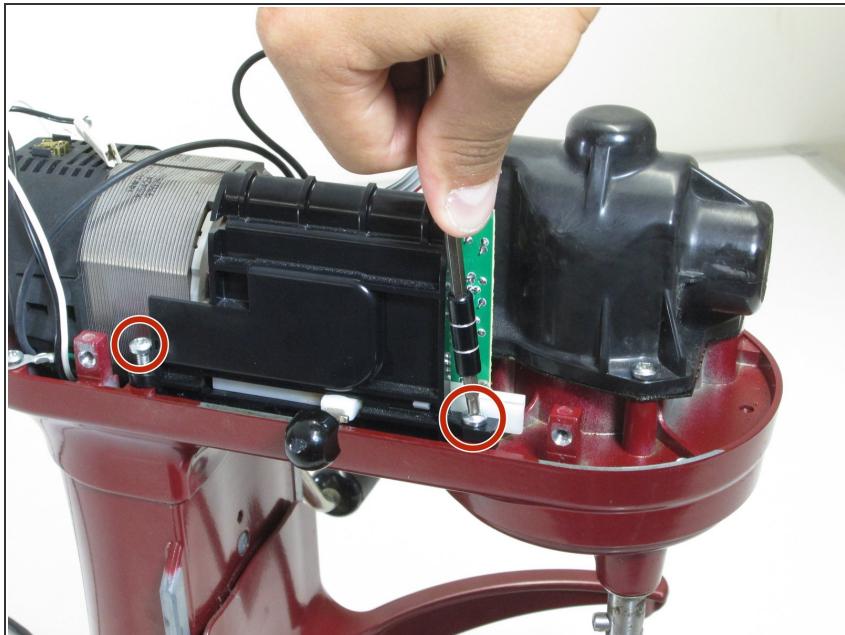

- Locate the selector switch.
- Remove the two Phillips #2 screws holding the selector switch in place.


Step 5

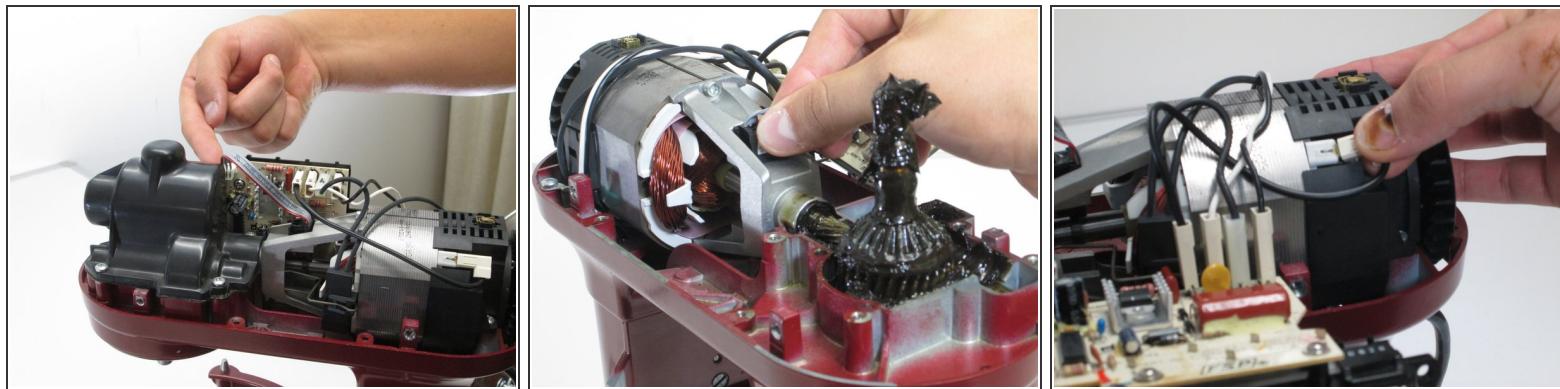

- Unplug the cords attached the drive motor to the switch.


(i) We suggest numbering them left from right so they are reattached to the replacement part in the right order.

Step 6

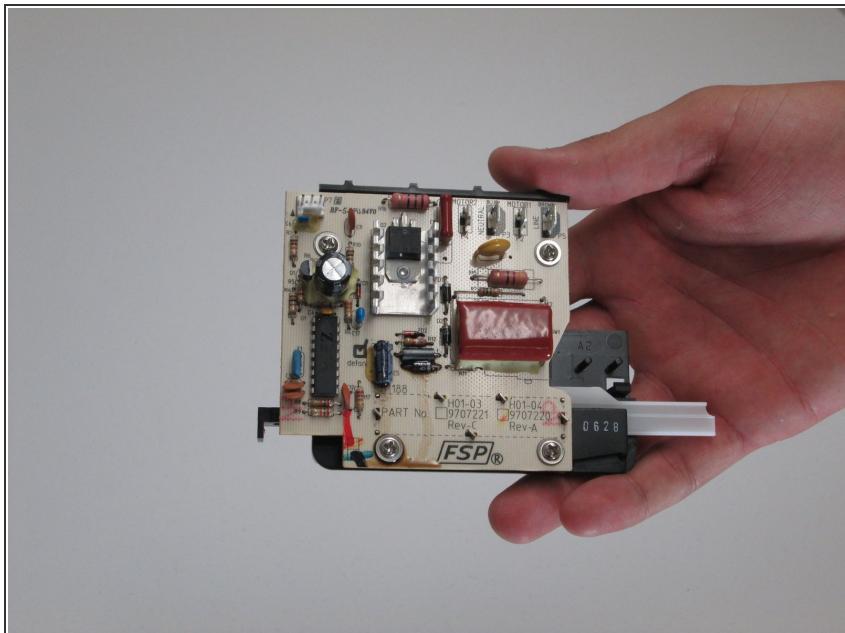


- Pull out the Selector Switch.

Step 7 — Drive Motor

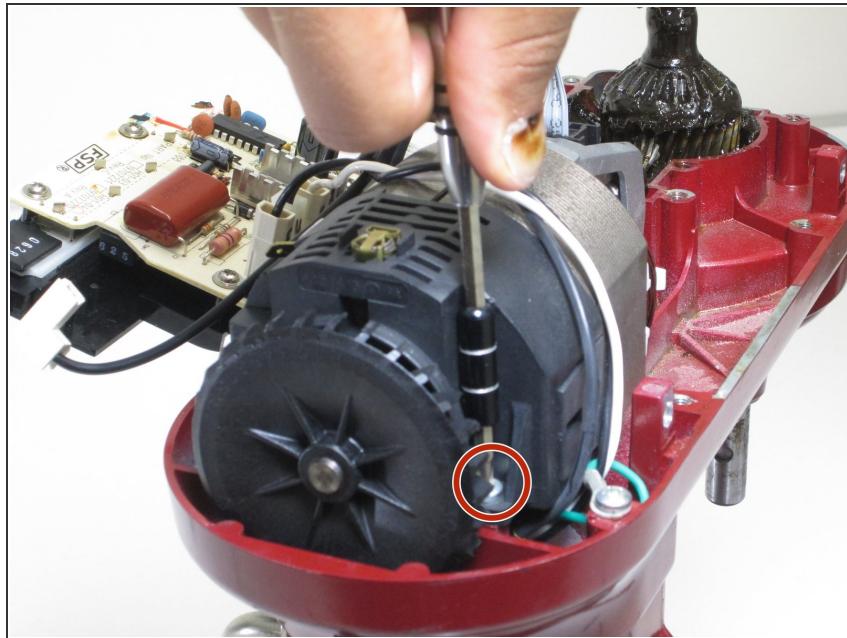


- Remove the two Phillips #2 screws holding the motor in place, located near the fan at the back of the motor.
- *i* The picture only shows one of the screws. The other screw is located on the exact opposite side of the motor.

Step 8

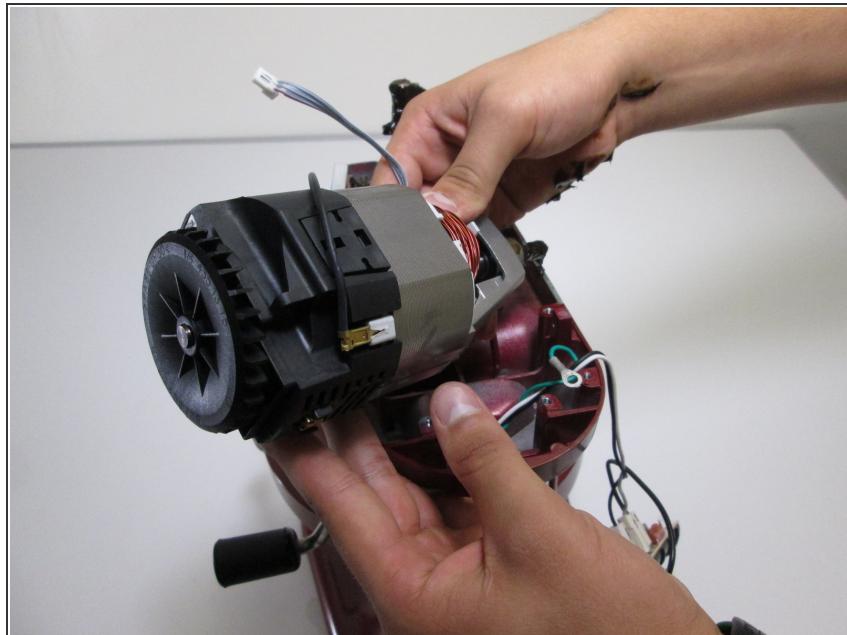


- Pull upward to remove the motor.

Step 9 — Power Cord

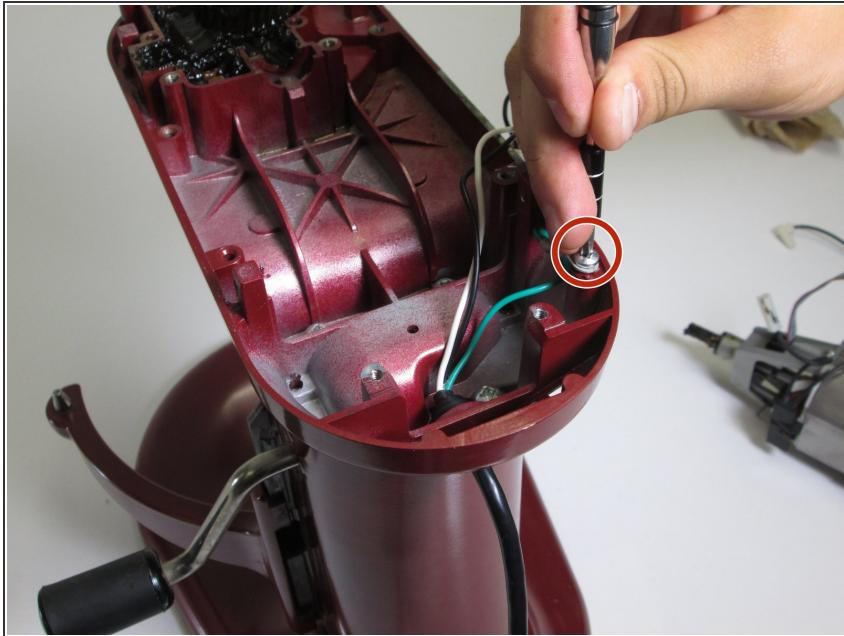

- Remove the Phillips #2 screw attaching the green grounding wire to the frame of the mixer.

Step 10

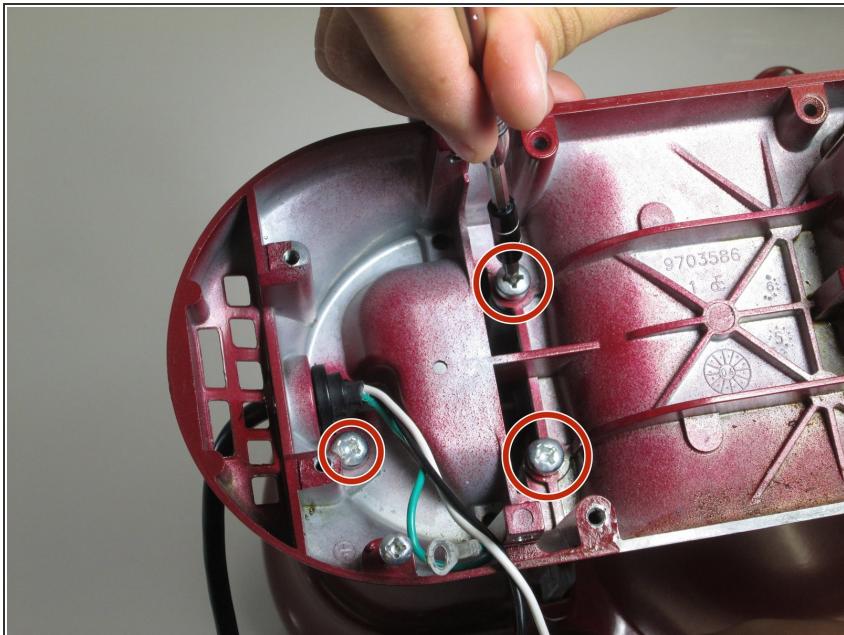

- Remove the three Phillips #2 screws that connect the top portion of the mixer to the "neck" of the mixer.

Step 11



- Remove the top portion of the mixer from the "neck" of the mixer.
- *(i)* This will make removing the power cord much easier.

Step 12



- You can now remove the power cord from the mixer.

To reassemble your device, follow these instructions in reverse order.