




# Kodak EasyShare C713 Buttons Replacement

Replace the Buttons in your Kodak EasyShare C713.

Written By: Taggart Ashby

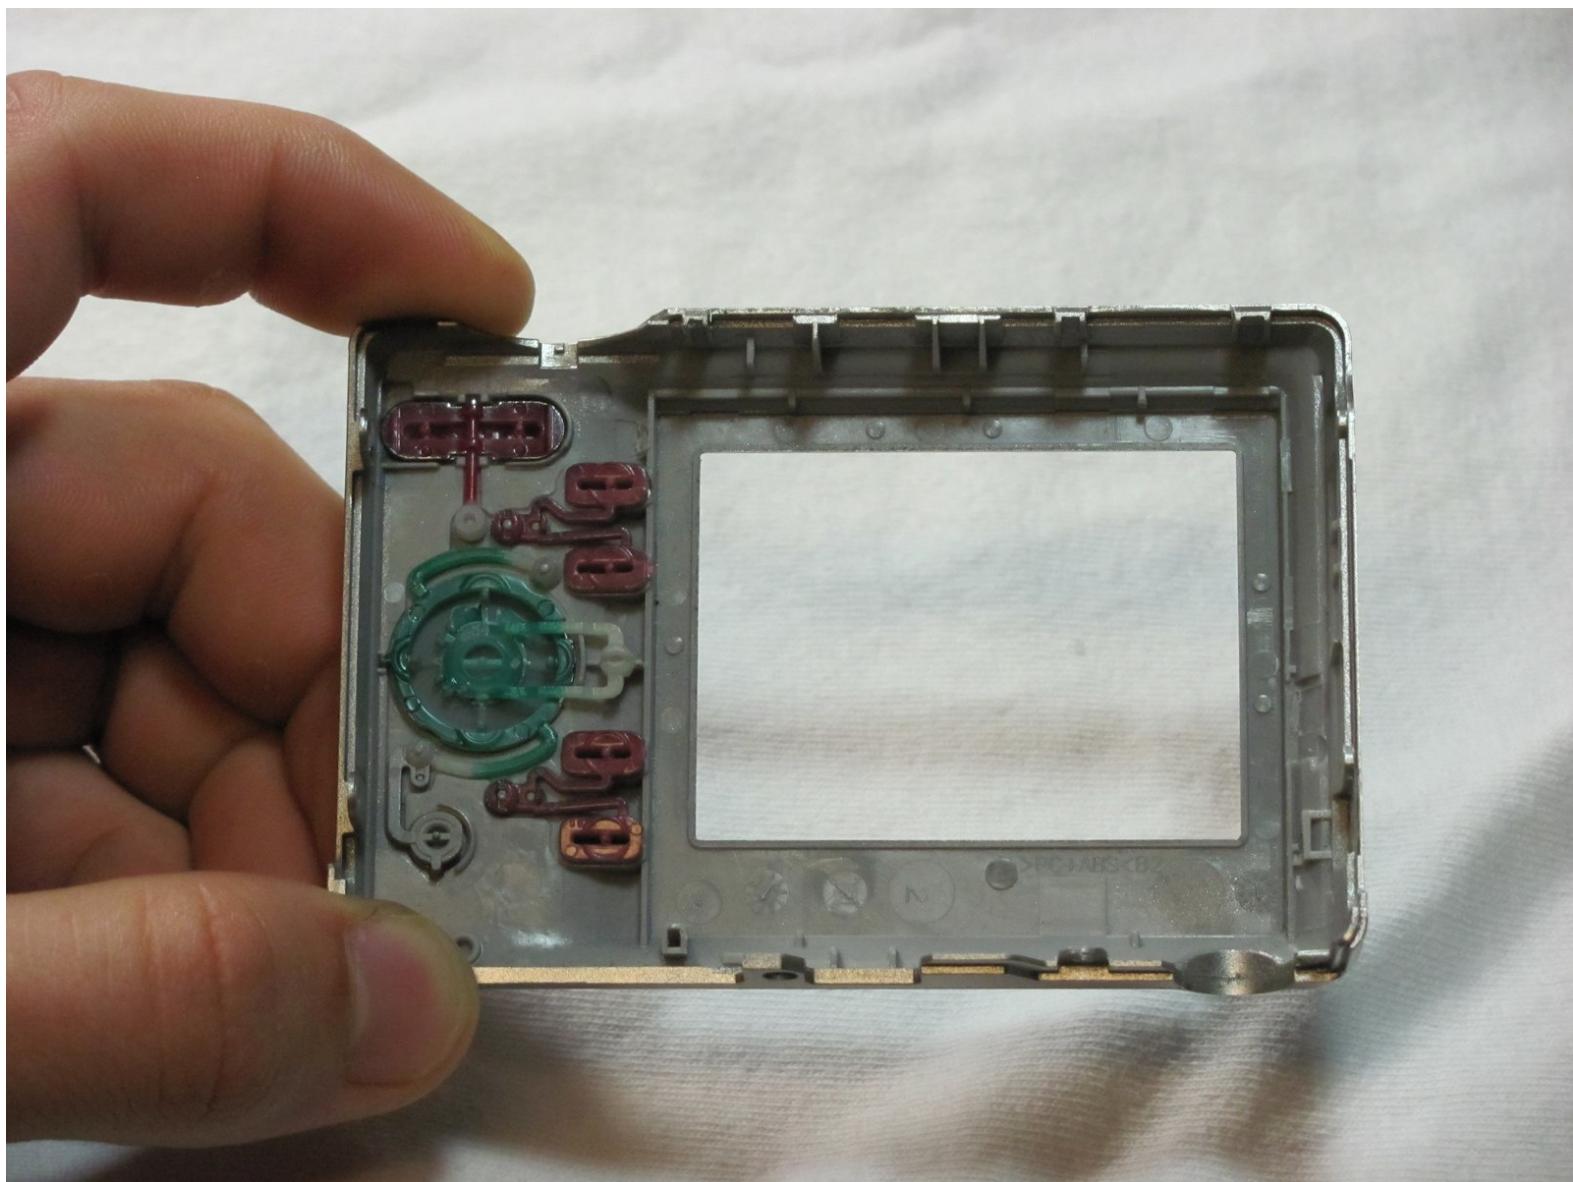

## INTRODUCTION

Replacing the camera buttons.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
- If this does not happen, gently open the door lifting from the outer bottom side of the camera.

## Step 2




- Remove the old batteries.

## Step 3 — Outer Case



- Remove the seven screws from the outer case with a Phillips #00.
- All screws are 4.45mm.
- There are 2 screws on the port side.
- There are 2 screws on starboard side.
- There are 3 screws on the bottom.


## Step 4

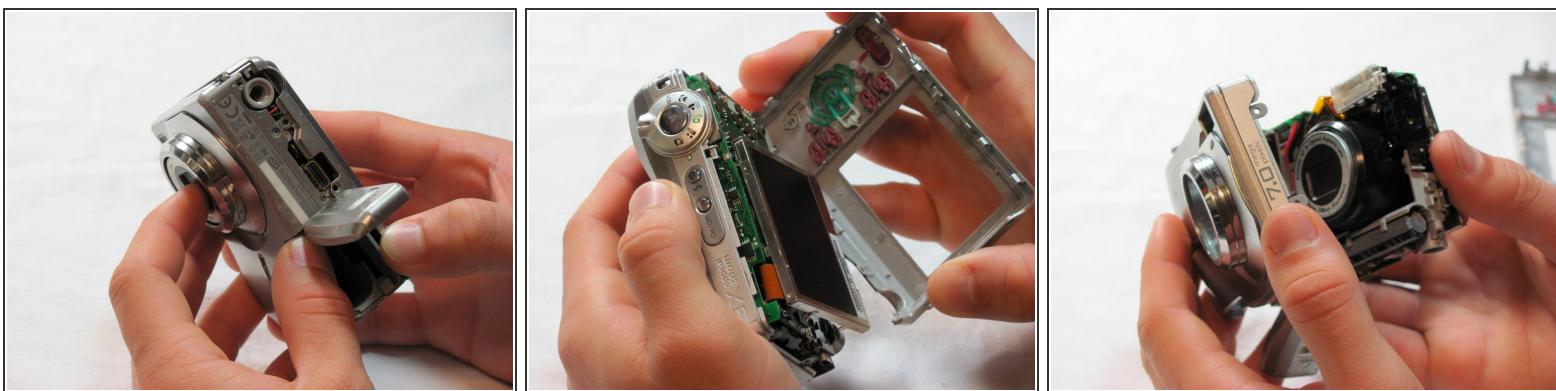

 Make sure the battery cap is "up".

- Pull the outer case off with your hands.

## Step 5 — Buttons

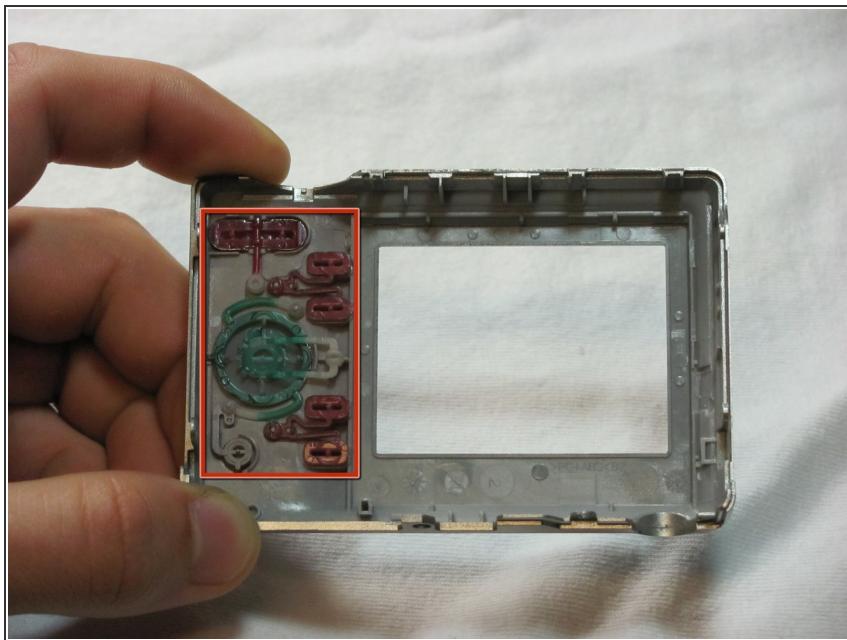

- Remove the necessary broken buttons.
- They come out easily so just use your fingers.

To reassemble your device, follow these instructions in reverse order.