


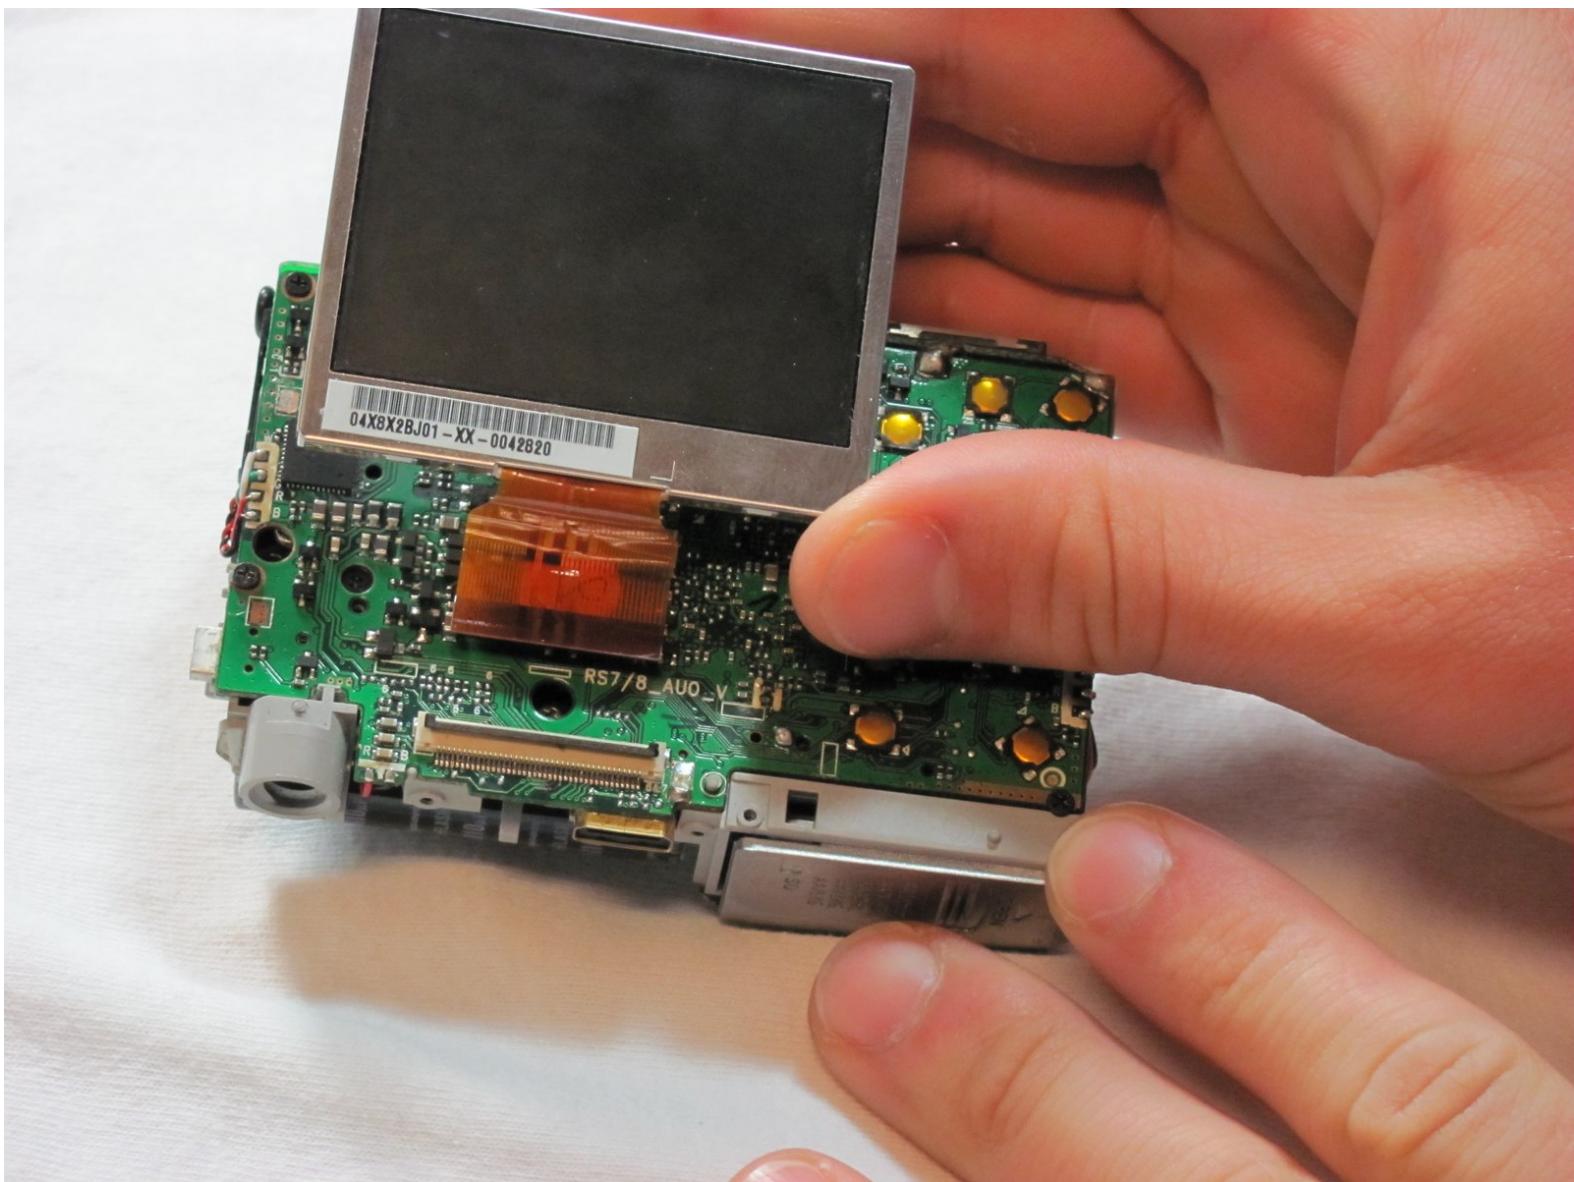

Kodak EasyShare C713 LCD Replacement

Replace the LCD in your Kodak EasyShare C713.

Written By: Taggart Ashby



INTRODUCTION

Removing and replacing the LCD and LCD casing.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Soldering Iron](#) (1)

Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
- If this does not happen, gently open the door lifting from the outer bottom side of the camera.

Step 2




- Remove the old batteries.

Step 3 — Outer Case



- Remove the seven screws from the outer case with a Phillips #00.
- All screws are 4.45mm.
- There are 2 screws on the port side.
- There are 2 screws on starboard side.
- There are 3 screws on the bottom.


Step 4

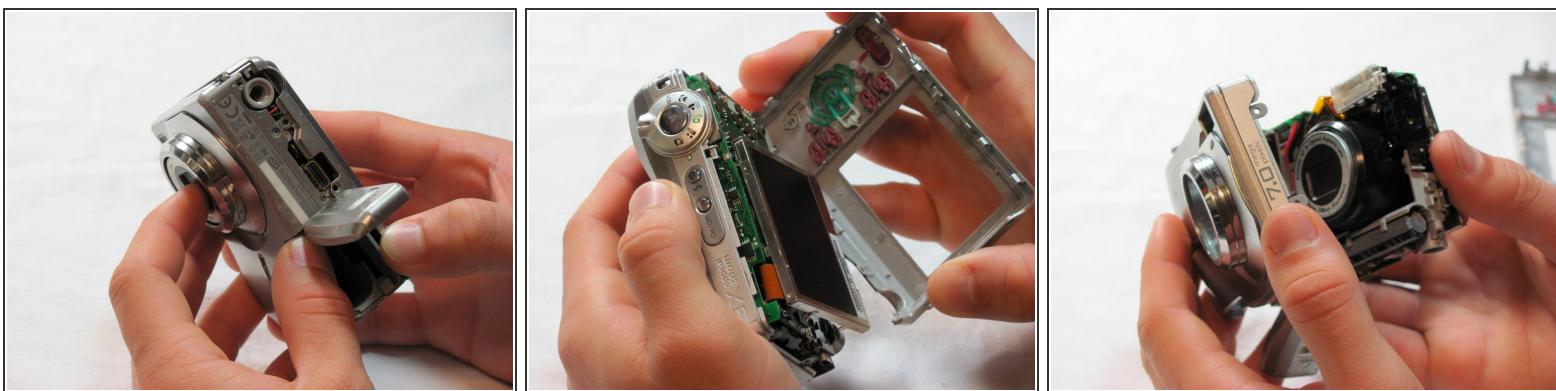

 Make sure the battery cap is "up".

- Pull the outer case off with your hands.


Step 5 — LCD

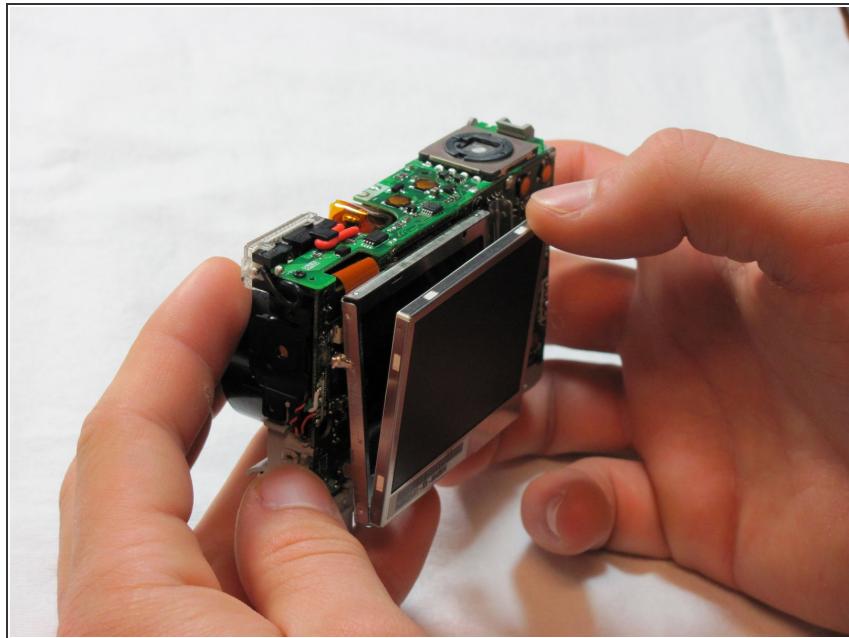

i The LCD screen is hinged at the bottom.


- Put your thumb in the upper right corner of the LCD screen.
- Pull the LCD screen out of its outer case with your thumb.

Step 6

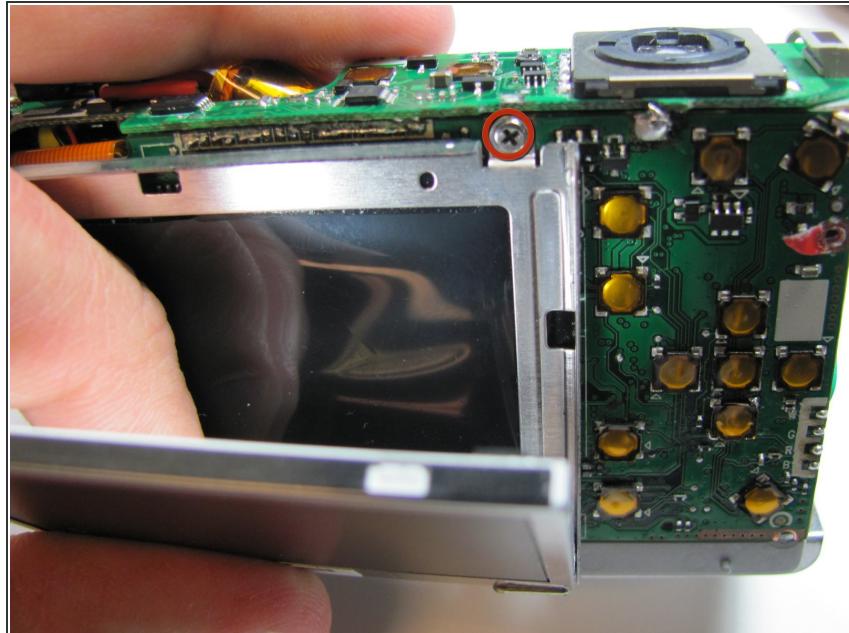


- Remove the screw underneath LCD screen with the Phillips #00. The screw measures 4.1mm in length.

Step 7

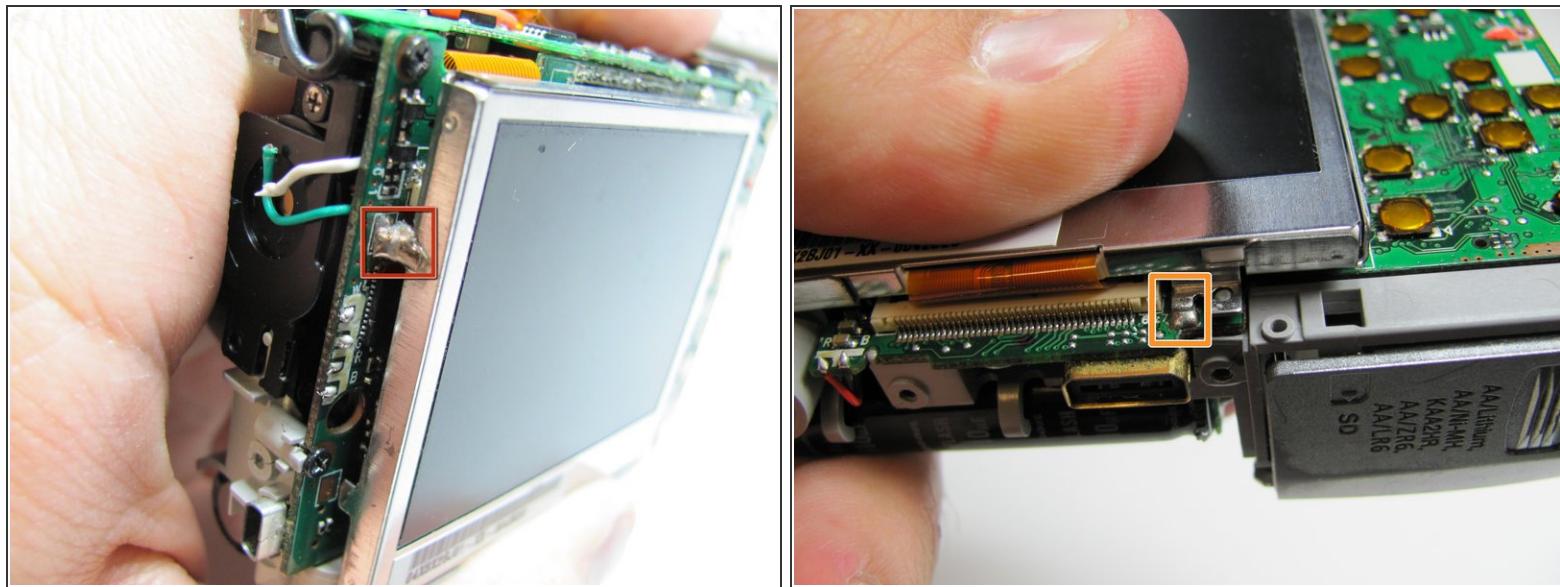


- Desolder the two points.
 - One on the port side.
 - One on the bottom.

Step 8

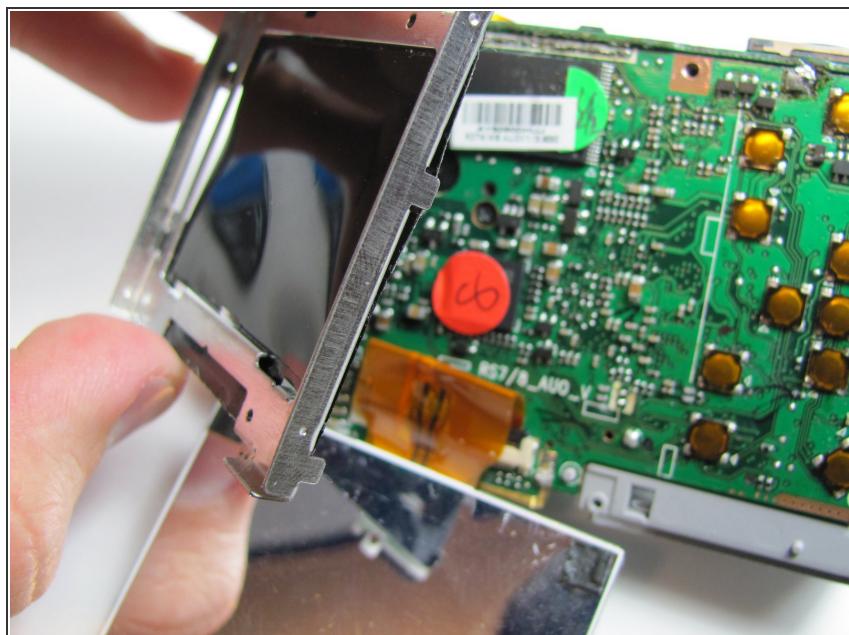


- After desoldering the LCD casing, just use your fingers to carefully remove it.

Step 9

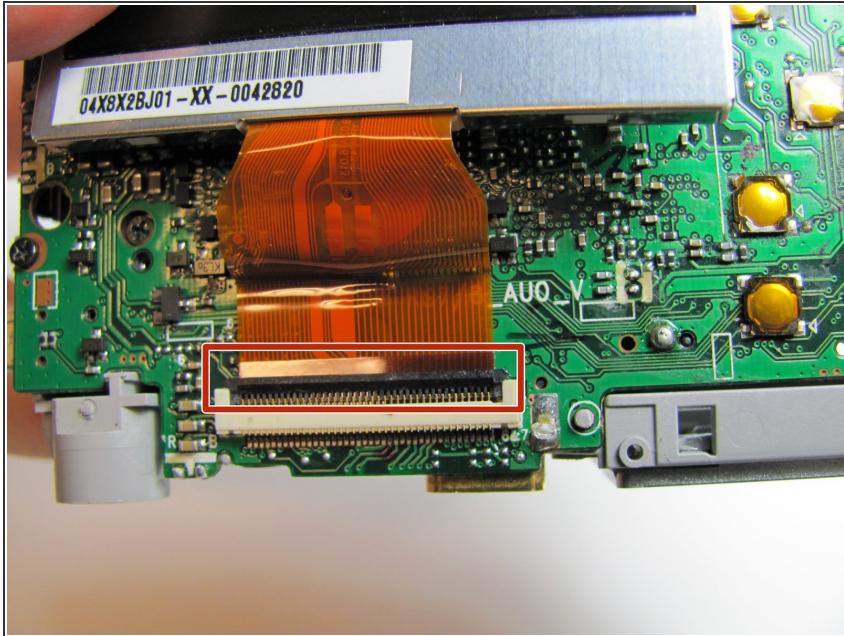

- Flip up the black tab on the bottom of the LCD screen with a fingertip.

Step 10

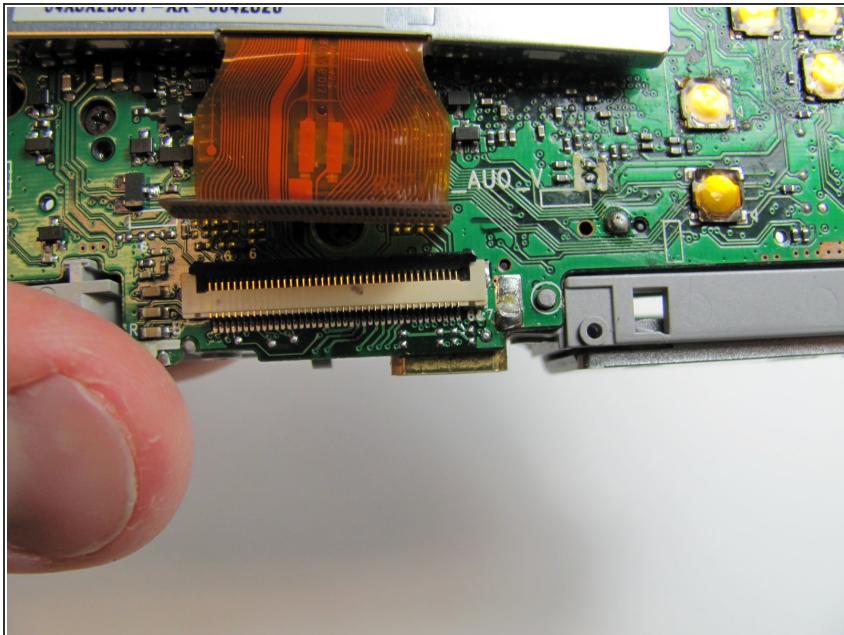

- Remove the LCD ribbon cable from inside the black tab.

To reassemble your device, follow these instructions in reverse order.