



Kodak EasyShare C913 Batteries Replacement

How to insert and remove batteries.

Written By: Dustin Rodgers



INTRODUCTION

Use this guide to replace batteries

Step 1 — Batteries



- Position the camera with the bottom facing up.
- With your finger, slide the battery cover in the direction of open arrow.
- The battery cover will spring open, so be careful to lift it up gently.

To reassemble your device, follow these instructions in reverse order.