




# Kodak EasyShare C913 Front Case Replacement

How to remove and install the front case.

Written By: Dustin Rodgers

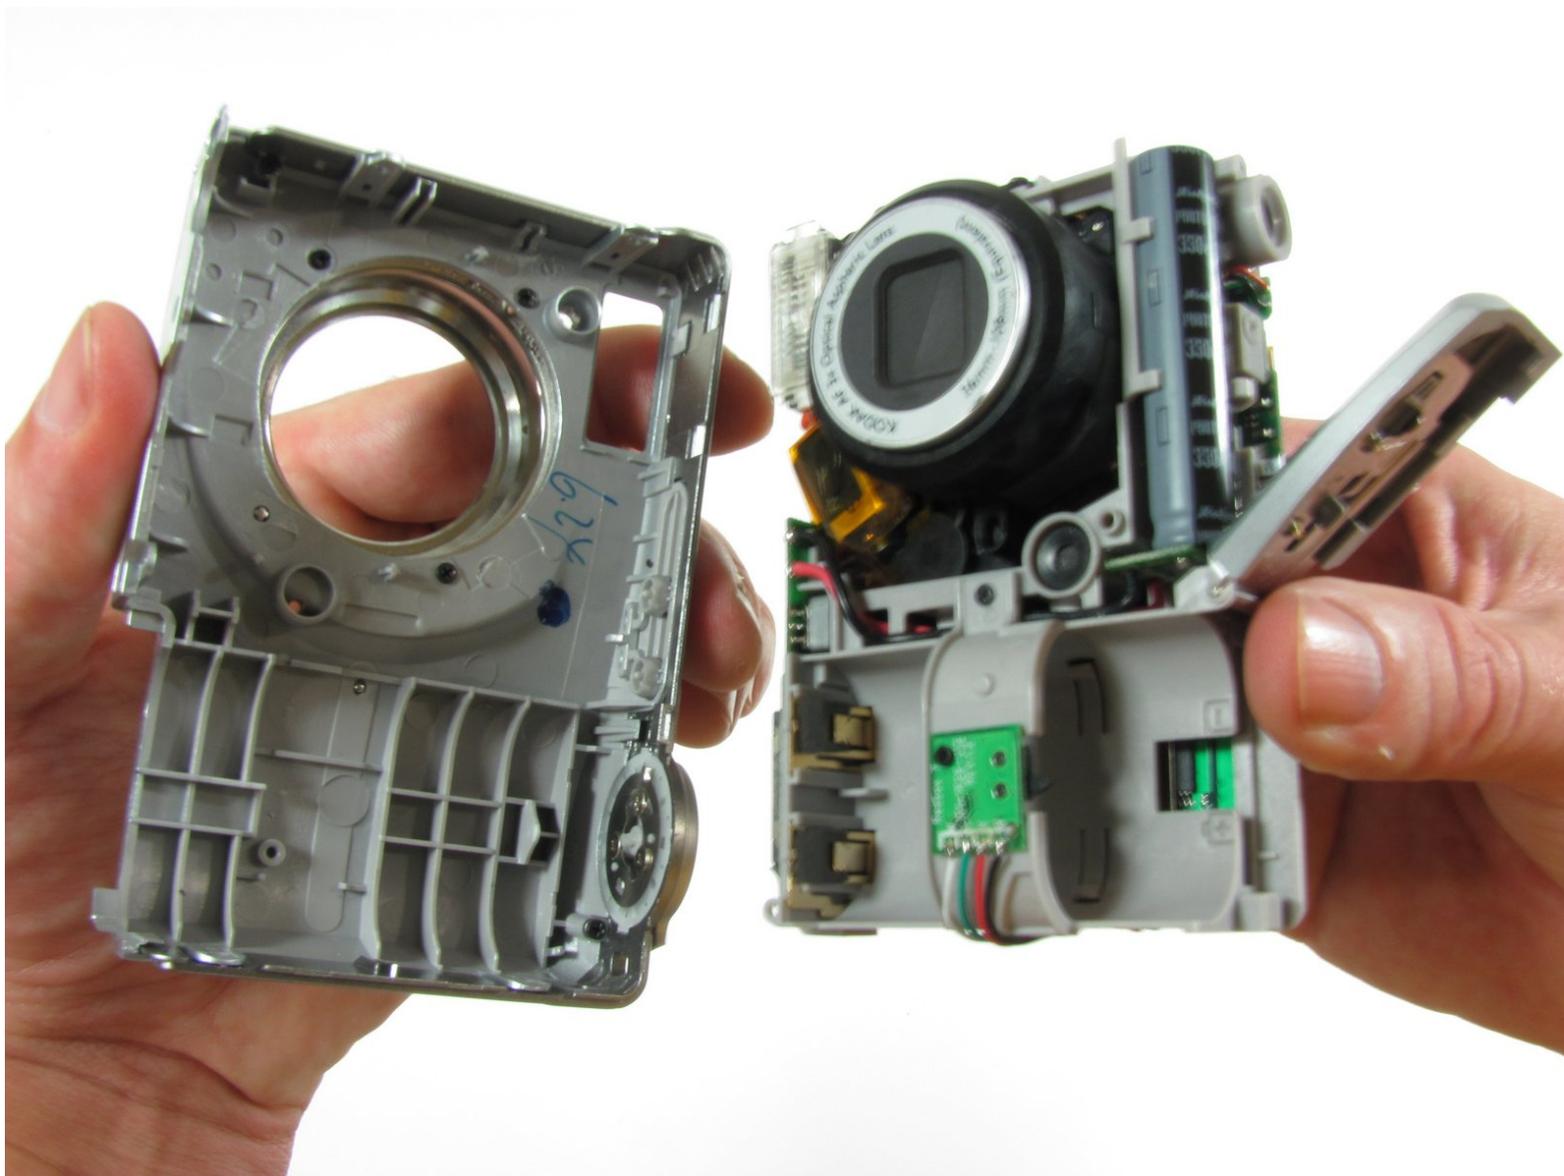

---

## INTRODUCTION

Use this guide to remove and install the front case.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Batteries



- Position the camera with the bottom facing up.
- With your finger, slide the battery cover in the direction of open arrow.
- The battery cover will spring open, so be careful to lift it up gently.

## Step 2 — Back Case




- Use a Phillips #00 screwdriver to remove the seven 4.5mm screws.
  - There are 2 on the left
  - There are 2 on the right
  - There are 3 on the bottom

### Step 3



- Firmly grasp and pull back casing off.

### Step 4 — Front Case

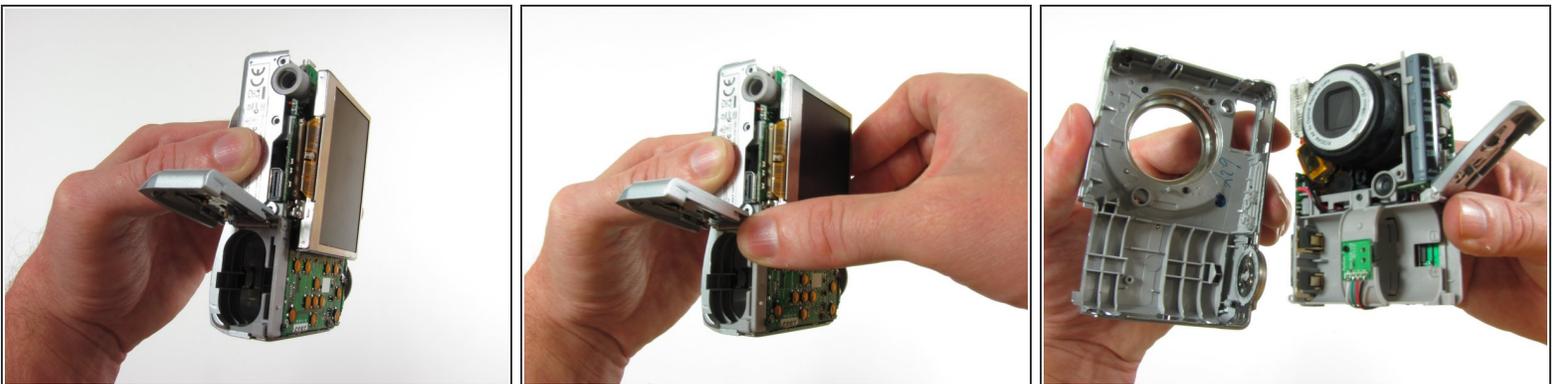

- With battery door open, grasp the front case and remove it from the camera.

To reassemble your device, follow these instructions in reverse order.