




# Kodak EasyShare C913 LCD Screen Replacement

How to remove and install the LCD screen.

Written By: Alan Galarza

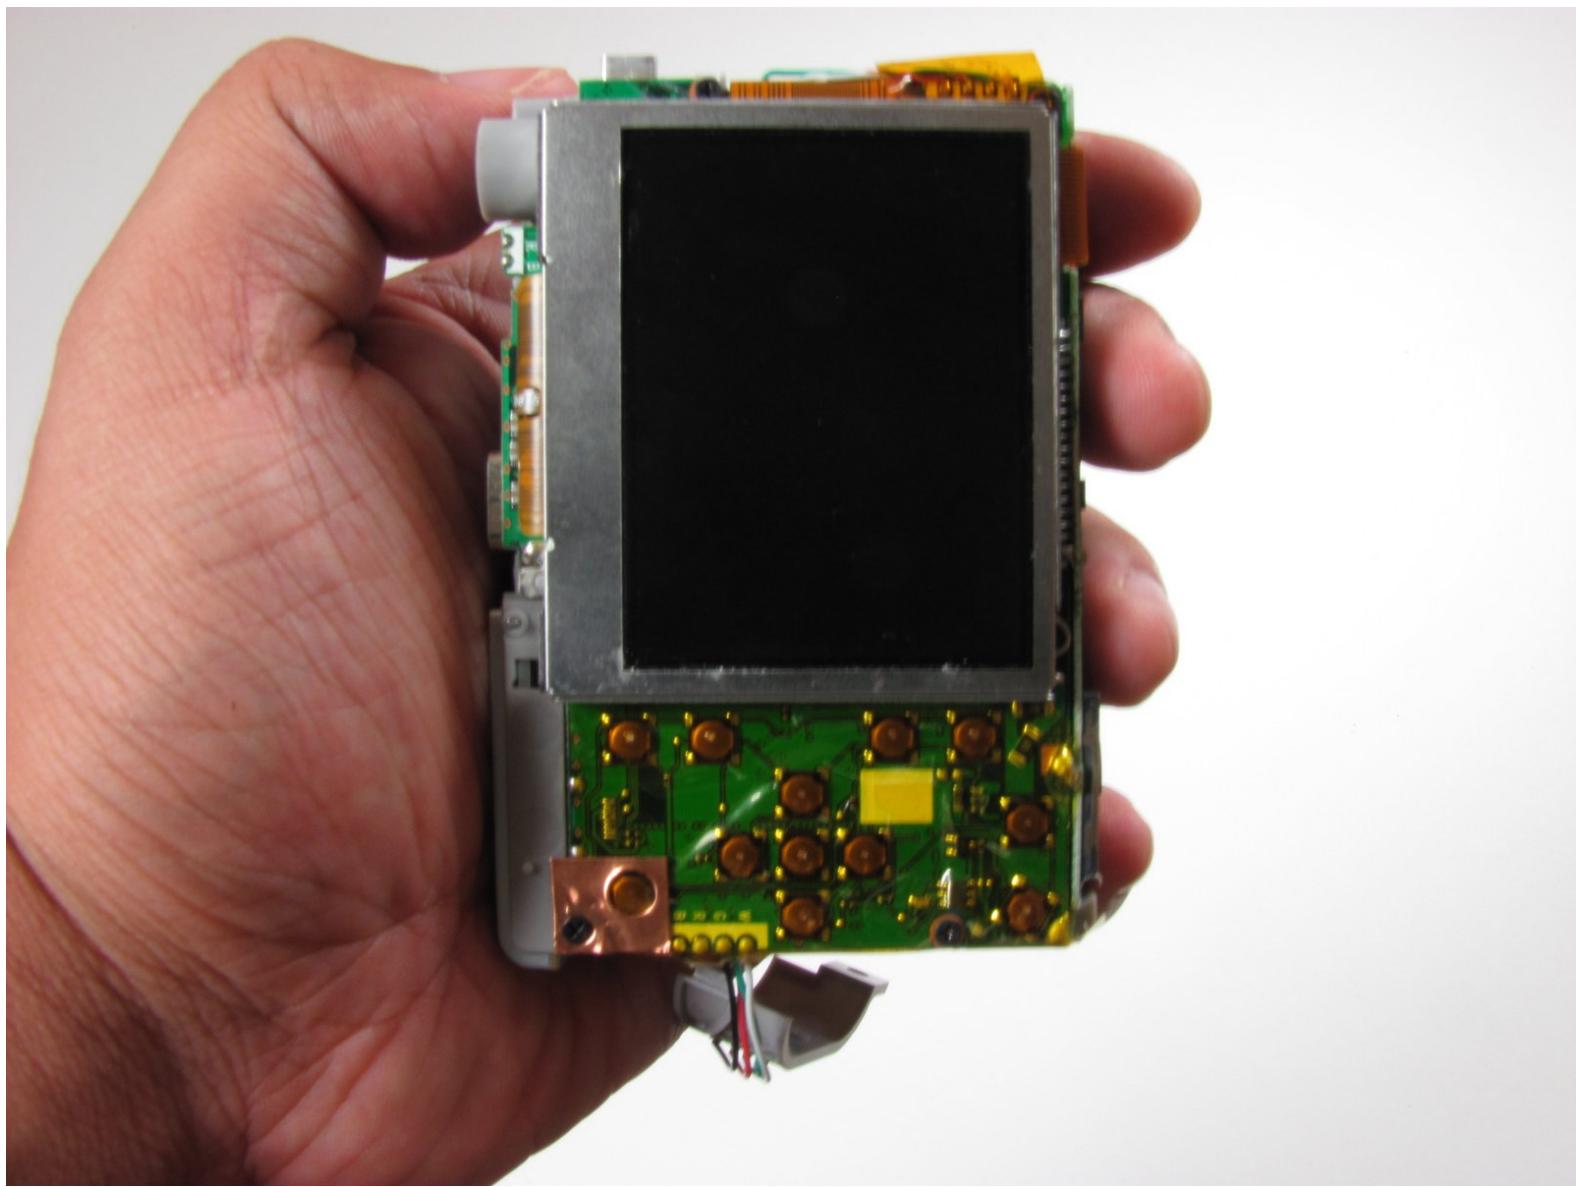

## INTRODUCTION

Use this guide to remove and install the LCD screen.

### TOOLS:

- [Desoldering Braid](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Solder](#) (1)
- [Soldering Iron](#) (1)

## Step 1 — Batteries



- Position the camera with the bottom facing up.
- With your finger, slide the battery cover in the direction of open arrow.
- The battery cover will spring open, so be careful to lift it up gently.

## Step 2 — Back Case




- Use a Phillips #00 screwdriver to remove the seven 4.5mm screws.
  - There are 2 on the left
  - There are 2 on the right
  - There are 3 on the bottom

## Step 3




- Firmly grasp and pull back casing off.

## Step 4 — Front Case

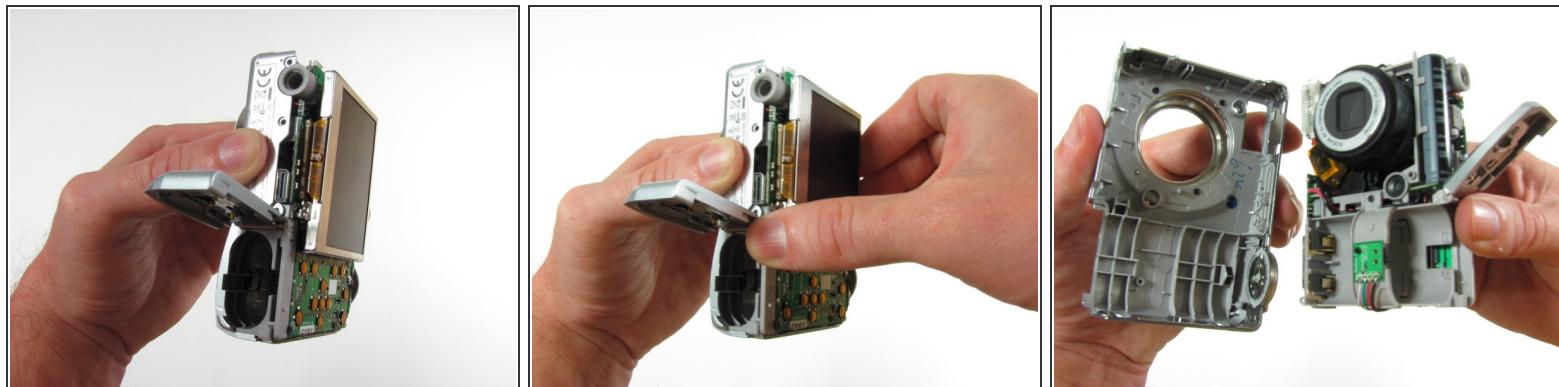


- With battery door open, grasp the front case and remove it from the camera.

## Step 5 — LCD Screen

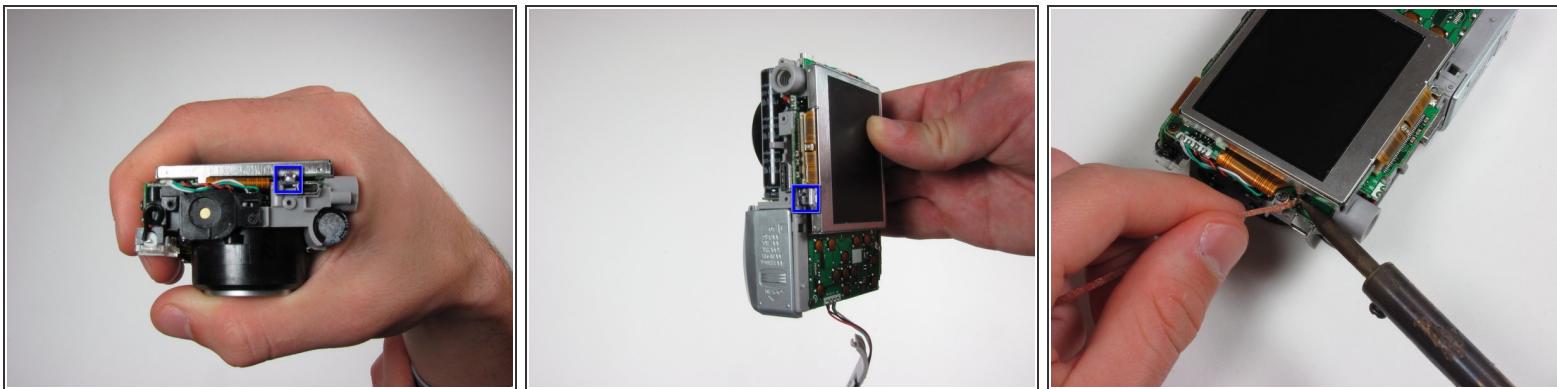


- Locate the 2 solder joints on the LCD casing.
- De-solder the joints.

## Step 6

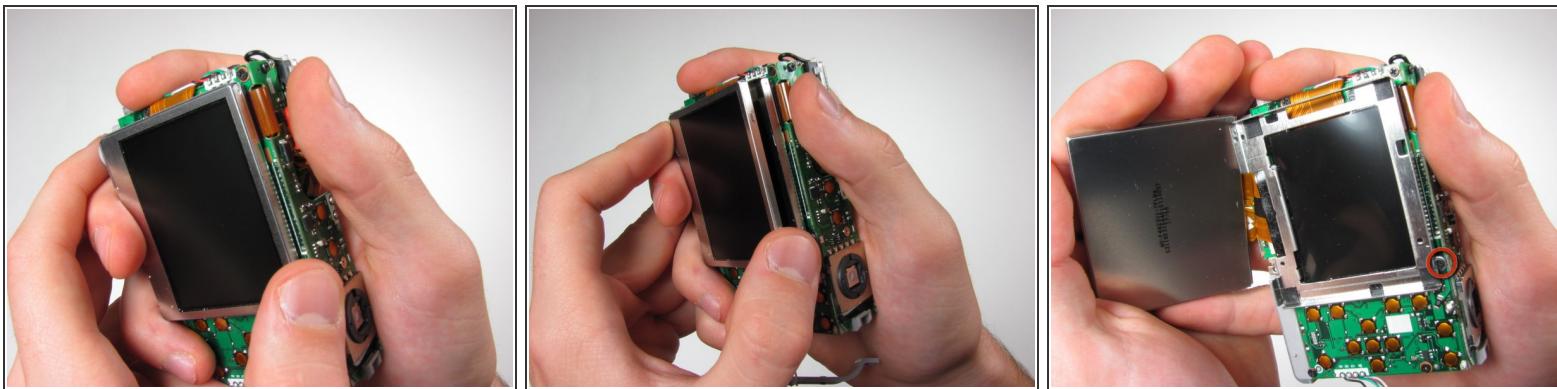


- Grasp lower right side of LCD screen.
- Gently lift the screen out of its casing.
- Remove 3mm screw from LCD casing using #00 screwdriver.

## Step 7

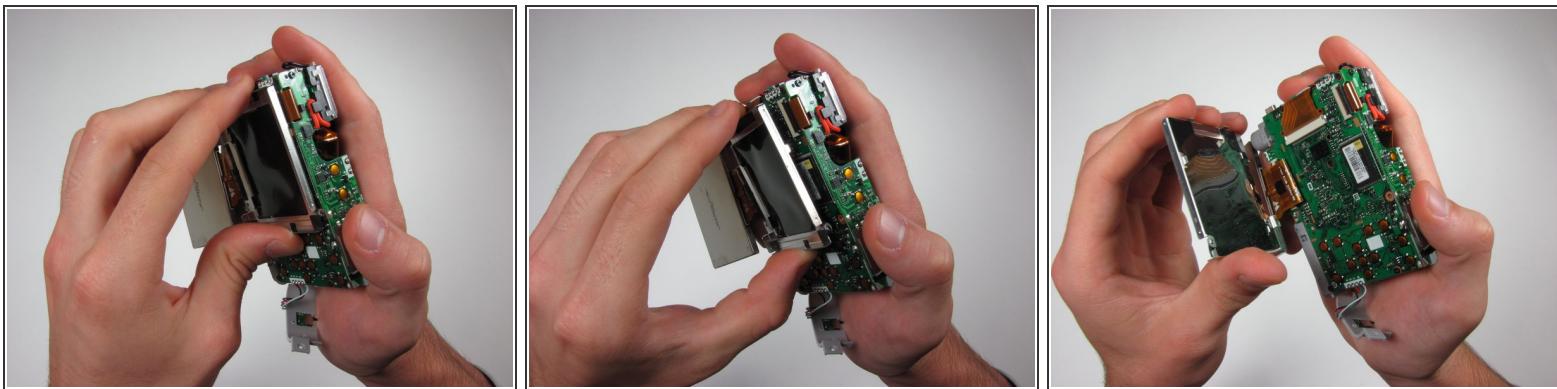

- Grab LCD casing.
- Remove it from camera.

## Step 8

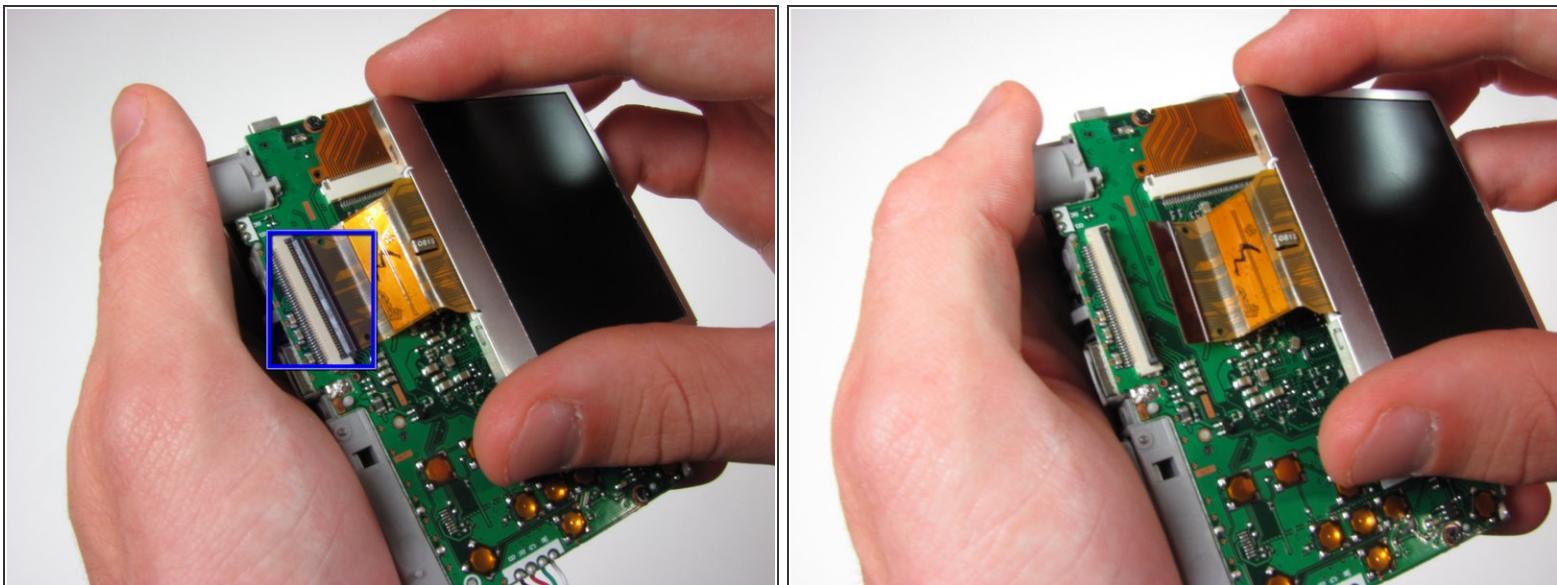

- Locate black tab connected to LCD ribbon.
- Lift black tab gently with one finger.
- Remove ribbon from beneath black tab.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-03 10:39:33 PM (MST).

