



# Kodak EasyShare C913 Memory Card Replacement

How to remove the memory card

Written By: Dustin Rodgers



# INTRODUCTION

Use this guide to remove the memory card

## Step 1 — Memory Card



- Position the camera with the bottom facing up.
- With your finger, slide the battery cover in the direction of open arrow.
- The battery cover will spring open so be careful to lift it up gently.

## Step 2



- Push down on the memory card and it will spring up.
- Grip and pull up the memory card to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-18 08:05:02 AM (MST).

