



# Kodak EasyShare CD82 LCD Display Screen Replacement

Step by step guide to remove and replace the LCD display screen for a Kodak EasyShare CD82.

Written By: oldturkey03



## INTRODUCTION

Use this guide to disassemble a Kodak EasyShare CD82, in order to remove and replace the LCD display screen.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)

## Step 1 — LCD Screen



- Remove the batteries and the memory card from the device.
- Remove the 2 screws located at the bottom of the device.

## Step 2




- Remove the 2 screws on the side, to the left of the camera lens.
- Remove the 2 screws on the side, to the right of the camera lens.
- Pry the casing from the device starting at the battery compartment and following the seem around the camera.

## Step 3





- Remove the front panel from the device first, then remove the back panel.
- Do not remove the LCD screen from the device once it becomes visible.

## Step 4

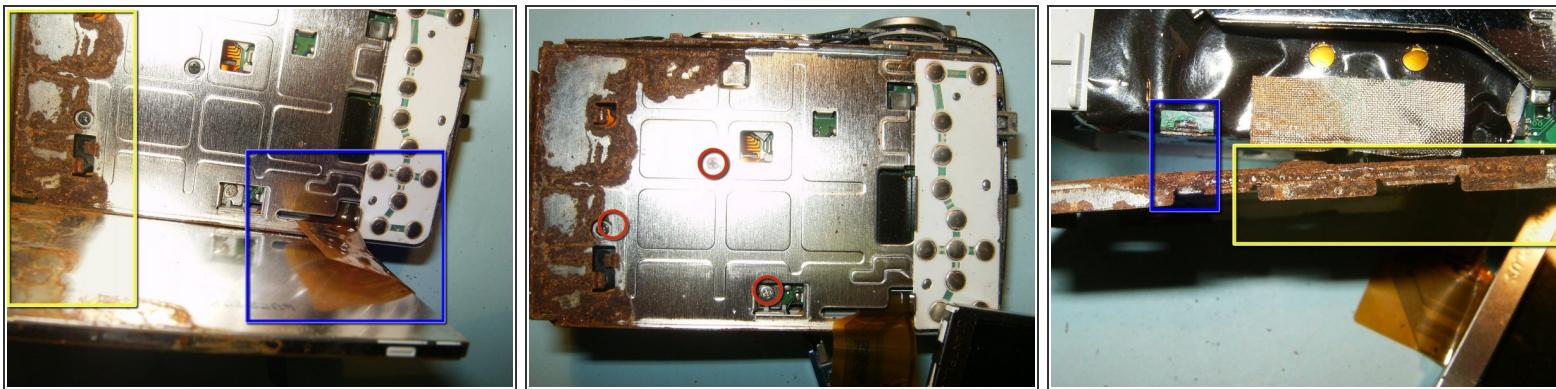


- Flip the LCD screen away from the top of the device to reveal the ribbon cable.
  - This is water damage the has afflicted the camera.
- Remove the 3 screws from the LCD screen holder.
- Pry the screen holder from the circuit board connector.

## Step 5

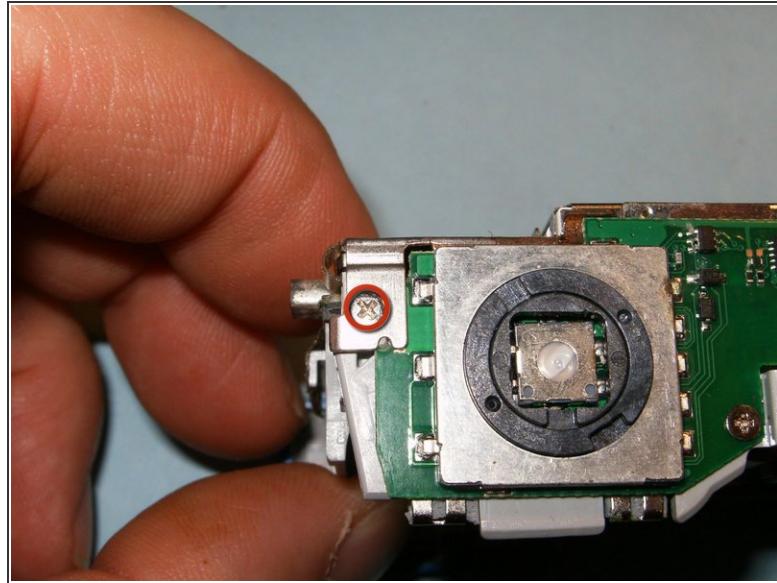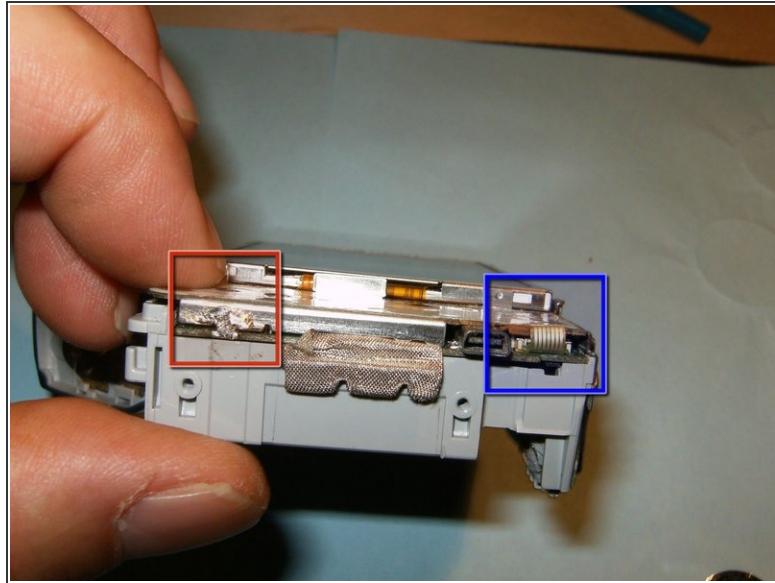

- Disconnect the logic board from the right side of the frame.
- Remove the small ribbon cable that is connecting the button panel to the logic board, using a small pair of tweezers or hemostat.
- Remove the screw on the top right side of the device.

## Step 6

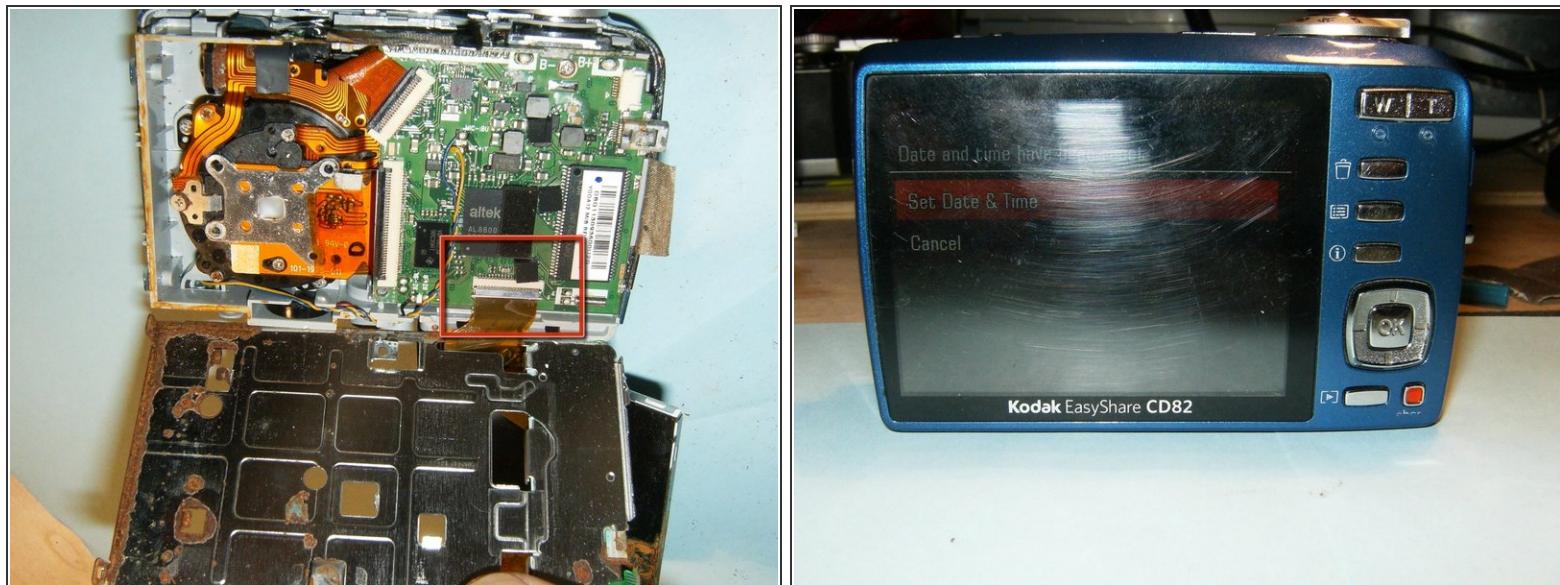

- Open the connector and move the black clip into the upward position, freeing the cable. Remove the LCD screen and the holder.
- *(i)* While the camera is disassembled, use isopropyl alcohol to remove rust and clean the device.
- Follow these steps in reverse order to reassemble. The device should be fully functional upon completion.

To reassemble your device, follow these instructions in reverse order.