


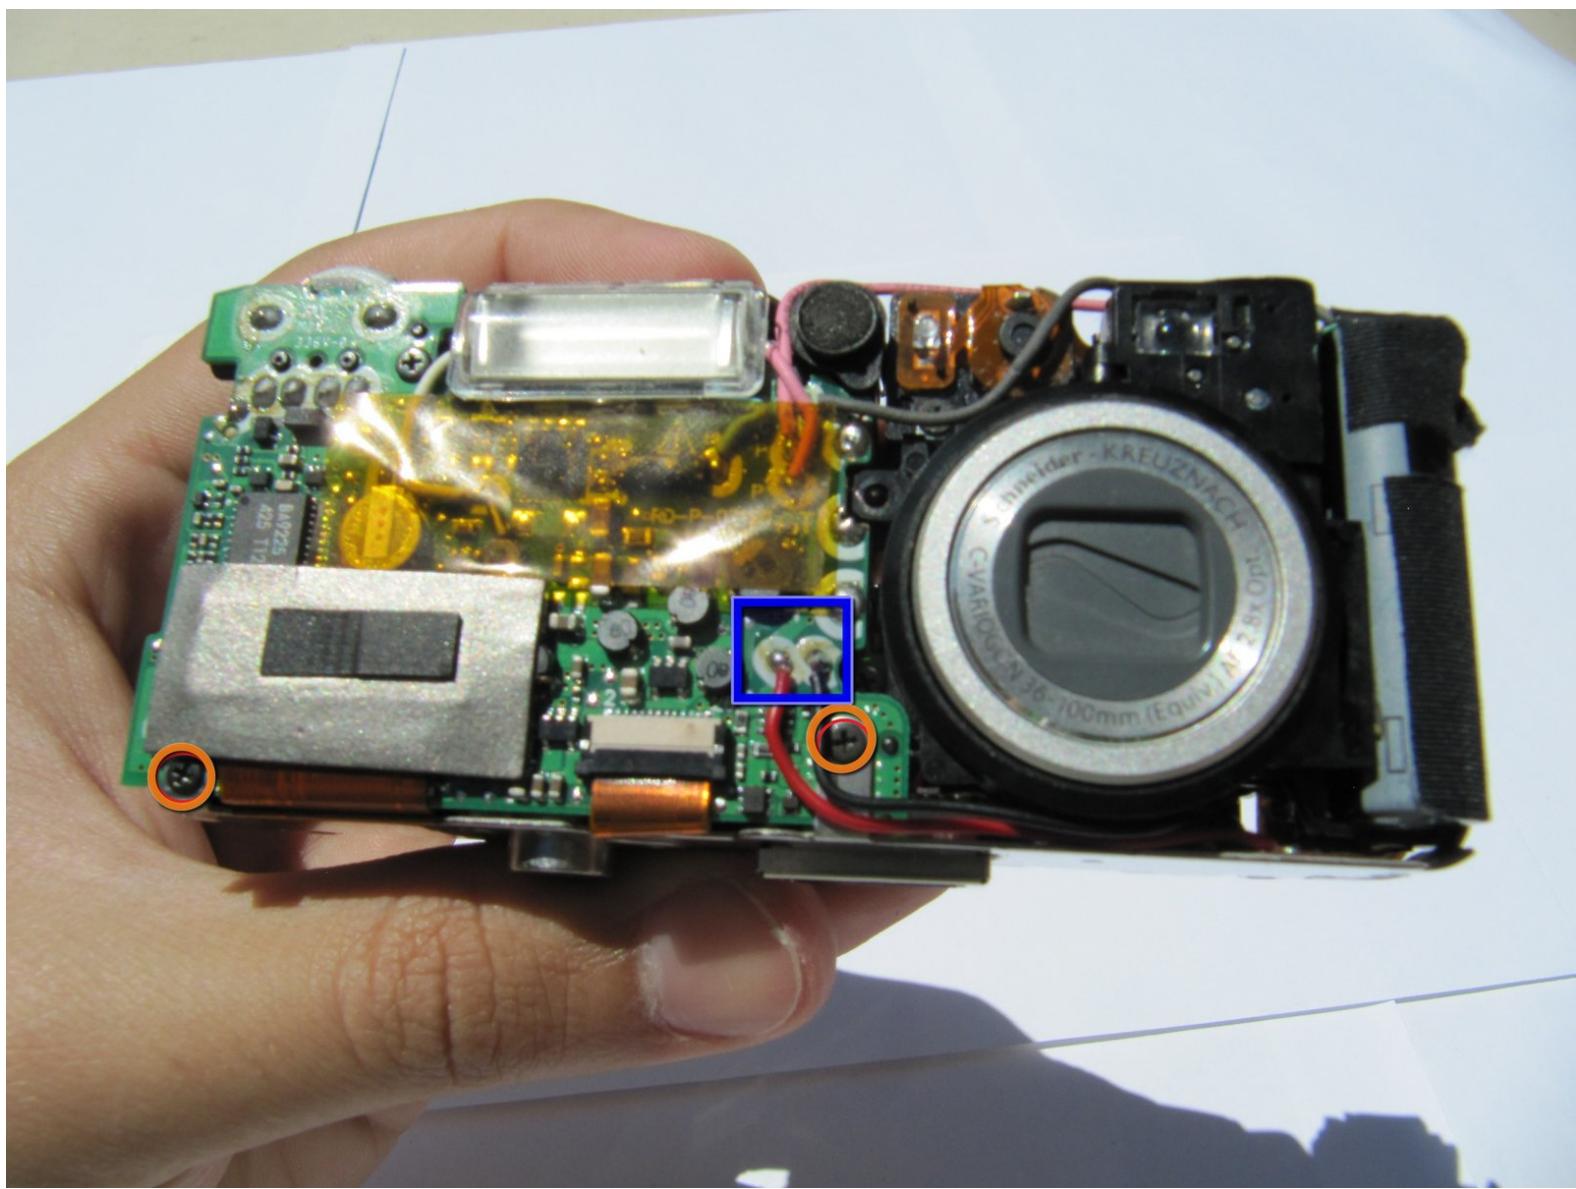

Kodak EasyShare LS743 Capacitor Replacement

Replace the capacitor in your Kodak EasyShare LS743.

Written By: Elizabeth Loui



INTRODUCTION

This will teach you how to remove the capacitor in your Kodak EasyShare LS743.

TOOLS:


- [Desoldering Braid](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Battery



- Open the battery cover.

Step 2

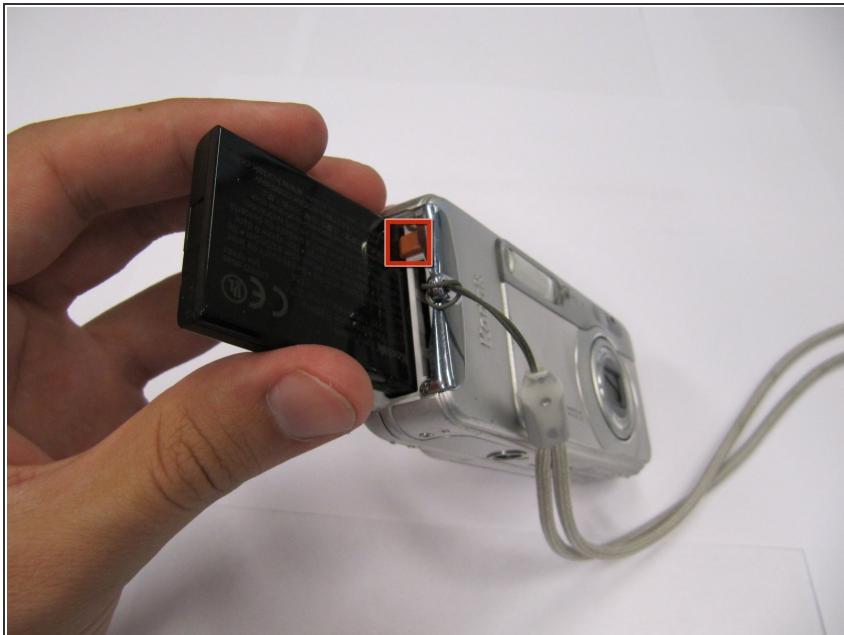


- Slide the orange latch sideways to eject the battery.
- Remove the battery.

Step 3 — Kodak EasyShare LS743 Camera Case Disassembly




- Remove 7 screws.
 - 1 (6.25 mm) screw located on the top right corner, next to the view screen.
 - 4 (4.45mm) screws on the bottom of the camera.
 - 2 (2.95mm) screws on the left side of the camera.

Step 4

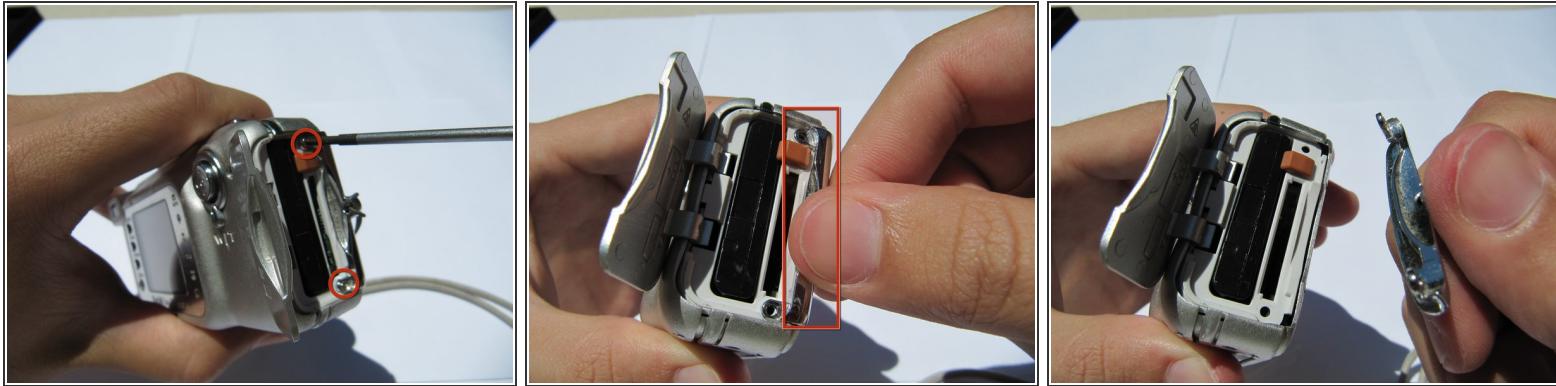




- There will be 2 (5.39mm) screws. Remove the screws in order to remove the lanyard.

Step 5

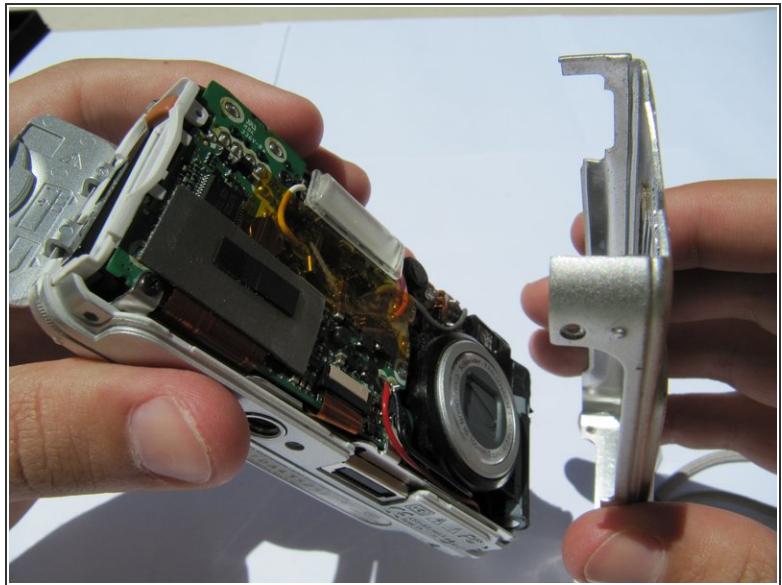

- Remove the rear camera casing.
- Remove the front casing.


Step 6 — Capacitor

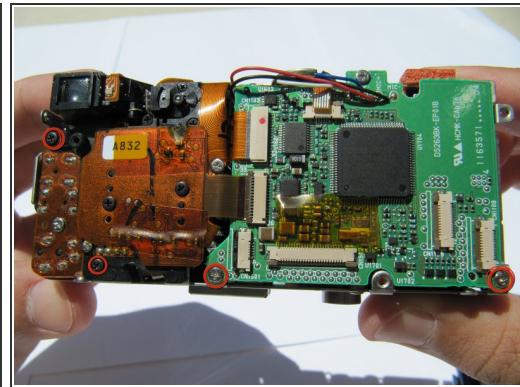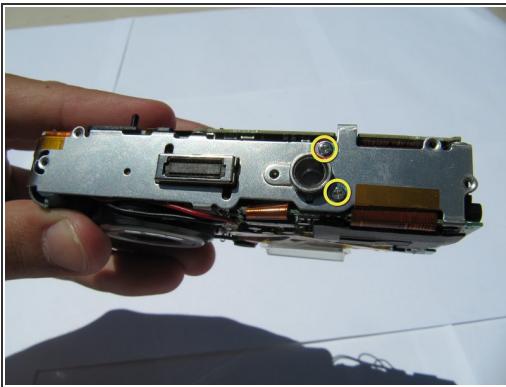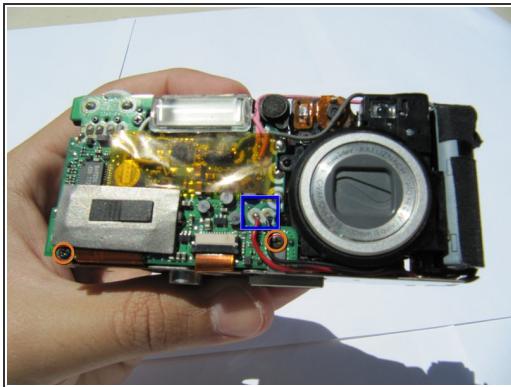

⚠ The capacitor can store electricity even when the camera is off! Do not touch it until you have safely discharged it.


- Connect the two capacitor wires briefly with a pair of metal tweezers to discharge it. You may see a small spark.
- Remove 8 screws.
 - 2 screws in the front (2X 4.31mm).
 - 2 screws on the bottom (2X3.30MM).
 - 4 screws in the back (3x 3.33mm, and 1x 4.34mm).

Step 7

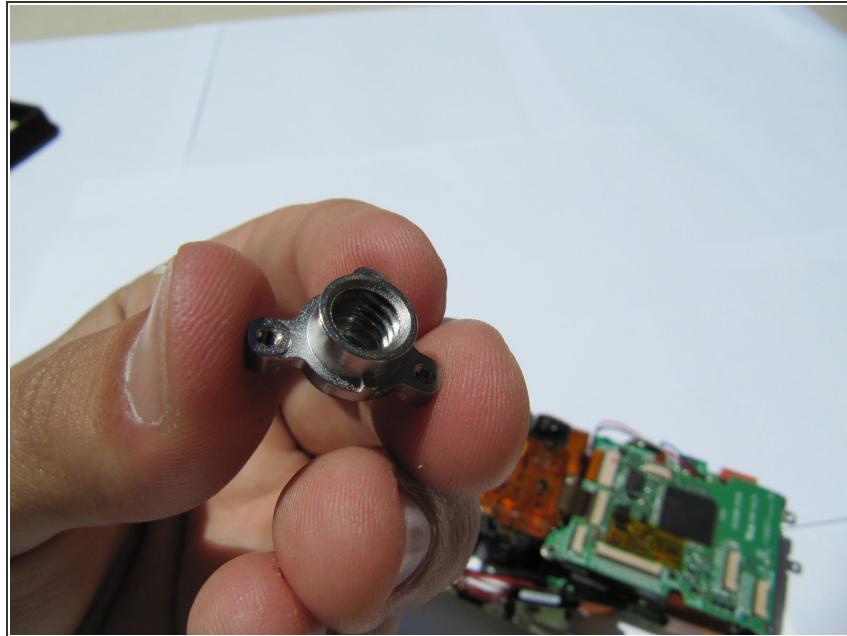


- Remove and set aside the tripod mount.

Step 8

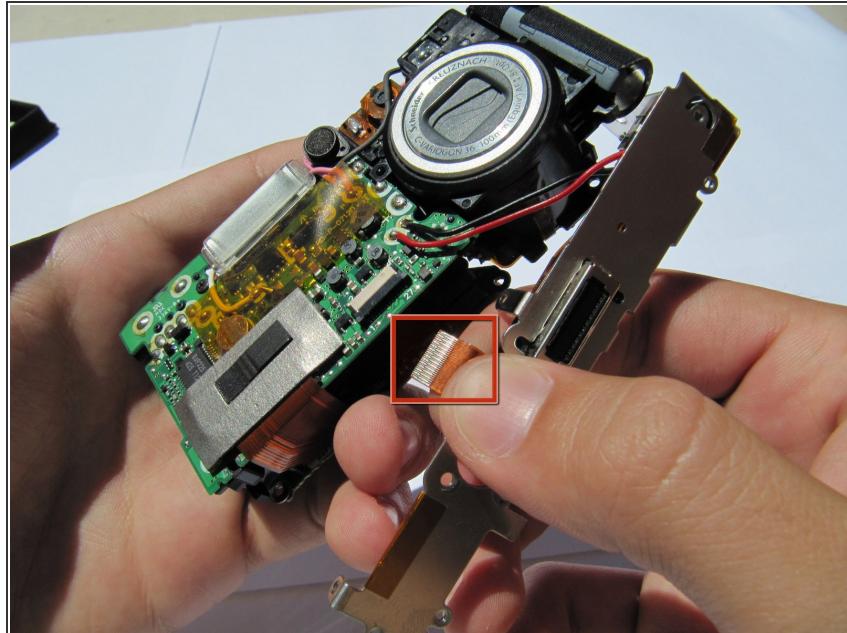



- Pull the black latch outward slightly to release the flex cable.
- Carefully disconnect the orange flex cable.

Step 9

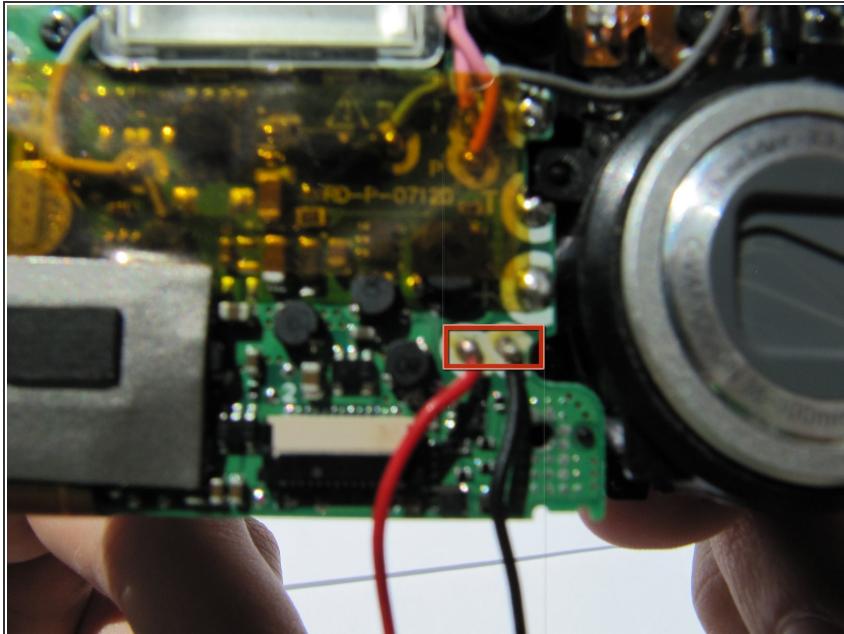

- Desolder both wires and remove them.

Step 10

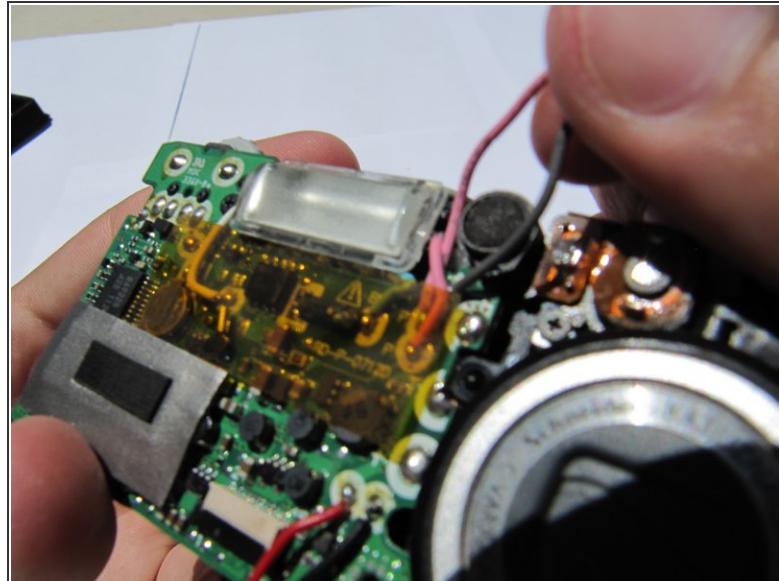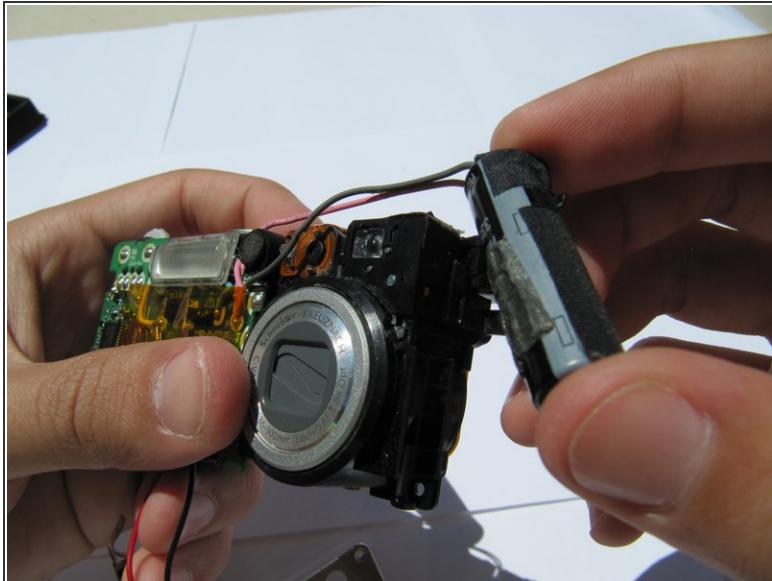

 Remove the capacitor (attached by adhesive) and desolder.

To reassemble your device, follow these instructions in reverse order.