




# Kodak EasyShare LS743 Lens Replacement

Removing and replacing the lens of the camera.

Written By: Elizabeth Loui

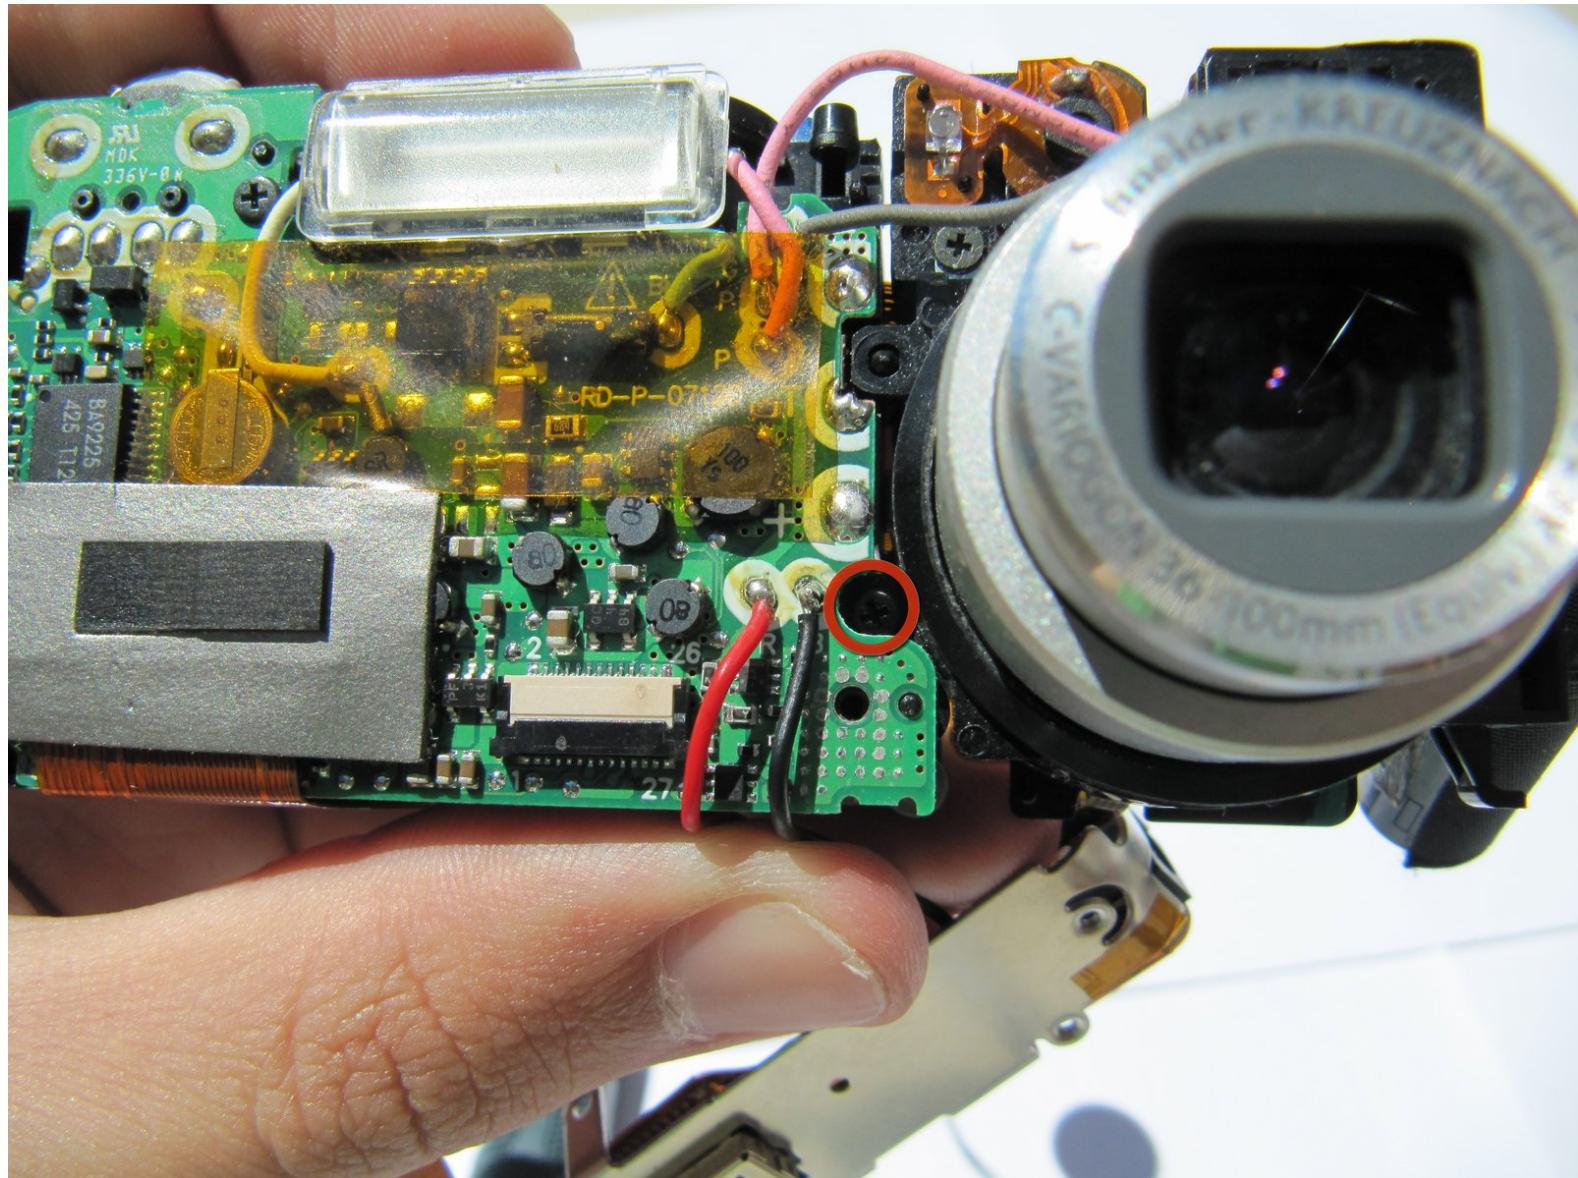

## INTRODUCTION

This will teach you how to remove the lens.

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Battery



- Open the battery cover.

## Step 2

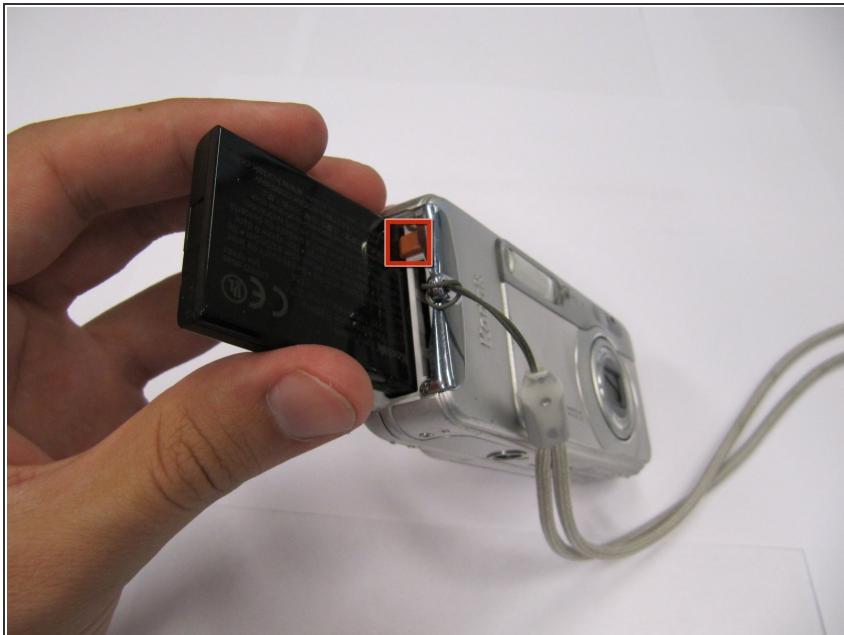


- Slide the orange latch sideways to eject the battery.
- Remove the battery.

## Step 3 — Kodak EasyShare LS743 Camera Case Disassembly




- Remove 7 screws.
  - 1 (6.25 mm) screw located on the top right corner, next to the view screen.
  - 4 (4.45mm) screws on the bottom of the camera.
  - 2 (2.95mm) screws on the left side of the camera.

## Step 4

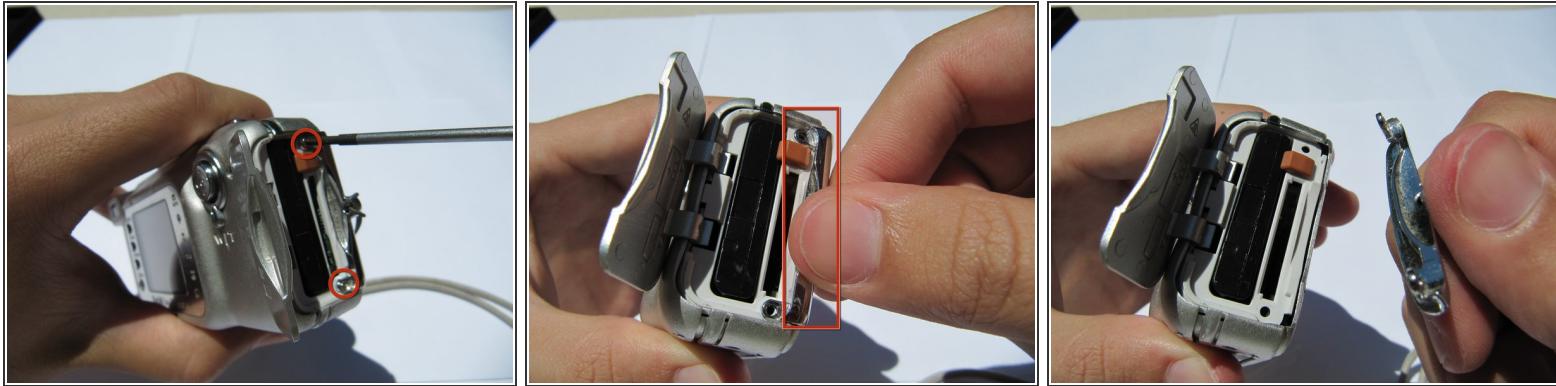



- There will be 2 (5.39mm) screws. Remove the screws in order to remove the lanyard.

## Step 5

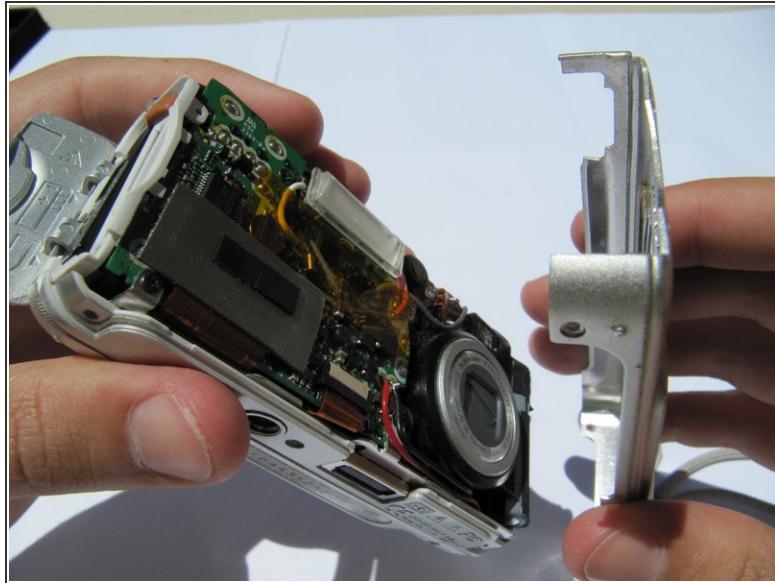

- Remove the rear camera casing.
- Remove the front casing.

## Step 6 — Top and menu buttons

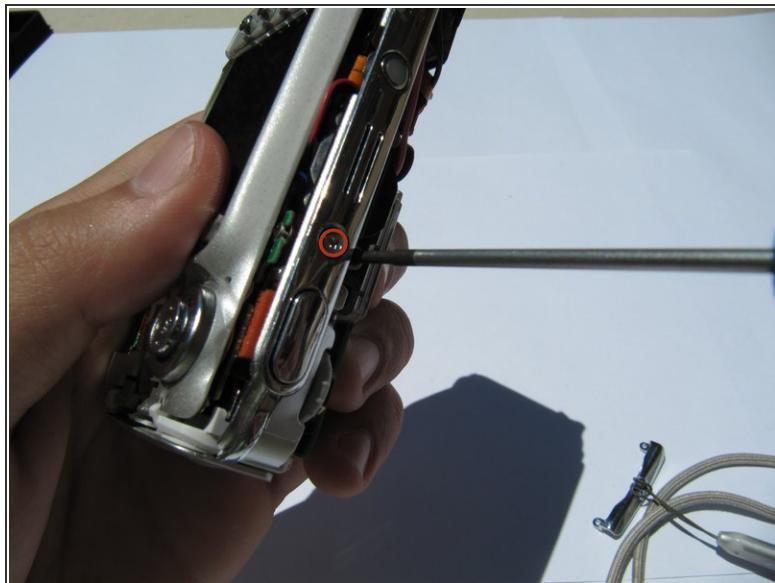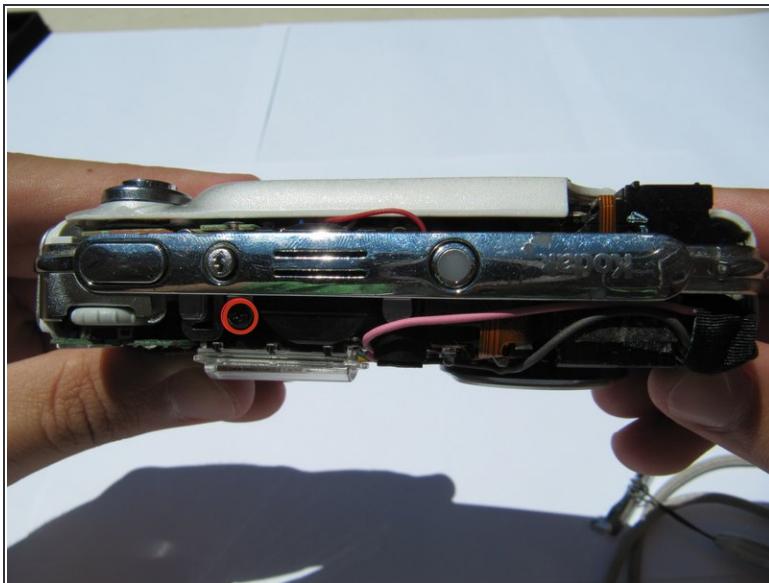

- Remove the top panel screw (1x 4.37mm).

## Step 7



- Remove the top panel.

## Step 8




- Remove the back panel screws (1x 3.33mm, and 1x 3.40mm).

## Step 9




- Separate the inner casing from the tripod mount.

## Step 10

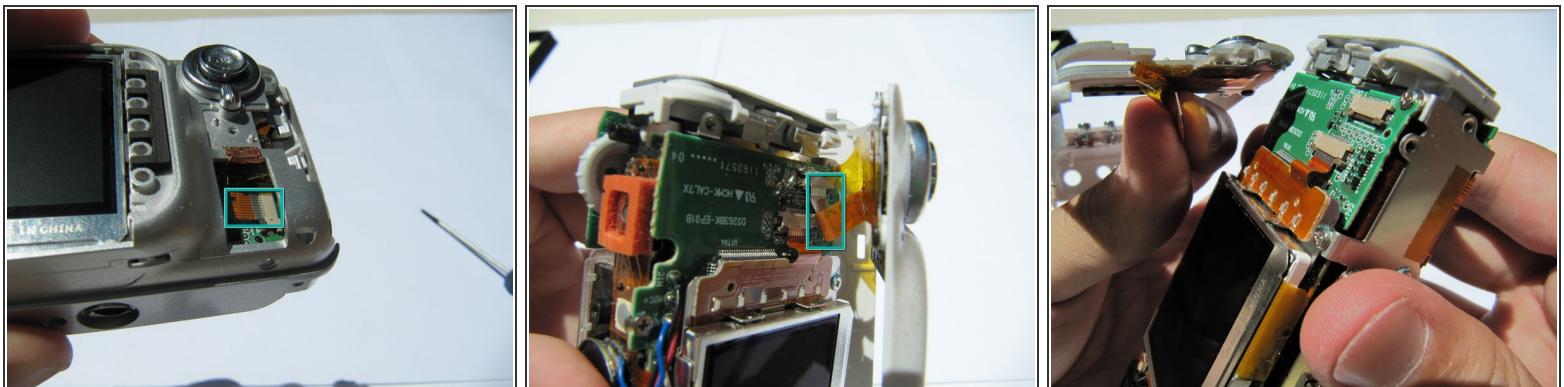


- Gently pull the orange tab out of the circuit board.

## Step 11

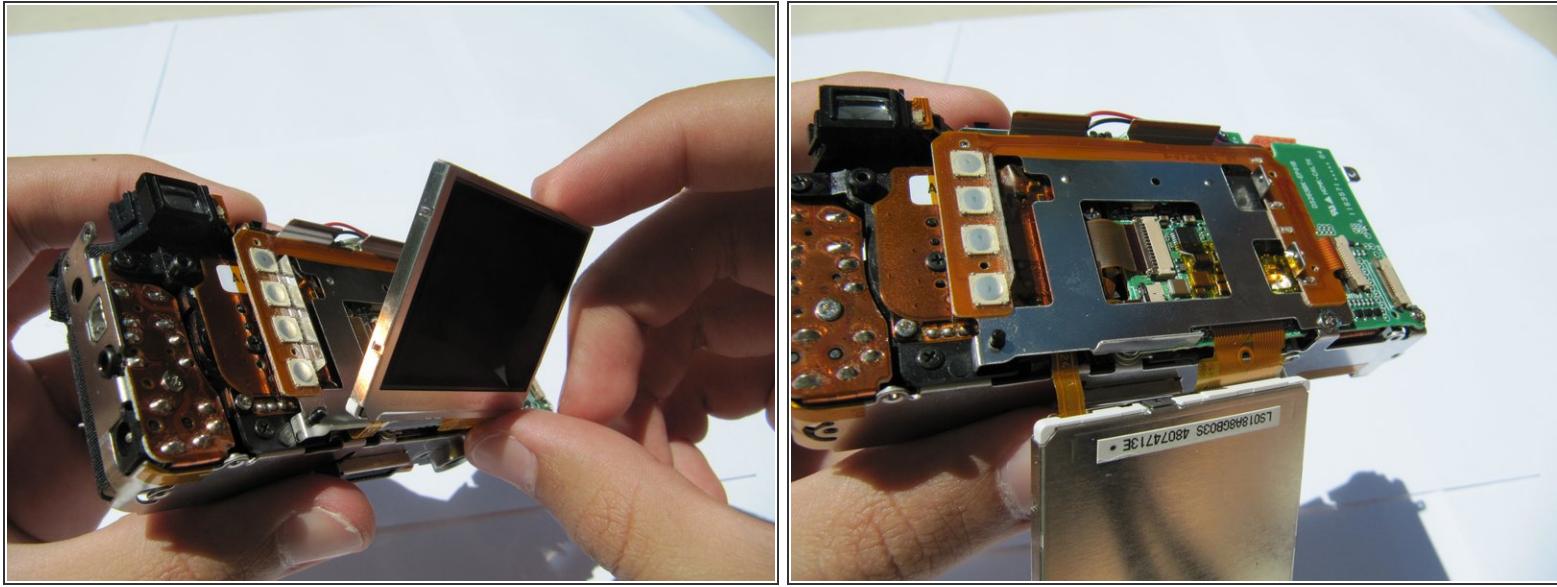


⚠ Carefully flip the LCD panel to expose the central circuit board.

## Step 12

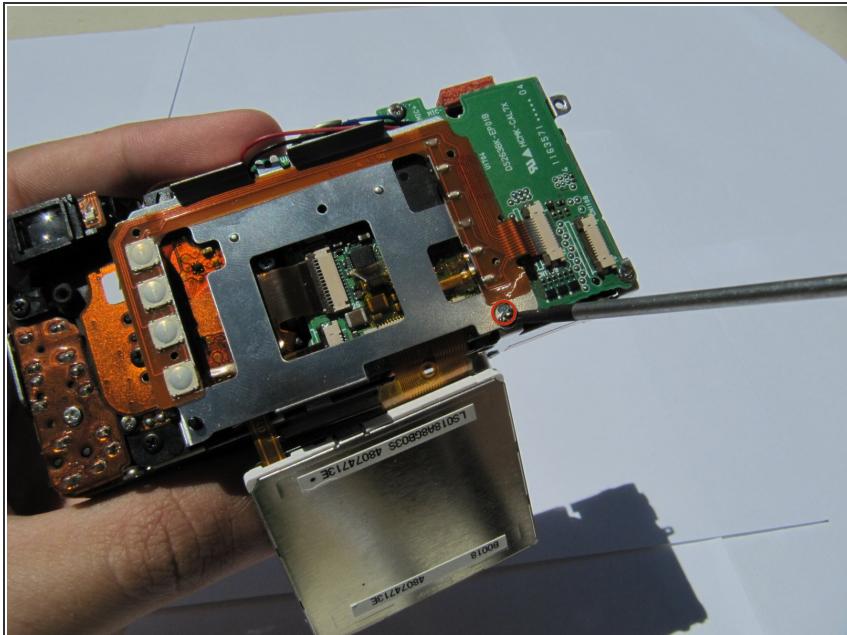


- Remove the (1x 3.33mm) screw from the menu button panel .

## Step 13

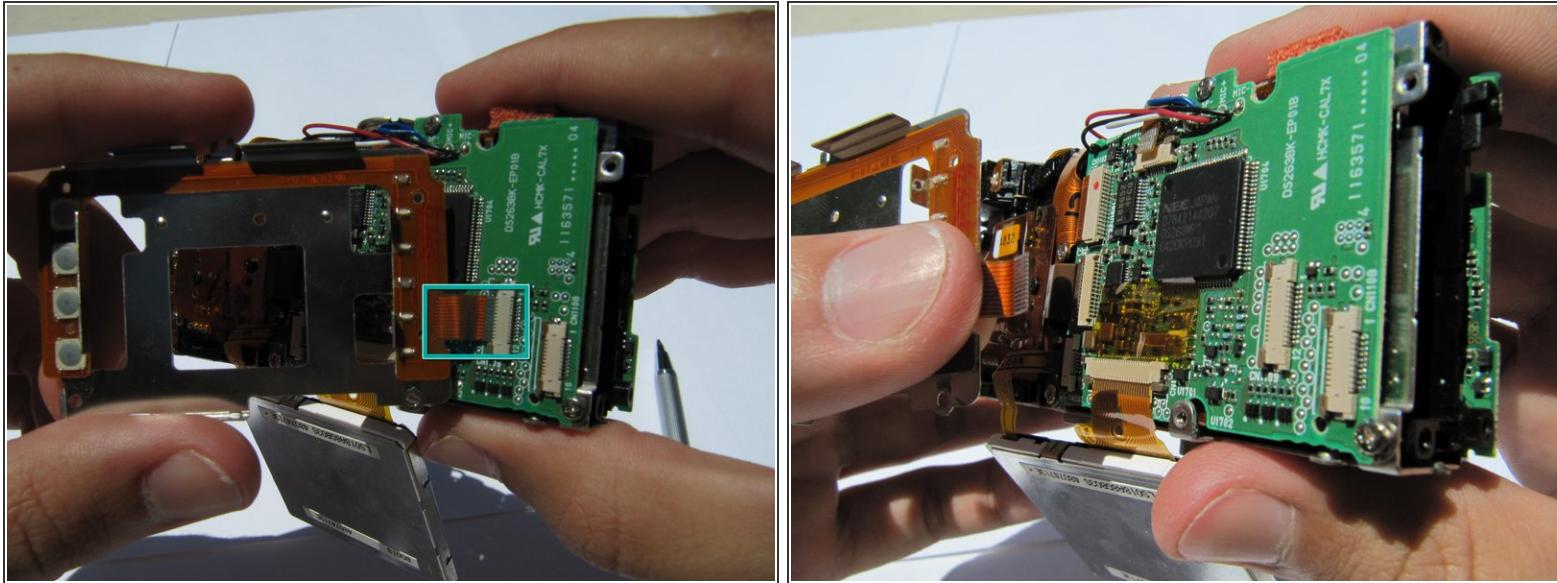


- Pull the second orange tab from the circuit board and remove the buttons.

## Step 14 — Removing LCD

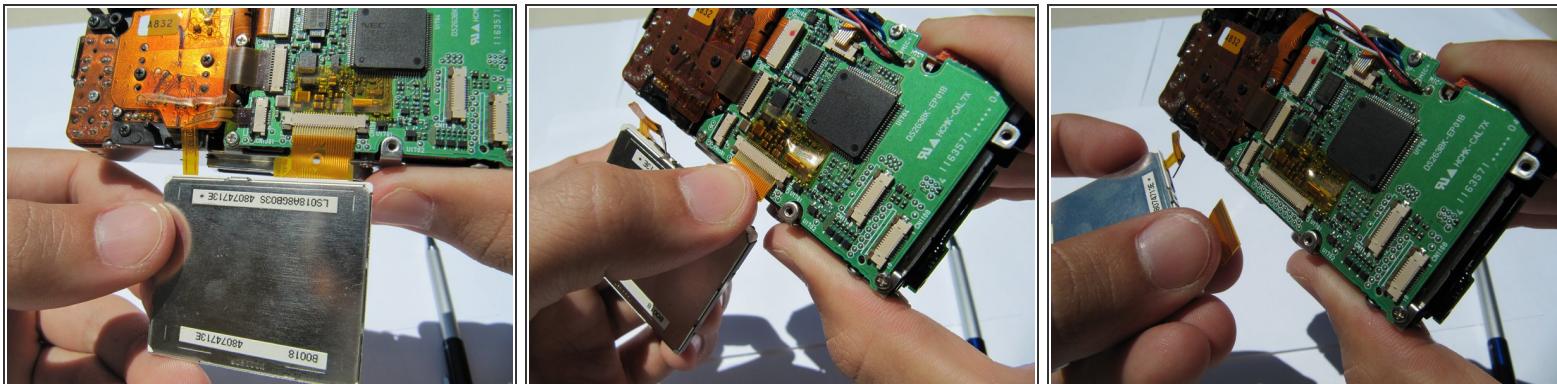

- Flip up the LCD screen to reveal the two orange ribbon cables.
- Disconnect the two ribbon cables from their sockets on the motherboard.


## Step 15 — Capacitor

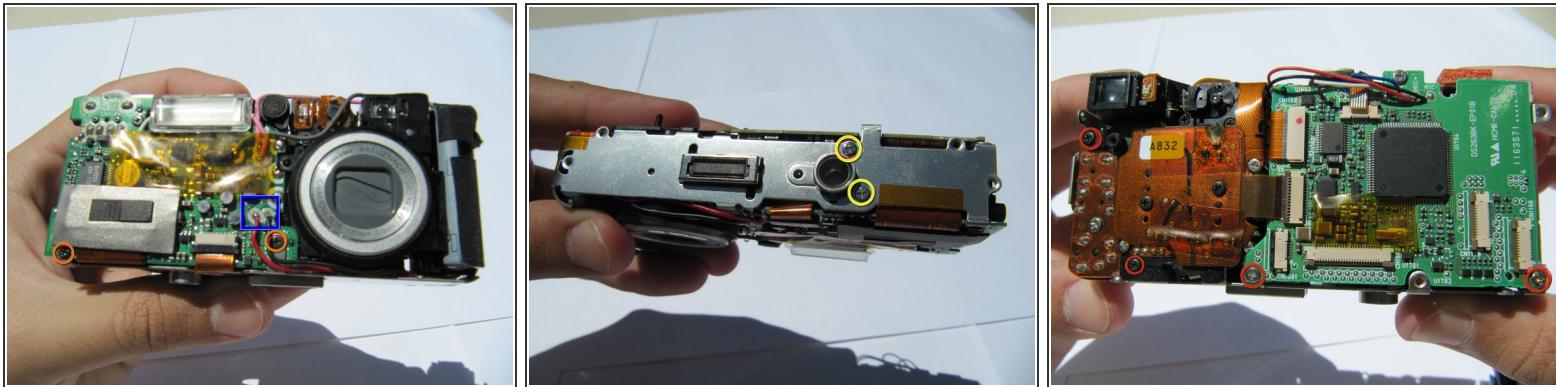

**⚠** The capacitor can store electricity even when the camera is off! Do not touch it until you have safely discharged it.


- Connect the two capacitor wires briefly with a pair of metal tweezers to discharge it. You may see a small spark.
- Remove 8 screws.
  - 2 screws in the front (2X 4.31mm).
  - 2 screws on the bottom (2X3.30MM).
  - 4 screws in the back (3x 3.33mm, and 1x 4.34mm).

## Step 16

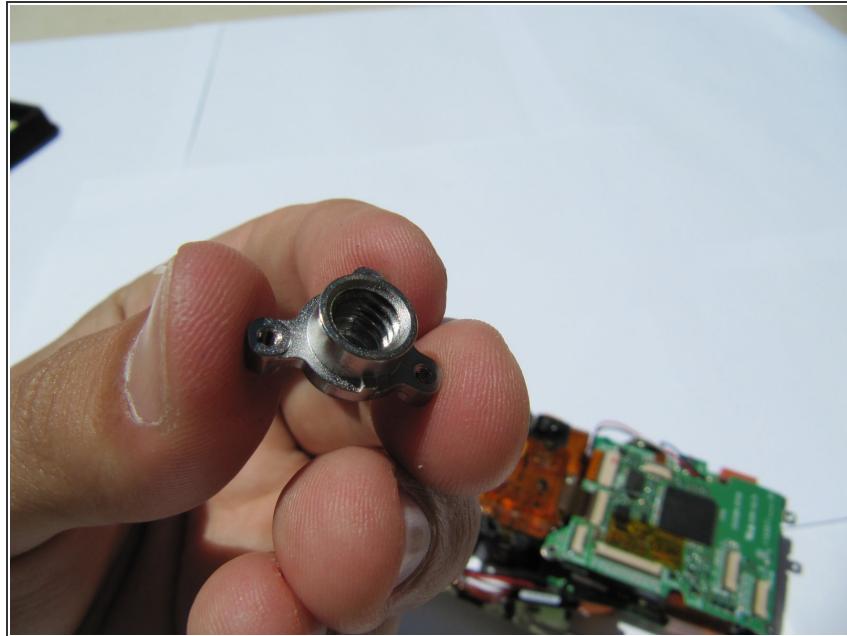


- Remove and set aside the tripod mount.

## Step 17

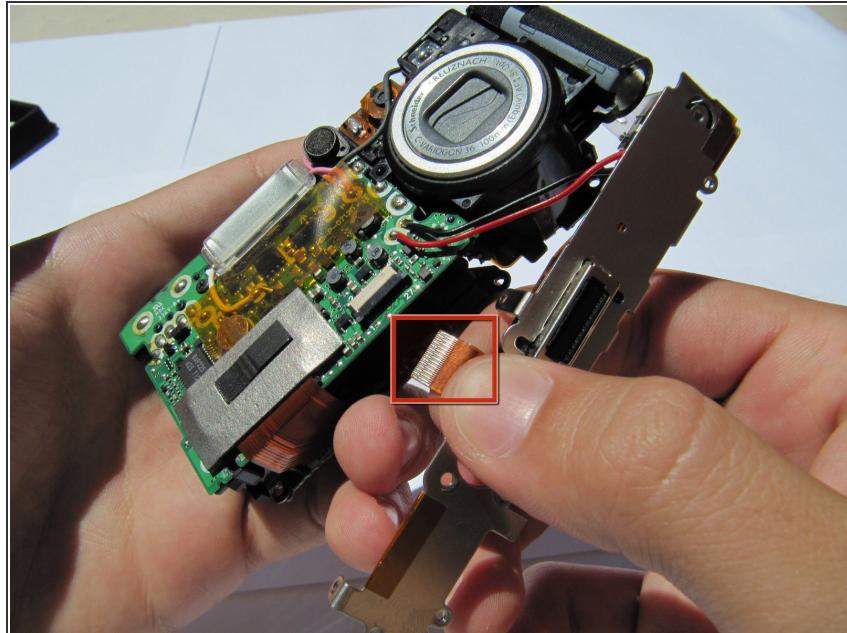



- Pull the black latch outward slightly to release the flex cable.
- Carefully disconnect the orange flex cable.

## Step 18

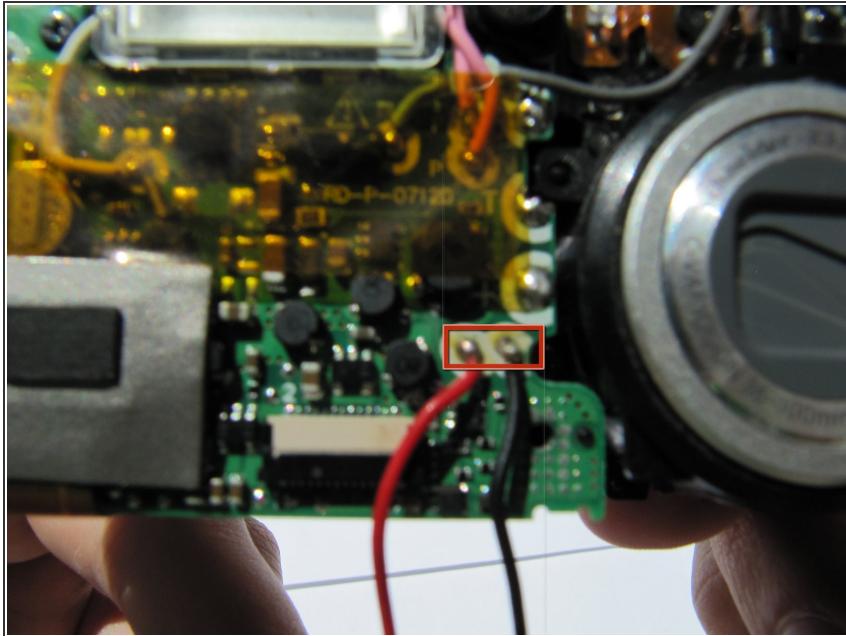



- Desolder both wires and remove them.

## Step 19

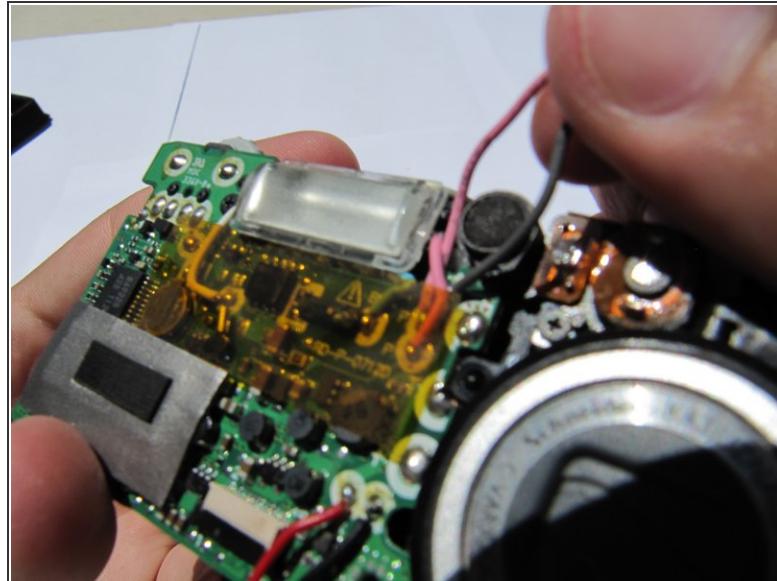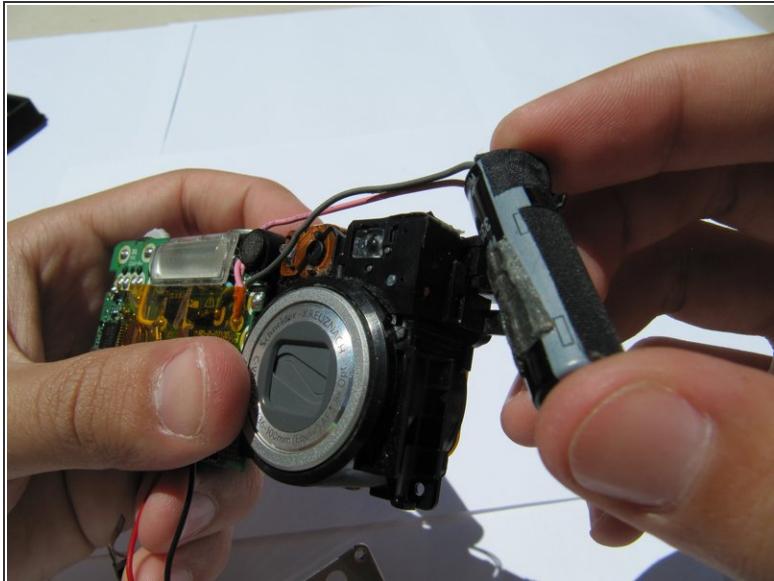



! Remove the capacitor (attached by adhesive) and desolder.

## Step 20 — Lens

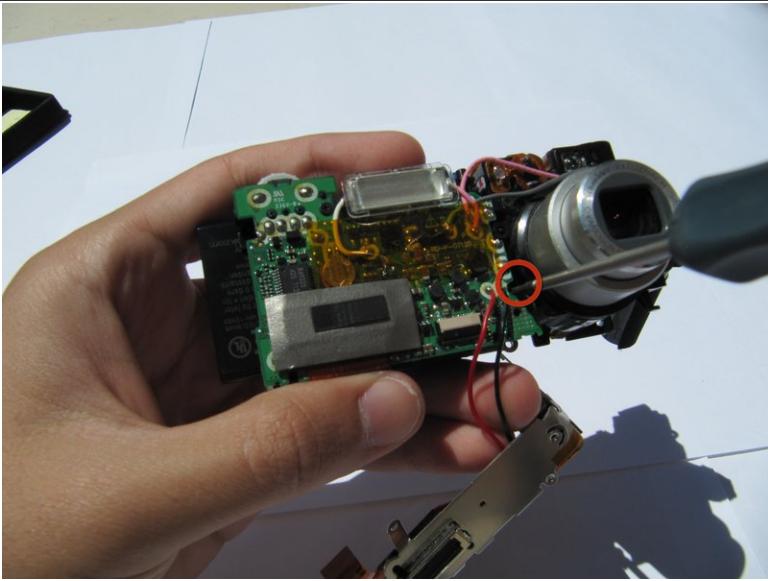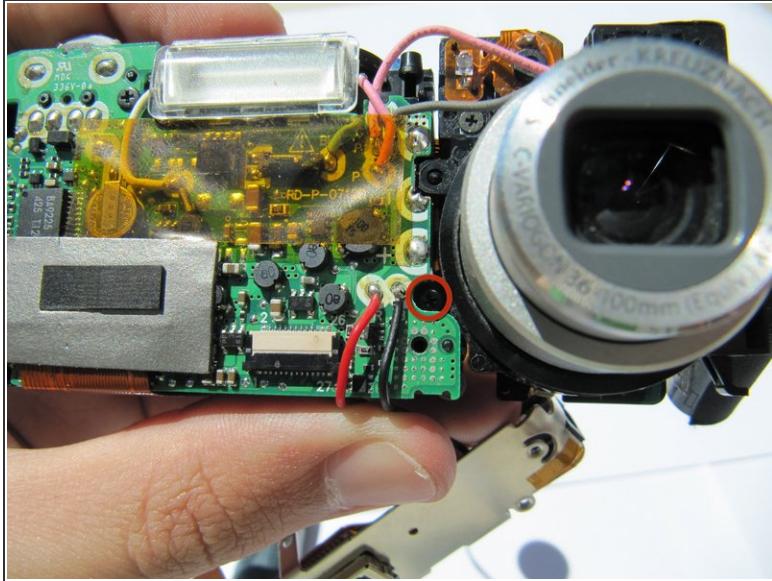

- Remove the (1x4.27) screw from the front of the camera.

## Step 21

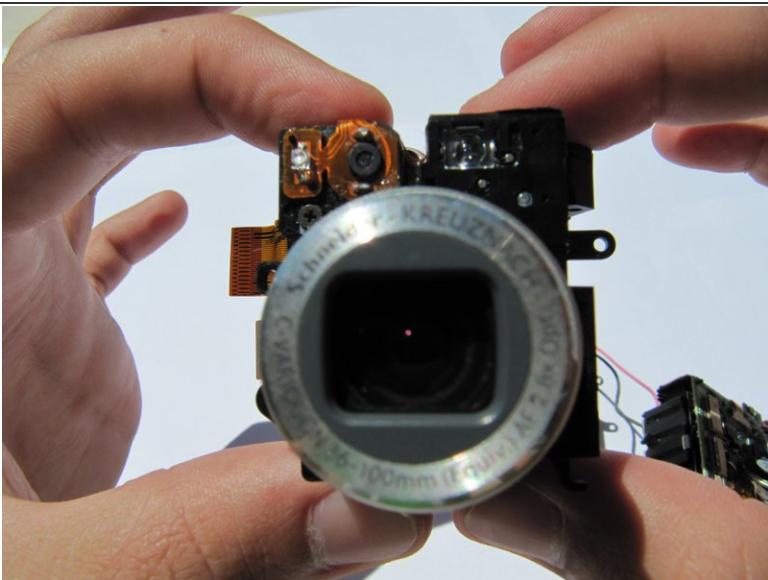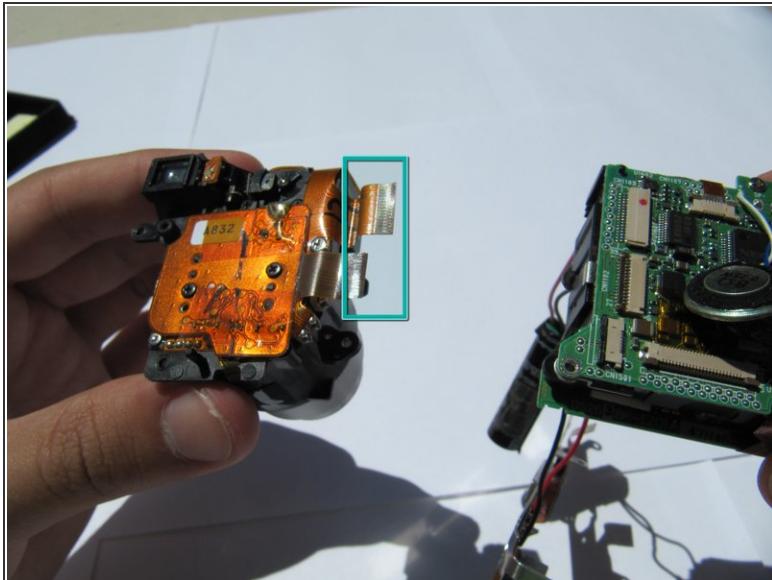

- Remove the orange tabs from the back of the camera to remove the lens.

To reassemble your device, follow these instructions in reverse order.